OPERATING AND SERVICE MANUAL

1607A
LOGIC STATE ANALYZER

HEWLETT hp PACKARD

HP 1607A

OPERATING AND SERVICE MANUAL

MODEL 1607A
LOGIC STATE ANALYZER
(Including Option 580)

SERIAL NUMBERS

This manual applies directly to instruments with serial numbers prefixed **1629A.**

With changes described in Section VII, this manual also applies to instruments with serial numbers prefixed **1510A** and **1530A.** For additional information about serial numbers, see INSTRUMENTS COVERED BY THIS MANUAL in Section I.

© COPYRIGHT HEWLETT-PACKARD COMPANY/COLORADO SPRINGS DIVISION 1978
1900 GARDEN OF THE GODS ROAD, COLORADO SPRINGS, COLORADO, U.S.A.

ALL RIGHTS RESERVED

Manual Part Number 01607-90905
Microfiche Part Number 01607-90805

PRINTED: JUNE 1978

SAFETY SUMMARY

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.

GROUND THE INSTRUMENT.

To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor ac power cable. The power cable must either be plugged into an approved three-contact electrical outlet or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground) at the power outlet. The power jack and mating plug of the power cable meet International Electrotechnical Commission (IEC) safety standards.

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE.

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

KEEP AWAY FROM LIVE CIRCUITS.

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power and discharge circuits before touching them.

DO NOT SERVICE OR ADJUST ALONE.

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT.

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the instrument. Return the instrument to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

DANGEROUS PROCEDURE WARNINGS.

Warnings, such as the example below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

WARNING

Dangerous voltages, capable of causing death, are present in this instrument. Use extreme caution when handling, testing, and adjusting.

TABLE OF CONTENTS

Section			Page
I	GENERAL INFORMATION		1-1
	1-1.	Introduction	1-1
	1-5.	Description	1-1
	1-13.	Accessories Supplied	1-1
	1-14.	Accessories Available	1-2
	1-15.	Options	1-2
	1-17.	Instruments Covered By Manual	1-2
II	INSTALLATION		2-1
	2-1.	Introduction	2-1
	2-3.	Initial Inspection	2-1
	2-6.	Preparation For Use	2-1
	2-7.	Power Requirements	2-1
	2-8.	Three-conductor Power Cable	2-1
	2-9.	Instrument Cooling	2-2
	2-10.	Claims	2-2
	2-12.	Repacking For Shipment	2-2
III	OPERATION		3-1
	3-1.	Introduction	3-1
	3-3.	Controls and Connectors	3-1
	3-5.	Clock, Data, and Qualifier Inputs	3-1
	3-7.	Triggering Requirements	3-1
	3-9.	Sample Modes	3-1
	3-11.	Trigger Modes	3-1
	3-12.	Start Display	3-1
	3-13.	End Display	3-1
	3-14.	Delay	3-1
	3-15.	Norm/Arm	3-1
	3-16.	Local/Bus	3-4
	3-17.	Qualifier Modes	3-4
	3-20.	Partial Displays	3-4
	3-23.	Pattern Trig Out/Delayed Trig Out	3-4
	3-25.	Display Features	3-4
	3-27.	Display Time	3-4
	3-28.	Column Blanking	3-4
	3-29.	Logic Neg/Pos	3-4
	3-30.	Byte 4 Bit/3 Bit	3-4
	3-31.	Bus Operation	3-4
	3-33.	Trigger Bus	3-5
	3-34.	I/O Bus	3-5
	3-38.	Turn-on Procedure	3-5
	3-40.	Operator's Checks and Adjustments	3-5
	3-42.	Operating Procedure	3-6
IV	PRINCIPLES OF OPERATION		4-1
	4-1.	Introduction	4-1
	4-4.	Basic Information	4-1
	4-6.	Logic States	4-1
	4-7.	Logic Circuitry	4-1
	4-8.	Mnemonics	4-1
	4-10.	Functional Description	4-1
	4-14.	Digital Delay and Trigger Generator	4-1
	4-17.	Data Index and Control	4-4
	4-20.	Display Cycle	4-4
	4-22.	Block Diagram	4-4
	4-24.	Data Acquisition Section	4-4
	4-39.	Display Section	4-10
	4-55.	Detailed Circuit Description	4-15
	4-57.	Trigger Bus	4-15
	4-62.	Display Qualifier	4-15
	4-66.	Delay Generator	4-17
	4-70.	Trigger Generator	4-17
	4-73.	Data Acquisition Synchronizer	4-17
	4-74.	Timing Generator	4-18
	4-78.	Memory/Multiplexer	4-18
	4-85.	Data Index and Control	4-18
	4-94.	Word Intensify Circuit	4-19
V	PERFORMANCE TESTS AND ADJUSTMENTS		5-1
	5-1.	Introduction	5-1
	5-3.	Recommended Test Equipment	5-1
	5-5.	Test Record	5-1
	5-7.	Performance Check	5-1
	5-9.	Test Connector	5-1
	5-10.	Operational Check	5-1
	5-11.	Input RC	5-4
	5-12.	Input Bias Current	5-4
	5-13.	Input Threshold, Minimum Input Swing	5-4
	5-14.	Setup and Hold Time	5-6
	5-15.	Repetition Rate	5-7
	5-16.	Minimum Clock and Data Pulse Widths	5-9
	5-17.	Trigger Arm Input	5-10
	5-18.	Pattern and Delayed Trigger Outputs	5-11
	5-19.	Display Outputs	5-13
	5-20.	Adjustment Procedures	5-14
	5-22.	+5 Volt Power Supply Adjustment	5-14
	5-23.	Character Size Adjustment	5-14
	5-24.	Timing Adjustments	5-15
	5-25.	Customer Modifications	5-17
VI	REPLACEABLE PARTS		6-1
	6-1.	Introduction	6-1
	6-3.	Ordering Information	6-1
VII	MANUAL CHANGES		7-1
	7-1.	Introduction	7-1
	7-3.	Manual Changes	7-1
	7-5.	Manual Changes Listing	7-1

TABLE OF CONTENTS (Cont'd)

Section		Page
VIII	SCHEMATICS AND TROUBLESHOOTING	8-1
8-1.	Introduction	8-1
8-3.	Schematics	8-1
8-8.	Reference Designations	8-1
8-12.	Component Locations	8-1
8-14.	Repair and Replacement	8-1
8-16.	Mechanical Disassembly and Board Replacement	8-1
8-22.	Servicing Circuit Boards	8-6
8-23.	Semiconductor Replacement	8-6
8-24.	Integrated Circuit Handling	8-6
8-25.	Integrated Circuit Replacement	8-6
8-28.	Troubleshooting	8-6
8-31.	DC Voltages	8-7
8-32.	Waveforms	8-7
8-33.	Test Points	8-7
8-34.	Fault Isolation	8-7

LIST OF ILLUSTRATIONS

Figure	Title	Page
1-1.	Model 1607A Logic State Analyzer	1-0
2-1.	Line Voltage Selection	2-1
2-2.	Power Receptacles	2-1
3-1.	Front- and Rear-panel Controls, Connectors, and Indicators	3-2
3-2.	Model 1607A Operating Procedure	3-7
4-1.	Functional Sequence of Events	4-2
4-2.	Digital Delay/Trigger Generator Algorithm	4-3
4-3.	Data Index and Control Algorithm	4-5
4-4.	Display Algorithm	4-6
4-5.	Data Input, Temporary Storage, and Pattern Recognition	4-7
4-6.	Digital Delay/Trigger Generator Block Diagram	4-8
4-7.	Memory and Data Index/Control Block Diagram	4-9
4-8.	Display Reset and Control Block Diagram	4-11
4-9.	Clock Generator and Analog Circuit Block Diagram	4-12
4-10.	Blanking Block Diagram	4-13
4-11.	Trigger Bus Simplified Schematic	4-14
4-12.	Trigger Bus Timing Diagram	4-15
4-13.	Simplified Display Qualifier Circuit	4-16
4-14.	Data Index and Control Reset Timing Diagram	4-19
5-1.	50-ohm Test Connector	5-1
5-2.	Operational Test Setup	5-2
5-3.	Input Threshold, Minimum Input Swing	5-5
5-4.	Setup and Hold Time Test Setup	5-7
5-5.	Repetition Rate Test Setup	5-8
5-6.	Minimum Clock and Data Pulse Width Test Setup	5-9
5-7.	Trigger Arm Input	5-10
5-8.	Pattern and Delayed Trigger Outputs Test Setup	5-12
5-9.	Timing Adjustment Setup	5-15
5-10.	Timing Adjustment Waveforms	5-16
5-11.	Reset Modification Location	5-17
5-12.	Adjustment Locations	5-19
6-1.	Illustrated Parts Breakdown	6-2
7-1.	Figure 8-14 Replacement	7-3
7-2.	Schematic 10 Replacement	7-3
7-3.	Schematic 12 Replacement	7-4
7-4.	Schematic 14 Changes	7-4
7-5.	Circuit Modifications for Change 2	7-5
7-6.	Circuit Modifications for Change 3	7-5
8-1.	Semiconductor Terminal Identification	8-4
8-2.	Ribbon Connector Pin Identification	8-5
8-3.	Troubleshooting Charts	8-8
8-4.	Model 1607A Block Diagram	8-11
8-5.	Schematic 1, Model 1607A Interconnection Diagram	8-13
8-6.	Schematic 2, Low Voltage Power Distribution, Assembly A3	8-14
8-7.	Schematic 3, Data Input and Threshold, P/O Assembly A1	8-18
8-8.	Schematic 4, Trigger Word Select, P/O Assembly A1 and Assembly A4	8-20
8-9.	Schematic 5, Temporary Storage and Pattern Recognition, P/O Assembly A1	8-22
8-10.	Schematic 6, Digital Delay and Trigger Generator, P/O Assembly A1 and Assembly A7	8-24
8-11.	Schematic 7, Timing Generator, P/O Assembly A1	8-26
8-12.	Schematic 8, Memory/Multiplier, P/O Assembly A1	8-28
8-13.	Schematic 9, Memory Index and Control, P/O Assembly A1	8-30
8-14.	Schematic 10, Indicator Light Control and Trigger Mode Switches, P/O Assemblies A1 and A2	8-32

LIST OF ILLUSTRATIONS (Cont'd)

Figure	Title	Page
8-15.	Schematic 11, Word Intensity, P/O Assembly A1	8-34
8-16.	Schematic 12, Display Control and Reset, P/O Assembly A2	8-36
8-17.	Schematic 13, Clock Generator and Analog Output, P/O Assembly A2	8-38
8-18.	Schematic 14, Blanking, P/O Assembly A2	8-40
8-19.	Schematic 15, I/O Port J5	8-42
8-20.	Integrated Circuit (IC) Identification	8-43

LIST OF TABLES

Table	Title	Page
1-1.	Specifications	1-2
4-1.	Model 1607A Mnemonics	4-20
5-1.	Recommended Test Equipment	5-3
6-1.	Abbreviations for Replaceable Parts List	6-1
6-2.	Replaceable Parts	6-5
6-3.	List of Manufacturers' Codes	6-13
7-1.	Manual Changes	7-1
8-1.	Schematic Notes	8-2
8-2.	Logic Symbols	8-3

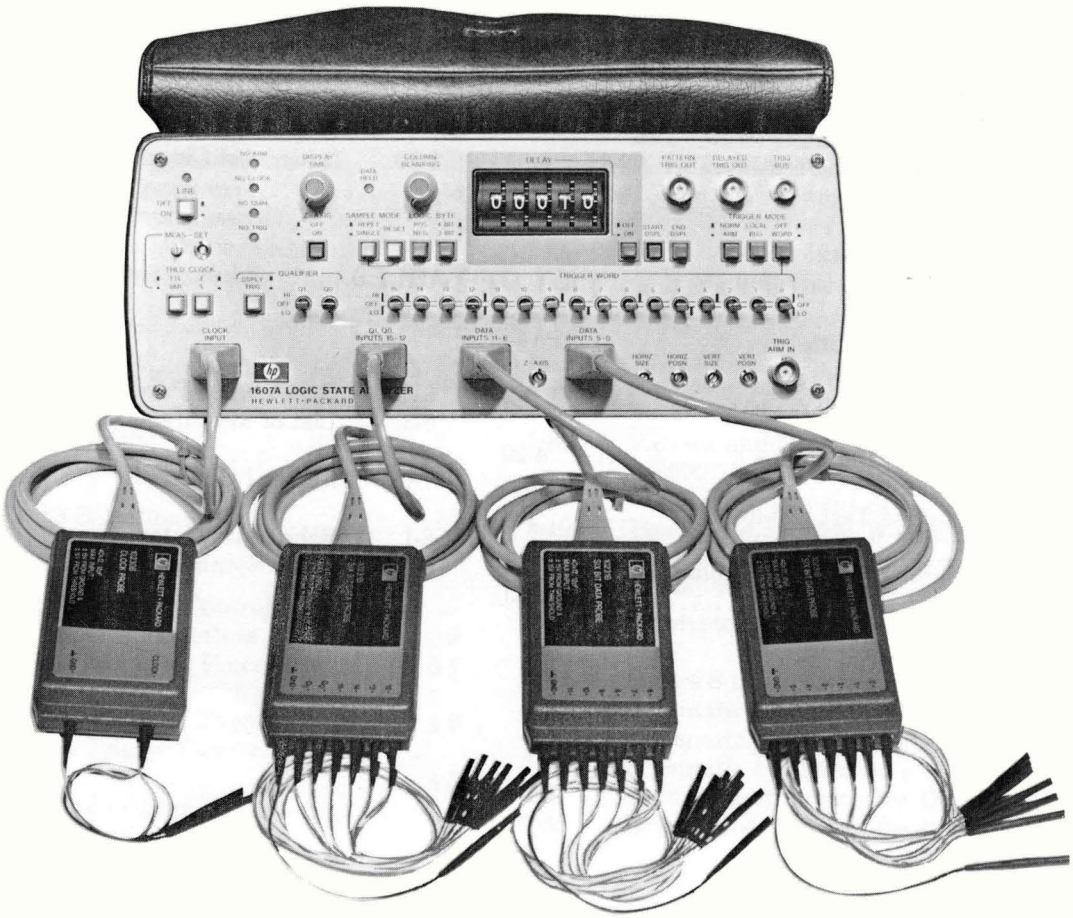

Figure 1-1. Model 1607A Logic State Analyzer

SECTION I

GENERAL INFORMATION

1-1. INTRODUCTION.

1-2. This Operating and Service Manual contains information required to install, operate, test, adjust, and service the Hewlett-Packard Model 1607A Logic State Analyzer (figure 1-1).

1-3. This section of the manual provides brief descriptive information on the instrument, accessories, and manual. Instrument specifications are listed in table 1-1. These specifications are the performance standards or limits against which the instrument is tested.

1-4. On the title page of this manual, below the manual part number, is a "Microfiche" part number. This number can be used to order 4-by 6-inch microfilm transparencies of the manual. The microfiche package also includes the latest Manual Changes supplement.

1-5. DESCRIPTION.

1-6. The Model 1607A Logic State Analyzer is designed to aid in the analysis of digital systems that depend on sequences of logic states to control their operation. The Model 1607A provides horizontal, vertical and Z-axis signals that, when connected to the external horizontal, vertical and Z-axis inputs of an oscilloscope, convert the oscilloscope into a 16-channel logic state analyzer. The Model 1607A has vernier size and position controls with sufficient range to make interfacing possible with almost any display or oscilloscope. Display parameters required for interfacing with a Model 1607A are listed in table 1-1.

1-7. The Model 1607A can be operated with a Model 1600A Logic State Analyzer to form a 32-channel logic analyzer. The combined instruments permit analysis of machines using 32-bit word formats or dual-clock machines.

1-8. Data is synchronously loaded into the Model 1607A by the transition of the clock input corresponding to the clock slope selected. The Model 1607A will accept any convenient clock signal, such as a handshake signal on a data bus or other strobe or command lines, up to a 20-MHz rate. The Model 1607A has both a fixed TTL threshold and variable threshold selection, giving the Model 1607A the capability of interfacing with most logic families.

1-9. The Model 1607A provides a functional display of ones and zeros in tabular format of logic states at up to 16 variables in a digital system. Tabular data is displayed in a 16-word table of 16-bit words. A preset trigger word set on front-panel switches controls the reference of the sixteen-word display window to the input data stream. Depending on the sample mode selected, the display starts at the trigger word, ends at the trigger word (negative-time data capture), or is delayed up to 99 999 qualified input clock pulses after the trigger word.

1-10. During repetitive operation, the display is periodically updated by incoming data. To monitor infrequent or one-time-only events, the display can be set to a single-shot mode (SGL). In this mode, gathered data is retained and displayed until manually reset.

1-11. The Model 1607A has two qualifier channels that can function in either a trigger-qualified mode (TRIG) or a display-qualified mode (DSPLY). Trigger qualification allows the two qualifier channels to be used as additional undisplayed data channels, providing an 18-bit trigger word. Display qualification allows selective viewing of data by storing and displaying only those data words that occur on clock edges when qualifier conditions are true.

1-12. Other features of the Model 1607A include:

a. a trigger-arming circuit that increases triggering capability;

b. a partial-display mode to permit data to be displayed as it is single-stepped into the Model 1607A;

c. arrangement of the displayed words in bytes of three bits each (octal format) or in bytes of four bits each (hexadecimal or BCD format);

d. intensification of the trigger word;

e. the capability of blanking unrequired columns of bits, starting with the leftmost column;

f. two front-panel trigger outputs; one generated when the selected trigger word is detected, and the other generated when the delay is complete.

1-13. ACCESSORIES SUPPLIED. One Model 10230C Clock Probe and three Model 10231C Six Bit Data probes are supplied with the Model 1607A. The Model 10230C and Model 10231C are active probes providing compatible TTL (transistor-transistor logic) clock and data signals to the Model 1607A. Probe operating power is supplied by the Model 1607A. The probes connect to the Model 1607A front panel by means of 17-pin miniature snap-in connectors. Refer to the operating and service literature supplied with these probes for more detailed information.

1-14. ACCESSORIES AVAILABLE. A six-inch trigger interface cable (HP Model 10236A) and an 12-inch I/O interface cable (HP Model 10237A) are available for use with the Model 1607A. These cables are required to interface the Model 1607A with a Model 1600A in the bus mode.

1-15. OPTIONS.

1-16. Standard options are modifications installed on HP instruments at the factory and are available on request. The following option extends the usefulness of Model 1607A:

OPTION 580. The standard Model 1607A meets the requirements of CSA standards. This option adds two labels to the unit to acknowledge this fact. Add HP Part No. 5955-0123, LABEL, OPTION 580; and HP Part No. 7120-4835, LABEL, CSA CERTIFICATION.

1-17. INSTRUMENTS COVERED BY MANUAL.

1-18. Attached to the instrument is a serial number plate. The serial number is in the form: 0000A00000. It is in two parts; the first four digits and the letter are the serial prefix and the last five digits are the suffix. The prefix is the same for all identical instruments; it changes only when a change is made to the instrument. The suffix however, is assigned sequentially and is different for each instrument. The contents of this manual apply to instruments with the serial number prefix(es) listed under SERIAL NUMBERS on the title page.

Table 1-1. Specifications

CLOCK AND DATA INPUTS

REPETITION RATE: 0 to 20 MHz.
INPUT RC: 40 kΩ ±3 kΩ shunted by ≤14 pF.
INPUT BIAS CURRENT: ≤30 μA.
INPUT THRESHOLD: TTL, fixed at approx +1.5 V; variable, ±10 Vdc.
MAXIMUM INPUT
Level: —15 to +15 Vdc.
Swing: 15 V peak from threshold.
MINIMUM INPUT
Swing: 0.5 V pk-pk +5% of threshold voltage.
Clock Pulse Width: 20 ns at threshold.
Data Pulse Width: 25 ns at threshold.
Data Setup Time: time data must be present prior to clock transition, 20 ns.
Hold Time: time data must be present after clock transition, 0 ns.

PATTERN AND DELAYED TRIGGER OUTPUTS

HIGH: ≥2 V into 50Ω (line driver interface).
LOW: ≤0.4 V into 50Ω (line driver interface).
PULSE DURATION
Delayed Trigger: approx 25 ns (RZ format) at 1 V level.
Pattern Trigger: approx 25 ns in RZ format at 1 V level with delay set to zero or off. With delay on and not set to zero, pattern trigger output starts on receipt of a pattern trigger signal and ends when the delay ends.

X, Y, AND Z AXES OUTPUTS

X-AXIS: <0.6 V to >6 V p-p, ±8 V max into ≥100 kilohms.
Y-AXIS: <0.6 V to >6 V p-p, ±8 V max into ≥100 kilohms.
Z-AXIS: 0 to 10 V p-p into ≥1 kilohm.

TRIGGER ARM INPUT

IMPEDANCE: 50Ω.
LEVEL: low state, 0 V to <0.4 V; high state, 2 V to <5 V.
PULSE WIDTH: 15 ns minimum at 1.5 V level.
ARMING CONDITIONS: if the arming pulse positive edge occurs <45 ns after a clock, triggering occurs on the same clock cycle that it is armed. If the arming pulse positive edge occurs >75 ns after a clock, triggering occurs on the next clock cycle.

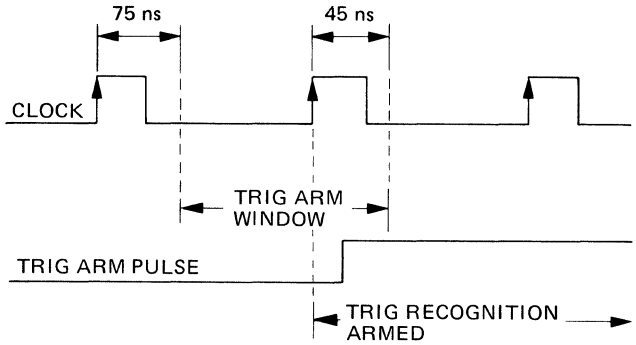

DISPLAY INTERFACE REQUIREMENTS

The 1607A interfaces with any oscilloscope or display with the following input parameters.

X AND Y INPUTS: 0.1 to 1 V/div deflection factors; dc coupled input; and >500 kHz bandwidth.
Z-AXIS INPUT: dc coupled with positive blanking; full blanking must occur with <10 V input at 10 mA.

GENERAL

DISPLAY TIME: variable from <50 ms to >5 s.
POWER REQUIREMENTS: 100, 120, 220 or 240 Vac +5, —10%; 48 to 440 Hz, maximum power 120 VA (nominal 88 VA).

Table 1-1. Specifications (Cont'd)

DIMENSIONS: see outline drawings.
WEIGHT: net 5.95 kg (13 1/8 lb); shipping, 7.77 kg (17 1/8 lb.)
OPERATING ENVIRONMENT
Temperature: 0°C to +55°C.
Humidity: to 95% at 40°C.
Altitude: to 4600 m (15 000 ft).
Vibration: vibrated in three planes for 15 min. each with 0.254 mm (0.010 in.) excursion, 10 to 55 Hz.

NOTES

1. Dimensions are for general information only. If dimensions are required for building special enclosures, contact your HP Field Engineer.
2. Dimensions are in millimeters and (inches)

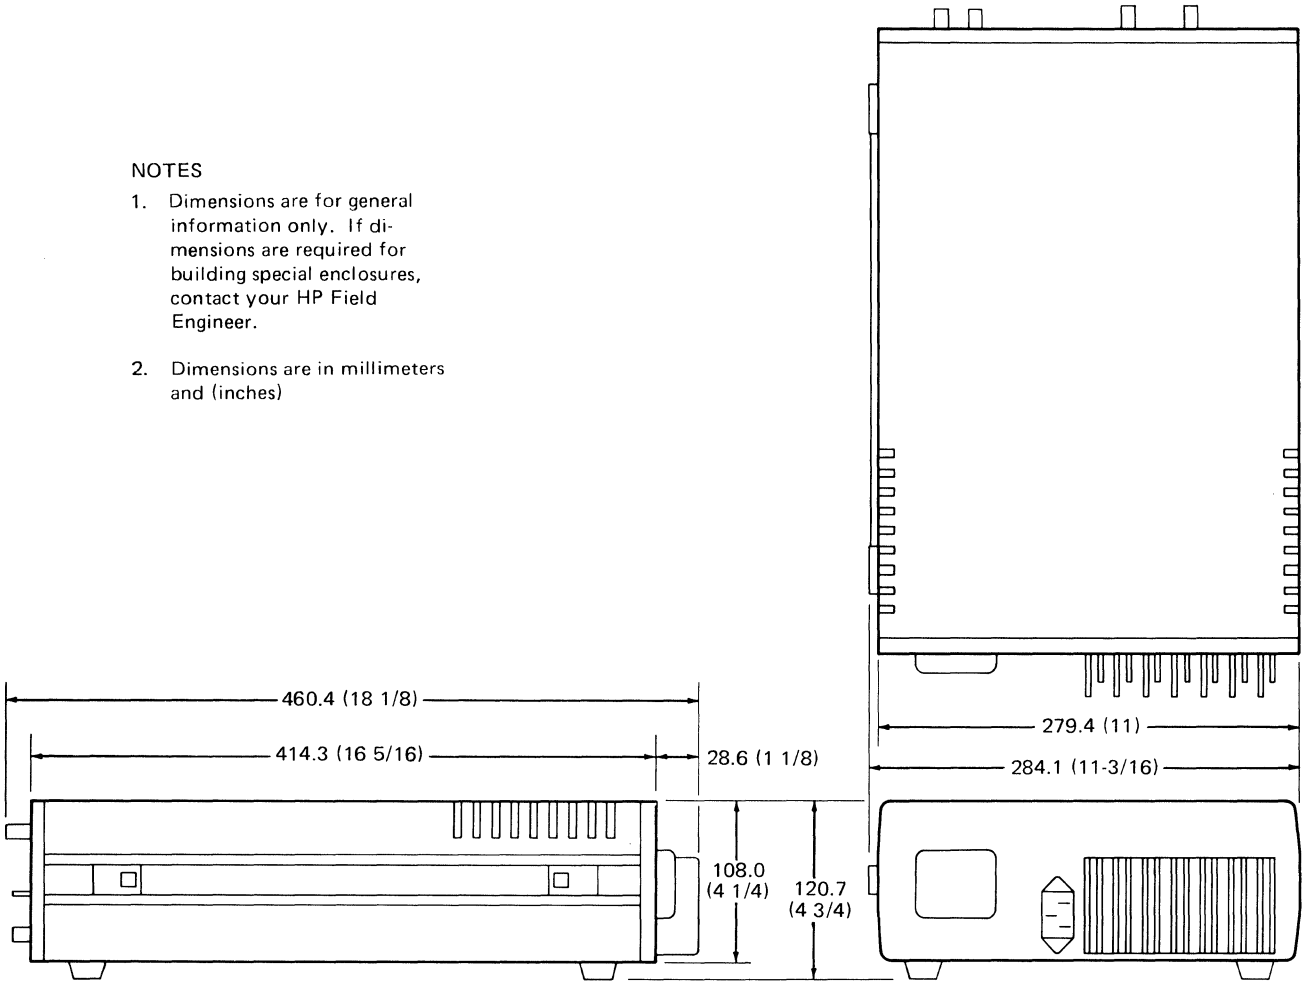

1-19. An instrument manufactured after the printing of this manual may have a serial number prefix that is not listed on the title page. This unlisted serial number prefix indicates the instrument is different from those described in this manual. The manual for this newer instrument is accompanied by a yellow Manual Changes supplement. This supplement contains "change information" that explains how to adapt the manual to the newer instrument.

1-20. In addition to change information, the supplement may contain information for correcting errors in the manual. To keep this manual as current and accurate as possible, Hewlett-Packard recommends that you periodically request the latest Manual Changes supplement. The supplement for this manual is identified with the manual print data and part number, both of which appear on the manual title page. Complimentary copies of the supplement are available from Hewlett-Packard.

1-21. For information concerning a serial number prefix that is not listed on the title page or in the Manual Changes supplement, contact your nearest Hewlett-Packard office.

SECTION II

INSTALLATION

2-1. INTRODUCTION.

2-2. This section contains instructions for performing an initial inspection of the Model 1607A. Installation procedures and precautions are presented in step-by-step order. The procedures for making a claim for warranty repairs and for repacking the instrument for shipment are also described in this section.

2-3. INITIAL INSPECTION.

2-4. The instrument was inspected mechanically and electrically before shipment. Upon receipt, inspect it for damage that may have occurred in transit. Check for broken knobs, bent or broken connectors, and dents or scratches. If damage is found, refer to the claims paragraph in this section. Retain the packing material for possible future use.

2-5. Check the operation of the instrument immediately after receipt. Refer to Section III for the operator's checks and adjustments. The operator's check will determine whether or not the instrument is operating properly. If the instrument does not operate properly, refer to the claims paragraph in this section.

2-6. PREPARATION FOR USE.

WARNING

Read the Safety Summary at the front of this manual before installing or operating the instrument.

2-7. POWER REQUIREMENTS. The instrument requires a source of 100, 120, 220, or 240 volts ac +5%, —10%, single-phase, 48 to 440 Hz that can deliver approximately 120 volt-amperes. The instrument is normally shipped from the factory to operate from a 120-volt ac power source. The LINE SELECTOR slide switches on the rear panel select either 100-, 120-, 220-, or 240-volt operation. To check or change the position of the LINE SELECTOR switches, see figure 2-1 and proceed as follows:

a. Turn off instrument power and remove power cord from rear-panel connector.

b. For 100- or 120-volt operation, set LINE SELECTOR switches to 100 V or 120 V and install 1-ampere, time-delay fuse for F1.

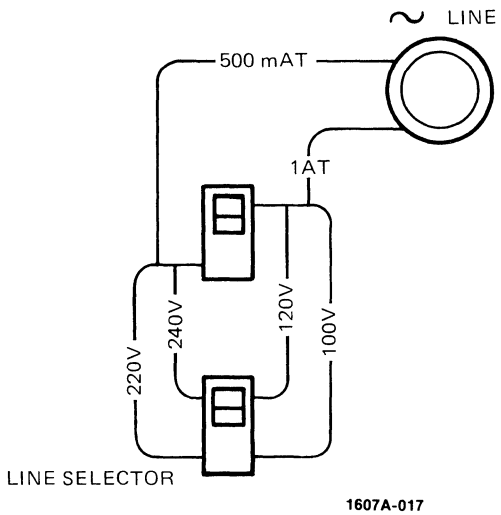

Figure 2-1. Line Voltage Selection

c. For 220- or 240-volt operation, set LINE SELECTOR switches to 220 V or 240 V and install 500-mA, time-delay fuse for F1.

d. Connect proper power cable (refer to paragraph 2-8).

2-8. THREE-CONDUCTOR POWER CABLE. This instrument is equipped with a three-conductor power cable that, when connected to an appropriate receptacle, grounds the instrument through the offset pin. The power cable required depends on the ac input voltage, and the country in which the instrument is to be used. Figure 2-2 illustrates the standard power receptacle (wall outlet) configurations that are used throughout the United States and in other countries. The HP part number shown adjacent to each receptacle drawing is the part number for a power cable equipped with a mating plug for that receptacle. If the appropriate power cable is not included with the instrument, notify the nearest Hewlett-Packard Sales/Service Office and a replacement cable will be provided.

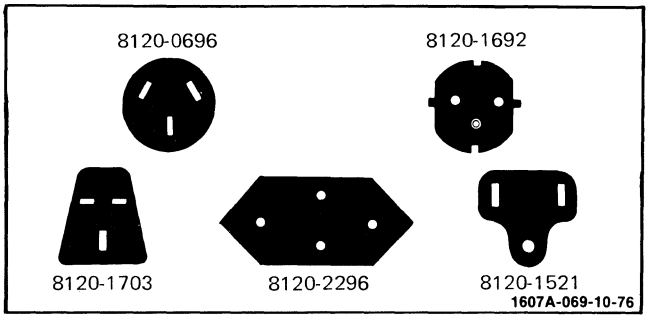

Figure 2-2. Power Receptacles

2-9. INSTRUMENT COOLING. The instrument is adequately cooled by normal air circulation. Install the Model 1607A in a location that provides at least 1.5 inches of clearance at the rear and one-inch clearance on both sides of the cabinet.

2-10. CLAIMS.

2-11. The warranty statement applicable to this instrument is printed inside the front cover of this manual. If physical damage is found or if operation is not as specified when the instrument is received, notify the carrier and nearest HP Sales/Service Office immediately (refer to the list in back of this manual for addresses). The HP Sales/Service Office will arrange for repair or replacement without waiting for settlement of the claim with the carrier.

2-12. REPACKING FOR SHIPMENT.

2-13. If the Model 1607A is to be shipped to an HP Sales/Service Office for service or repair, attach a tag showing owner (with address), complete instrument serial number, and a description of the service required.

2-14. Use the original shipping carton and packing material. If the original packing material is not available, the HP Sales/Service Office will provide information and recommendations on materials to be used.

SECTION III

OPERATION

3-1. INTRODUCTION.

3-2. This section contains an explanation of the Model 1607A operating controls, modes of operation, operator's checks and adjustments, and operating instructions for most applications.

NOTE

Paragraph 3-38 provides a detailed turn-on procedure for the Model 1607A.

3-3. CONTROLS AND CONNECTORS.

3-4. Figure 3-1 shows the Model 1607A front and rear panels and provides functional descriptions of operating controls, connectors, and indicators.

3-5. CLOCK, DATA, AND QUALIFIER INPUTS.

3-6. Clock, data and qualifier inputs to the Model 1607A are supplied by monitor probes which connect to the front-panel clock and data input connectors. Each monitor probe comprises connecting devices and buffer amplifier-comparators. Input threshold levels for the buffer amplifier-comparators are supplied by the Model 1607A. One clock probe and three six-channel data probes are required to operate the Model 1607A. Refer to the operating and service literature supplied with the probes for further information.

3-7. TRIGGERING REQUIREMENTS.

3-8. Triggering requirements for the Model 1607A are satisified when the input data word in sync with a qualified CLOCK INPUT pulse matches the TRIGGER WORD switch setting, and trigger arming and trigger bus conditions are met. The TRIGGER WORD switches are set to HI to recognize a positive logic state, LO to recognize a negative logic state, or to OFF for non-required or don't care input channels. Once triggering requirements are met, the Model 1607A will display 16 sequential words of input data in one of several modes.

3-9. SAMPLE MODES.

3-10. In the repetitive (REPET) sampling mode, displayed data is periodically updated approximately every 50 milliseconds to five seconds depending on the setting of the DISPLAY TIME control. In the single-shot (SINGLE) sampling mode new data is not displayed until the RESET button is pushed. Then one 16-word data block is displayed until RESET is pushed again.

NOTE

The intensified word may not necessarily be the trigger word if the START DSPL, END DSPL, or DELAY switch settings are changed after data acquisition in the single-sample mode.

3-11. TRIGGER MODES.

3-12. START DISPLAY. In START DSPL with DELAY set to zero, the triggering word (the input data word matching the TRIGGER WORD settings) is positioned at the top of the display with the next 15 input data words positioned in order below the triggering word.

3-13. END DISPLAY. In END DSPL with DELAY set to zero, the 15 input data words preceding the triggering word are displayed in order from the top of the display with the triggering word positioned at the bottom.

3-14. DELAY. With DELAY ON/OFF in the ON position any 16-word data block from 0 to 99 999 qualified input clock pulses following the triggering word can be selected for display. In START DSPL, the DELAY sets the number of qualified clock pulses the first displayed word is delayed from the trigger word. In END DSPL, DELAY sets the number of qualified clock pulses the last displayed word is delayed from the trigger word. In either mode, DELAY sets the number of qualified clock pulses the DELAYED TRIG OUT pulse is delayed from the trigger word. Setting DELAY ON/OFF to OFF is equivalent to setting all DELAY thumbwheels to zero.

3-15. NORM/ARM. In NORM position, a trigger is produced anytime the Model 1607A trigger word and qualifier conditions are met. In the ARM position, the Model 1607A trigger generator cannot produce a trigger pulse until it has been armed by a positive-going transition on the TRIG ARM input. NORM/ARM permits selection of a trigger point that is dependent upon previously specified conditions (sequential triggering). EXAMPLE: The TRIG ARM input

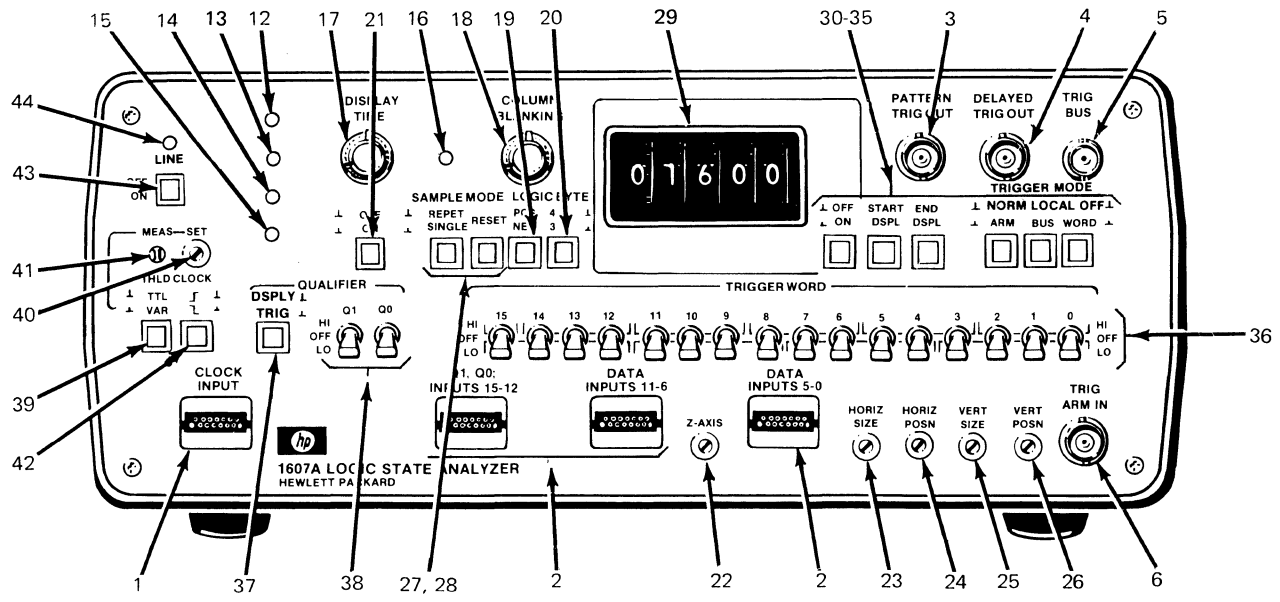

1607A-068-10-76

INPUTS/OUTPUTS

1. **CLOCK INPUT.** Clocking signal input connector.

2. **Q1, Q0, INPUTS 15-12; DATA INPUTS 11-16; DATA INPUTS 5-0.** Monitored-data input connectors. Each connector supplies six parallel data channels.

3. **PATTERN TRIG OUT.** Output connector for trigger pulse generated when the input data meets triggering requirements. The trigger pulse remains high until the delay generator produces a pulse on DELAYED TRIG OUT.

4. **DELAYED TRIG OUT.** Output connector for trigger pulse delayed from PATTERN TRIG OUT by the number of display qualified clock pulses selected by DELAY.

5. **TRIG ARM IN.** Input connector for trigger recognition arming signal.

6. **TRIG BUS.** Connector for trigger bus signal. Connect TRIG BUS to TRIG BUS on a Model 1600A only.

7. **I/O PORT.** Connector for bidirectional data and control signal interface cable between the Model 1607A and a Model 1600A.

8. **LOGIC PROBE.** +5 V power connector for use with logic probes requiring less than 100 mA.

9. **HORIZ.** Connector for horizontal output signal. Connect to external horizontal input of oscilloscope or display.

10. **VERT.** Connector for vertical output signal. Connect to vertical input of oscilloscope or display.

11. **Z-AXIS.** Connector for Z-axis blanking signal. Connect to Z-axis input of oscilloscope or display.

INDICATORS

12. **NO ARM.** Indicator light showing when the Model 1607A has remained unarmed for more than approximately 0.1 second.

13. **NO CLOCK.** Indicator light showing that the Model 1607A has not received a clock for more than approximately 0.1 second.

14. **NO QUAL.** Indicator light showing that the Model 1607A has not received a display qualifier for more than approximately 0.1 second. NO QUAL is disabled when the qualifier DSPLY/TRIG pushbutton is set to TRIG or the NO CLOCK light is on.

15. **NO TRIG.** Indicator light showing that the Model 1607A has not received a trigger for more than approximately 0.1 second. NO TRIG is disabled if NO ARM, NO CLOCK or NO QUAL are lit.

16. **DATA HELD.** Indicator light showing that the Model 1607A data has been displayed for more than approximately 0.3 second without being updated.

DISPLAY

17. **DISPLAY TIME.** Control to adjust the length of time a display is retained on the CRT before being updated in the REPET mode.

Figure 3-1. Front- and Rear-panel Controls, Connectors and Indicators

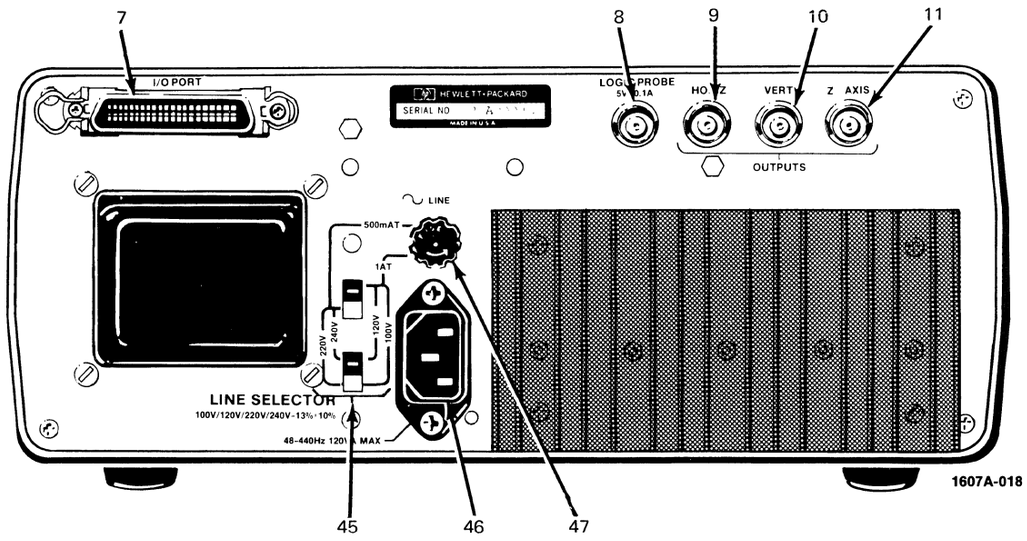

18. **COLUMN BLANKING.** Control for blanking unused columns. Blanking begins with the most significant bit and the least significant bit cannot be blanked.

19. **LOGIC POS/NEG.** Matches sense of displayed characters to desired logic polarity. POS for positive logic (the most positive level is a 1), or NEG for negative logic (the most negative level is a 1).

20. **BYTE 4 BIT/3 BIT.** 4 BIT groups the 16-bit word format into bytes of 4 bits each. 3 BIT groups the 16-bit word format into bytes of 3 bits each with the MSB left over.

21. **Z-AXIS ON/OFF.** Control for turning Z-axis modulation on or off. OFF position turns off Z-axis modulation.

22. **Z-AXIS.** Screwdriver adjustment for setting level of Z-axis modulation signal for proper interface with an oscilloscope.

23. **HORIZ SIZE.** Screwdriver adjustment for setting the horizontal size of the 16-word display on the oscilloscope CRT.

24. **HORIZ POSN.** Screwdriver adjustment for setting the horizontal position of the 16-word display on the oscilloscope CRT.

25. **VERT SIZE.** Screwdriver adjustment for setting the vertical size of the 16-word display on the oscilloscope CRT.

26. **VERT POSN.** Screwdriver adjustment for setting the vertical position of the 16-word display on the oscilloscope CRT.

SAMPLE MODE

27. **REPET/SINGLE.**
    a. REPET. With REPET (repetitive) selected, displayed data is updated every 50 ms to five seconds, depending on the setting of DISPLAY TIME.
    b. SINGLE. In SINGLE, data is acquired once each time RESET is pressed. The acquired data is displayed until RESET is pressed again.

28. **RESET.** RESET causes the Model 1607A to return immediately to the beginning of a data acquisition cycle.

TRIGGER MODE

29. **DELAY.** IN START DSPL, DELAY sets the number of display-qualified clock pulses the first displayed word is delayed from the trigger word. In END DSPL, DELAY sets the number of display-qualified clock pulses the last displayed word is delayed from the trigger word. In either mode, DELAY sets the number of display-qualified clock pulses DELAYED TRIG OUT is delayed from the trigger word.

30. **DELAY ON/OFF.** Turns the delay generator on or off. The OFF position has the same effect as setting all DELAY thumbwheels to zero.

31. **START DSPL.** When selected, the trigger word is the first (top) displayed word and the next 15 qualified input clocks enter the remaining 15 displayed words in memory (DELAY off).

32. **END DSPL.** When selected, trigger word is last (bottom) word displayed with preceding 15 qualified words displayed above.

33. **NORM/ARM.** In ARM position, the trigger recognition circuit cannot produce a trigger until it has been armed by a positive-going transition on the TRIG ARM input. In NORM position, a trigger is produced any time trigger word and qualifier conditions are met.

34. **LOCAL/BUS.** In LOCAL position the Model 1607A will trigger whenever the incoming data meets the Model 1607A local triggering requirements, regardless of the status of other instruments on the trigger bus. In BUS position, a trigger is generated only when the incoming data on both bussed instruments match the settings of their combined TRIGGER WORD switches. When trigger bus cable is disconnected, Model 1607A functions in local mode regardless of switch setting.

35. **OFF/WORD.** The OFF position (out) disables the 16 TRIGGER WORD switches (equivalent to placing all TRIGGER WORD switches in the off position). OFF/WORD has no effect on qualifier channels.

36. **TRIGGER WORD.** Control switches for selecting trigger word. OFF is a "don't care" position.

QUALIFIER

37. **DSPLY/TRIG.**
    a. DSPLY. Prohibits Model 1607A from displaying data or generating a trigger unless the conditions set by Q0 and Q1 are true when the clock edge occurs.
    b. TRIG. Prohibits the Model 1607A from generating a trigger unless the conditions set by Q0 and Q1 are true. TRIG extends TRIGGER WORD to 18 bits.

38. **Q1, Q0.** Control switches for setting the pattern that the qualifier bits must match for data to be displayed or a trigger to be generated. OFF is a "don't care" position.

THRESHOLD

39. **THLD TTL/VAR.**
    a. TTL. Sets input threshold of the clock and data probes to +1.5 V.
    b. VAR. Allows input threshold of the clock and data probes to be varied from —10 V to +10 V.

40. **SET.** Screwdriver adjustment for adjusting the probe input threshold voltage over a range of ±10 V.

41. **MEAS.** Test point for monitoring SET threshold level.

42. **CLOCK.** Pushbutton selection of clock transition used to clock data into Model 1607A. Out position selects positive-going transition and in position selects negative-going transition.

POWER

43. **LINE.** Model 1607A line power switch.

44. **Line Lamp.** Lights when the instrument is on.

45. **LINE SELECTOR.** Slide switches for selecting 100, 120, 220, or 240 Vac line operation.

46. **Power Input.** Power cable connector.

47. **FUSE.** 1 A time-delay fuse for 100- or 120-Vac operation, 500 mA time-delay fuse for 220- or 240-Vac operation.

Figure 3-1.

Front- and Rear-panel Controls, Connectors and Indicators (Cont'd)

could be the PATTERN TRIG OUT or DELAYED TRIG OUT pulse from another Model 1607A or a Model 1600A.

3-16. LOCAL/BUS. In the LOCAL position, the Model 1607A will trigger whenever the incoming data meets Model 1607A triggering requirements. In the BUS position, a trigger is generated only when the incoming data on both instruments connected to the trigger bus match the settings of their respective TRIGGER WORD switches. This feature allows two instruments to be bussed together to form up to a 32-bit-wide trigger (36-bits wide with TRIG qualification selected) enabling larger word-sized machines to be analyzed.

3-17. QUALIFIER MODES.

3-18. Display qualification prohibits the Model 1607A from recognizing any clock input unless the conditions set by Q0 and Q1 are true. On bus structures where data is being multiplexed such as in computers or microprocessors, display qualification permits selective viewing of data by ignoring unqualified clock edges. Trigger qualification prohibits the Model 1607A from generating a trigger unless the conditions set by Q0 and Q1 are true. With trigger qualification, Q0 and Q1 become two additional undisplayed channels, i.e., the trigger word becomes 18-bits wide.

3-19. When the DSPLY/TRIG switch is set to DSPLY, the Model 1607A will display only that data that is properly qualified when a clock occurs. When TRIG is selected, the instrument triggers on an 18-bit trigger word.

3-20. PARTIAL DISPLAYS.

3-21. In the partial display mode, the Model 1607A displays data words on the CRT one word at a time as they are received, not waiting until a complete 16-word data block is in memory. The Model 1607A will go into a partial display mode anytime the qualified clock rate is less than approximately 30 Hz. A slow qualified clock rate can be either a low-frequency clock or a high-frequency clock qualified infrequently.

3-22. In START DSPL, the CRT is blanked until the trigger word is found. The trigger word is then displayed and the following words are added to the display with subsequent clocks. In END DSPL, data words are displayed one word at a time as clocks are detected. After 16 words are displayed, each additional clock shifts the display up one word until the trigger word is displayed. The trigger word is intensified and held for the length of time set by DISPLAY TIME.

3-23. PATTERN TRIG OUT/DELAYED TRIG OUT.

3-24. PATTERN TRIG OUT and DELAYED TRIG OUT provide 50-ohm compatible trigger outputs. PATTERN TRIG OUT provides a pulse when the Model 1607A input data meets triggering requirements. The PATTERN TRIG OUT pulse remains high until the delay generator produces a pulse on DELAYED TRIG OUT. DELAYED TRIG OUT is delayed from PATTERN TRIG OUT by the number of display-qualified clock pulses selected by the DELAY thumbwheels. With DELAY set to zero, PATTERN TRIG OUT provides a RZ pulse approximately 25 ns wide.

3-25. DISPLAY FEATURES.

3-26. The following controls enable the Model 1607A operator to select the most usable display for his application.

3-27. DISPLAY TIME. The DISPLAY TIME control determines the length of time a given 16-word data block is displayed on the CRT before being updated by new input data. The time between data block updates can be set from approximately 50 milliseconds (fully ccw) to approximately five seconds (full cw). DISPLAY TIME is used to reduce display flicker at low data acquisition rates.

3-28. COLUMN BLANKING. The COLUMN BLANKING control is used to eliminate unused vertical columns on the display. Blanking begins with the most significant bit column. The least significant bit cannot be blanked. EXAMPLE: When monitoring a series of eight-bit data words, the eight unused vertical columns can be removed from the CRT display by adjustment of COLUMN BLANKING.

3-29. LOGIC NEG/POS. The POS position (out) causes the most-positive input voltage level to be displayed as a one, and the most-negative level to be displyed as a zero. In NEG (in position), the most negative input level is displayed as a one, and the most positive level is displayed as a zero.

3-30. BYTE 4 BIT/3 BIT. In the 4 BIT (BCD or hexadecimal format) position (out) display data is arranged into four-bit bytes. In the 3 BIT (octal format) position (in) display data is arranged into three-bit bytes.

3-31. BUS OPERATION.

NOTE

A Model 10236A Trigger Interface Cable and a Model 10237A I/O Interface Cable are required to bus the Model 1607A with a Model 1600A Logic State Analyzer.

3-32. There are two buses in the Model 1600A and Model 1607A. The Trigger Bus (TRIG BUS) is used to expand triggering capability and the I/O bus (I/O PORT) is used to transfer and control display information.

3-33. TRIGGER BUS. The trigger bus permits the Model 1607A and a Model 1600A to be connected together to form a 32 bit trigger word. Trigger-bus operation is controlled by the LOCAL/BUS switch. In LOCAL position, the instrument will trigger whenever the monitored data meets the instrument's local triggering requirements, regardless of the status of the other instrument on the bus. With LOCAL/BUS set to BUS, the instrument will generate a trigger only when the data monitored by both bused instruments is in agreement with their composite trigger word.

3-34. I/O BUS. Whenever the Model 1607A and Model 1600A are connected together with the I/O interface cable, they automatically go into I/O bus operation. In I/O bus operation, the combined instruments perform as a 32-bit logic state analyzer with table A data provided by the Model 1600A and table B provided by the Model 1607A. STORE A→B is disabled in I/O bus operation.

3-35. With the I/O bus connected, the combined instruments can be operated with either a single clock or two independent clocks. Using a single clock, the Model 1600A can display one table of sixteen 32-bit words or two tables of sixteen 16-bit words each. Thirty-two sequential 16-bit words can be displayed by setting LOCAL/BUS on both instruments to LOCAL and triggering the Model 1607A on the word occuring 16 clock pulses after the Model 1600A trigger word. With dual-clock operation, "handshake" operations between two independent machines can be observed on the same display with 16 channels devoted to each machine and independent clocks for each machine.

3-36. Model 1607A controls and indicators function in the same manner in I/O bus operation as they do when the Model 1607A operated separately with the following exception: The Model 1600A DISPLAY TIME controls both instruments in the bus mode. As shipped from the factory, the Model 1607A can be manually reset from the Model 1607A RESET button only. If it is desirable to control both the Model 1600A and the Model 1607A with the Model 1600A RESET, modify the Model 1607A Display Board Assembly A2 as detailed in Section V of this manual.

3-37. Detailed instructions for operating the instruments in the bus mode are provided in the Model 1600A Operating and Service Manual.

3-38. TURN-ON PROCEDURE.

CAUTION

Do not operate the Model 1607A with a storage oscilloscope. Turn off the oscilloscope or turn down intensity before turning off Model 1607A power. Otherwise the oscilloscope CRT could be burned.

3-39. An oscilloscope with external Z-axis, vertical and horizontal inputs as specified in table 1-1, or a Model 1600A Logic State Analyzer must be used to display Model 1607A data. Perform the following procedure to check Model 1607A operation with an oscilloscope. Model 1607A operation with a Model 1600A is described in the Model 1600A Logic State Analyzer Operating and Service Manual.

NOTE

Clock and Data probes need not be connected for this procedure.

a. Set oscilloscope controls to obtain defocused spot on the center on the CRT screen.

b. Connect vertical output of Model 1607A to vertical oscilloscope or display input and adjust oscilloscope for one volt/div sensitivity.

c. Connect Model 1607A horizontal and Z-axis outputs to oscilloscope or display external horizontal and Z-axis inputs.

d. Set Model 1607A controls as follows:

POWER	OFF
Sample Mode	SINGLE
COLUMN BLANKING	full CCW
Z-AXIS	ON

e. Apply power and adjust oscilloscope focus.

f. Adjust Model 1607A HORIZ SIZE for 6-division wide display and Model 1607A VERT SIZE for 8-division high display.

g. Center display with HORIZ POSN and VERT POSN controls.

h. Adjust Z-AXIS for blanking of trace between one's and zero's and complete blanking by COLUMN BLANKING control.

3-40. OPERATOR'S CHECKS AND ADJUSTMENTS.

3-41. The following procedure verifies the functional operation of the Model 1607A.

a. Perform the turn-on procedure detailed in paragraph 3-38. Observe that a focused 16-word table of ones and zeros is displayed.

b. Set Model 1607A controls as follows:

OFF/WORD	WORD
TRIGGER WORD	all OFF
QUALIFIER Q0, Q1	OFF

c. Set BYTE to 3 BIT and observe that display format changes from four-bit bytes to three-bit bytes.

d. Set LOGIC to NEG and observe that all zeros change to ones, and that all ones change to zeros.

e. Rotate COLUMN BLANKING cw and observe that vertical columns are blanked starting with most significant bit (MSB).

f. Rotate COLUMN BLANKING fully cw and observe that least significant bit (LSB) column remains on CRT.

g. Rotate COLUMN BLANKING fully ccw.

h. Set Trigger Mode to START DSPL and observe that first word is intensified.

i. Set Trigger Mode to END DSPL and observe that last word is intensified.

j. Set DELAY ON/OFF to ON. Observe that setting DELAY thumbwheels from 0 to 15 will move the word on the display. Observe that intensified word is not displayed for delays greater than 15.

3-42. OPERATING PROCEDURE.

3-43. The Model 1607A operating procedure is provided in a flow-diagram format in figure 3-2.

1. CONNECT MODEL 1607A HORIZ, VERT AND Z-AXIS OUTPUTS TO OSCILLOSCOPE EXTERNAL HORIZONTAL, VERTICAL AND Z-AXIS INPUTS.

2. ADJUST OSCILLOSCOPE FOR 1 VOLT/DIV SENSITIVITY AND ADJUST MODEL 1607A HORIZ SIZE, VERT SIZE, AND Z-AXIS ADJUSTMENTS FOR 6-DIVISION WIDE BY 8-DIVISION HIGH DISPLAY WITH TRACES BETWEEN ONE'S AND ZERO'S BLANKED. CENTER DISPLAY USING POSN CONTROLS.

3. CONNECT CLOCK AND DATA MONITOR PROBES TO CIRCUITRY UNDER TEST.

4. SELECT CLOCK SLOPE.

SET CLOCK (42) TO MATCH CLOCK PULSE SLOPE REQUIREMENTS OF CIRCUITRY UNDER TEST: OUT POSITION FOR POSITIVE-EDGE TRIGGERING, IN POSITION FOR NEGATIVE-EDGE TRIGGERING.

5. SELECT THRESHOLD.

SET THLD (39) TO MATCH THRESHOLD OF CIRCUITRY UNDER TEST. SELECT TTL WHEN LOGIC THRESHOLD IS +1.5 V. FOR OTHER THRESHOLD LEVELS, SELECT VAR AND ADJUST SET TO THRESHOLD OF SYSTEM UNDER TEST USING DVM CONNECTED TO MEAS OR ADJUST SET TO CENTER OF RANGE WHERE NO CLOCK LIGHT IS OUT.

6. ADJUST DISPLAY TIME AND COLUMN BLANKING CONTROLS FULLY CCW

7. SELECT SAMPLE MODE.

REPET 27	SINGLE 27	RESET 28
SELECT REPET TO RESET THE DISPLAY REPETITIVELY AT A RATE SELECTED BY DISPLAY TIME. AFTER RESET NEW DATA IS THEN DISPLAYED WHEN THE SYSTEM UNDER TEST MEETS TRIGGERING REQUIREMENTS.	SELECT SINGLE TO CAUSE MODEL 1607A TO ACQUIRE AND DISPLAY ONE 16-WORD BLOCK OF DATA EACH TIME RESET IS DEPRESSED.	PUSH RESET TO CAUSE THE MODEL 1607A TO IMMEDIATELY RETURN TO THE BEGINNING OF A DATA ACQUISITION CYCLE.

8. SELECT TRIGGER MODE.

DELAY 29	DELAY ON/OFF 30	START DSPL 31	END DSPL 32	NORM/ARM 32	LOCAL/BUS 34	WORD 35
SET NUMBER OF CLOCK PULSES DISPLAY AND DELAYED TRIG OUT ARE TO BE DELAYED FROM SELECTED TRIGGER WORD. IN START DSPL MODE, START OF DISPLAY IS DELAYED FROM TRIGGER WORD BY DELAY SETTING. IN END DSPL MODE, END OF DISPLAY IS DELAYED FROM TRIGGER WORD BY DELAY SETTING.	SELECT IN POSITION TO TURN DELAY GENERATOR ON. OFF POSITION HAS SAME EFFECT AS SETTING ALL DELAY THUMBWHEEL SWITCHES TO ZERO.	SELECT START DSPL TO DISPLAY TRIGGERING WORD (POSITIONED AT TOP OF DISPLAY) AND FOLLOWING 15 INPUT DATA WORDS.	SELECT END DSPL TO DISPLAY TRIGGERING WORD (POSITIONED AT BOTTOM OF DISPLAY) AND PRECEDING 15 INPUT DATA WORDS.	SELECT NORM TO ALLOW TRIGGER GENERATOR TO PRODUCE A TRIGGER WHENEVER THE TRIGGER WORD AND QUALIFIER CONDITIONS ARE MET. SELECT ARM TO INHIBIT TRIGGER GENERATOR FROM PRODUCING A TRIGGER UNTIL IT HAS BEEN ARMED BY A POSITIVE-GOING TRANSITION ON THE TRIG ARM INPUT.	SELECT LOCAL TO OBTAIN A TRIGGER ANYTIME THE MODEL 1607A INPUT DATA MEETS TRIGGERING REQUIREMENTS. SELECT BUS WHEN THE MODEL 1607A IS TO BE USED WITH A MODEL 1600A. IN BUS, A TRIGGER IS GENERATED ONLY WHEN THE TRIGGER REQUIREMENTS ARE MET ON BOTH BUSSED INSTRUMENTS.	SELECT ON POSITION TO ENABLE TRIGGER WORD SWITCHES. THE OFF POSITION EFFECTIVELY PLACES ALL TRIGGER WORD SWITCHES IN THE OFF OR DON'T CARE POSITION.

9. SELECT TRIGGER WORD.

SET SWITCHES TO MATCH REQUIRED TRIGGERING WORD OF INPUT DATA STREAM. HI TO RECOGNIZE A POSITIVE LOGIC STATE, LO TO RECOGNIZE A NEGATIVE LOGIC STATE OR OFF FOR A NON-REQUIRED INPUT.

10. SELECT QUALIFIER MODE.

DSPLY 37	TRIG 37
SELECT DSPLY (OUT POSITION) TO SELECTIVELY ACCEPT CLOCKS WHEN THE TWO-BIT QUALIFIER CONDITION IS MET. THE INPUT CLOCK FROM THE CIRCUIT UNDER TEST IS RECOGNIZED. IF QUALIFIER CONDITION IS NOT MET, THE MODEL 1607A IGNORES THE CLOCKS FROM THE CIRCUIT UNDER TEST. THE DSPLY QUALIFIER ALLOWS COMPRESSION OF DATA FOR DISPLAY.	SELECT TRIG (IN POSITION) TO USE QUALIFIER AS EXTERNAL SYNCHRONOUS TRIGGER OR TO EXPAND THE LENGTH OF THE TRIGGER RECOGNITION WORD TO 18 BITS.

11. SELECT QUALIFIER.

SET QUALIFIER SWITCHES Q1 and Q2 TO MATCH REQUIRED TRIGGERING BITS OF INPUT DATA. HI TO RECOGNIZE A POSITIVE LOGIC STATE, LO TO RECOGNIZE A NEGATIVE LOGIC STATE, OR OFF FOR A NON-REQUIRED INPUT.

12. SET UP DISPLAY FEATURES.

DISPLAY TIME 17	COLUMN BLANKING 18	LOGIC POS/NEG 19	BYTE 4 BIT/3 BIT 20
ADJUST FOR MAXIMUM USABLE FLICKER RATE.	ADJUST TO BLANK OUT NON-REQUIRED VERTICAL COLUMNS.	SET TO POS TO DISPLAY MOST POSITIVE INPUT LOGIC LEVEL AS A 1. SET TO NEG TO DISPLAY MOST NEGATIVE INPUT LOGIC LEVEL AS A 1.	SELECT 4 BIT (OUT POSITION) TO DISPLAY 4-BIT BYTES. SELECT 3-BIT (IN POSITION) TO DISPLAY 3-BIT BYTES.

1607A-019
CHANGED 7-75

Figure 3-2.
Model 1607A Operating Procedure

SECTION IV

PRINCIPLES OF OPERATION

4-1. INTRODUCTION.

4-2. This section of the manual is divided into three major parts: (1) a functional description of the Model 1607A based on a simplified instrument algorithm and functional algorithms of the major sections of the Model 1607A, (2) a functional block diagram description, and (3) a detailed circuit theory of operation.

4-3. The simplified algorithm presents the Model 1607A in its most basic form. The functional algorithms explain the operation of each section of the instrument. The functional block diagram description describes the purpose of each block on the block diagram (figure 8-4). Detailed block diagrams are included to help explain how each block functions. The detailed circuit description is limited to circuits that are unique or unusually complicated. No attempt is made to explain basic circuits.

4-4. BASIC INFORMATION.

4-5. The following paragraphs explain logic conventions that are used in describing the Model 1607A principles of operation.

4-6. LOGIC STATES. The terms HI and LO describe the output states of logic circuit elements. HI indicates the most positive dc level and LO indicates the most negative dc level produced by a given circuit element.

4-7. LOGIC CIRCUITRY. Most integrated circuits in the Model 1607A are in the TTL (transistor-transistor logic) and CMOS (complementary metal-oxide semiconductor) families of digital devices. A LO output from a TTL device is $<+0.4$ V and a HI output is $\geq+2.5$ V. A LO output from a CMOS device in the Model 1607A is approximately 0 V and a HI output is approximately +5.0 V.

4-8. MNEMONICS. A mnemonic is a brief letter designator symbol that describes the active state and function of a signal line. A prefix letter (H, L, P or N) indicates the active state of the signal; the remaining letters indicate its function. An H prefix indicates the function is active in the HI state, and an L prefix indicates the function is active in the LO state. For edge-controlled devices, the prefix P indicates the function is active on the positive-going transition, and the prefix N indicates the function is active on the negative-going transition.

4-9. Mnemonic functional definitions and points of origin are listed alphabetically in table 4-1.

4-10. FUNCTIONAL DESCRIPTION.

4-11. Figure 4-1 presents the functional sequence of events within the Model 1607A. The 1607A alternates between a data acquisition cycle and a display cycle.

4-12. During the data acquisition cycle, each word of input data is temporarily stored before being loaded into the memory. The input data (after temporary storage) is compared with the front-panel TRIGGER WORD switch positions. When an input word matches the preset TRIGGER WORD and trigger arming, bus, and qualifier conditions are met, the Model 1607A performs a data acquisition algorithm. The operation of the data acquisition algorithm is determined by the display and trigger modes selected. The algorithm controls memory loading and determines when gathered data is ready for display. When all algorithmic requirements have been satisfied, HDR occurs and transfers the Model 1607A into a display cycle.

4-13. The display cycle begins with the occurrence of HDR. Information stored in the memory during the previous data acquisition cycle is read out and displayed one word at a time. At the end of each displayed word, the Model 1607A increments to the next data word position on the CRT. This process continues until the end of the sixteenth displayed word. At the end of the sixteenth word, the Model 1607A checks the SAMPLE MODE selected and the DISPLAY TIME control setting to determine if new data is required. When new data is not required, the display cycle repeats. When new data is required, LRST occurs. The occurrence of LRST transfers the Model 1607A into a data acquisition cycle.

4-14. DIGITAL DELAY AND TRIGGER GENERATOR. The functional operation of the digital delay and trigger generator circuitry is shown in figure 4-2. The AND of trigger word recognition with qualifier recognition and LΔT produces HBTRG. The NAND of trigger recognition with qualifier recognition and HARM produces LLTRG. HBTRG and LLTRG are applied to the bus and local flip-flops.

4-15. The bus and local flip-flops are enabled by LARM and HARM from the trigger arm flip-flop. When the ARM trigger mode is selected, an external arming signal is required to clock LARM and HARM true. When the NORM trigger mode is selected, LARM and HARM are held in the true state. With LARM and HARM true, the occurrence of HBTRG and LLTRG force the $\overline{Q}$ outputs of the bus and local flip-flops HI, generating HB and HL. HB and HL enable the delay

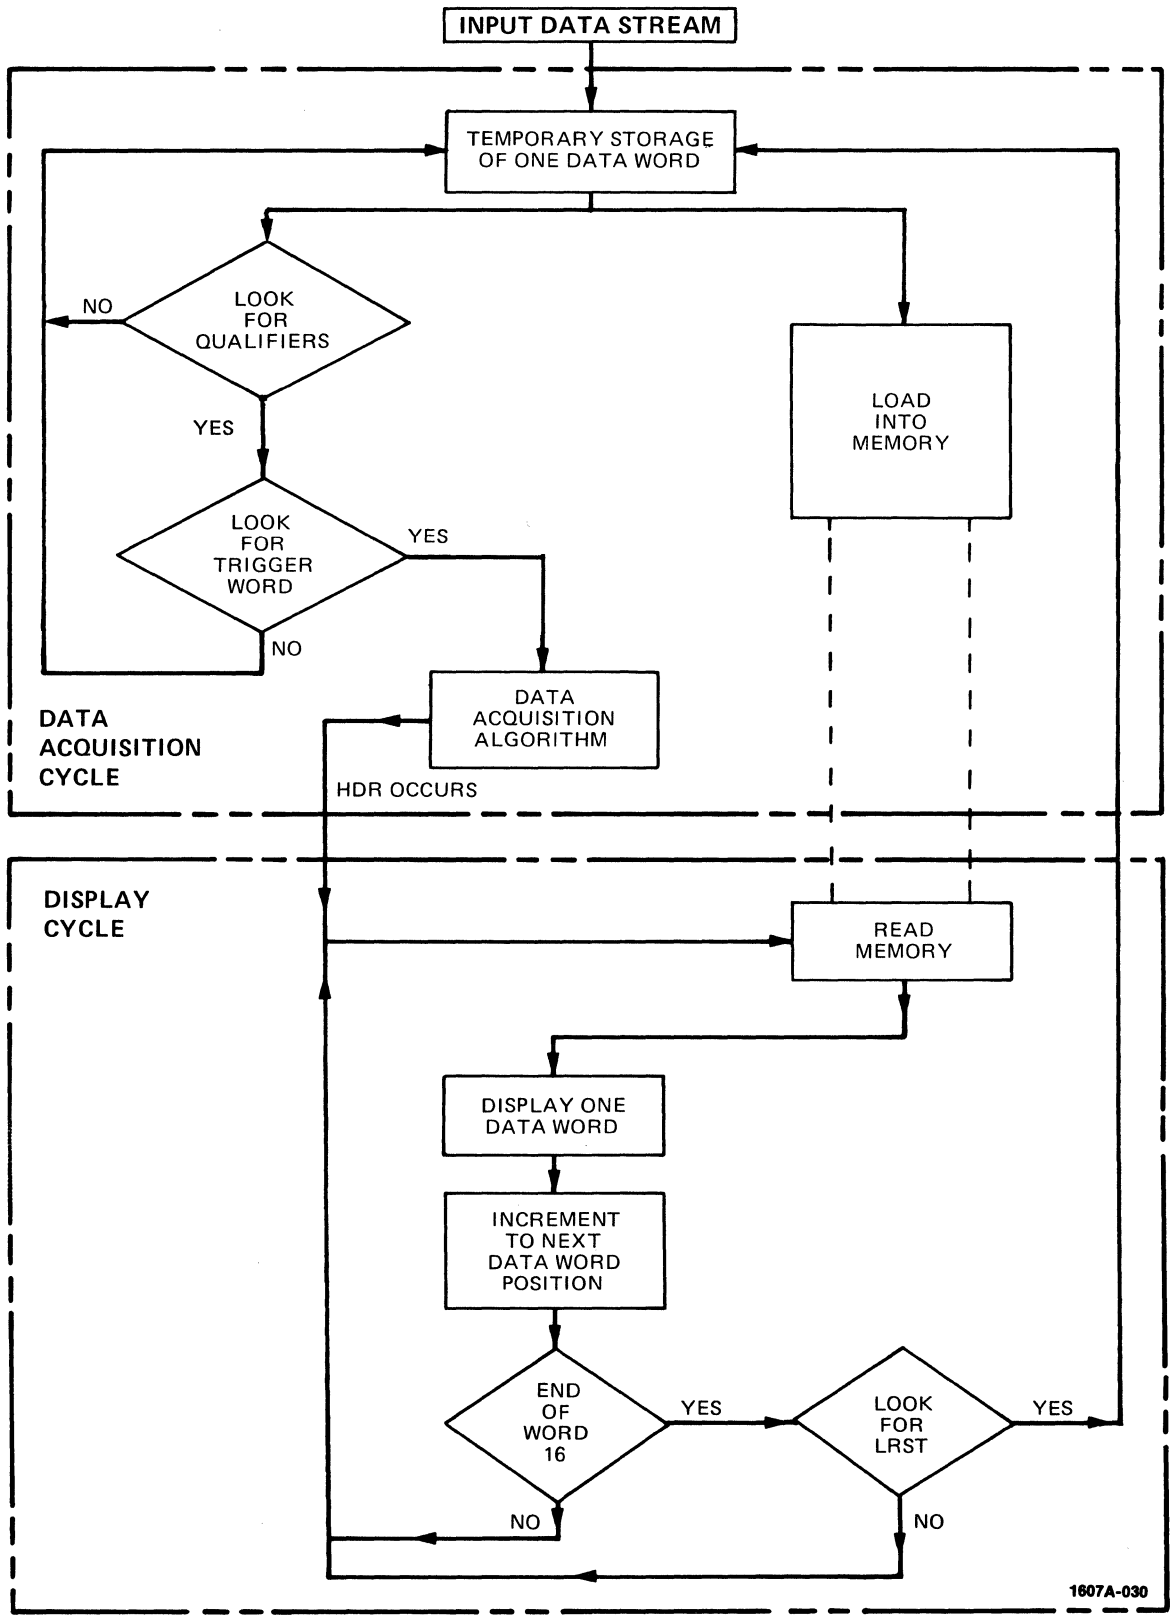

Figure 4-1. Functional Sequence of Events

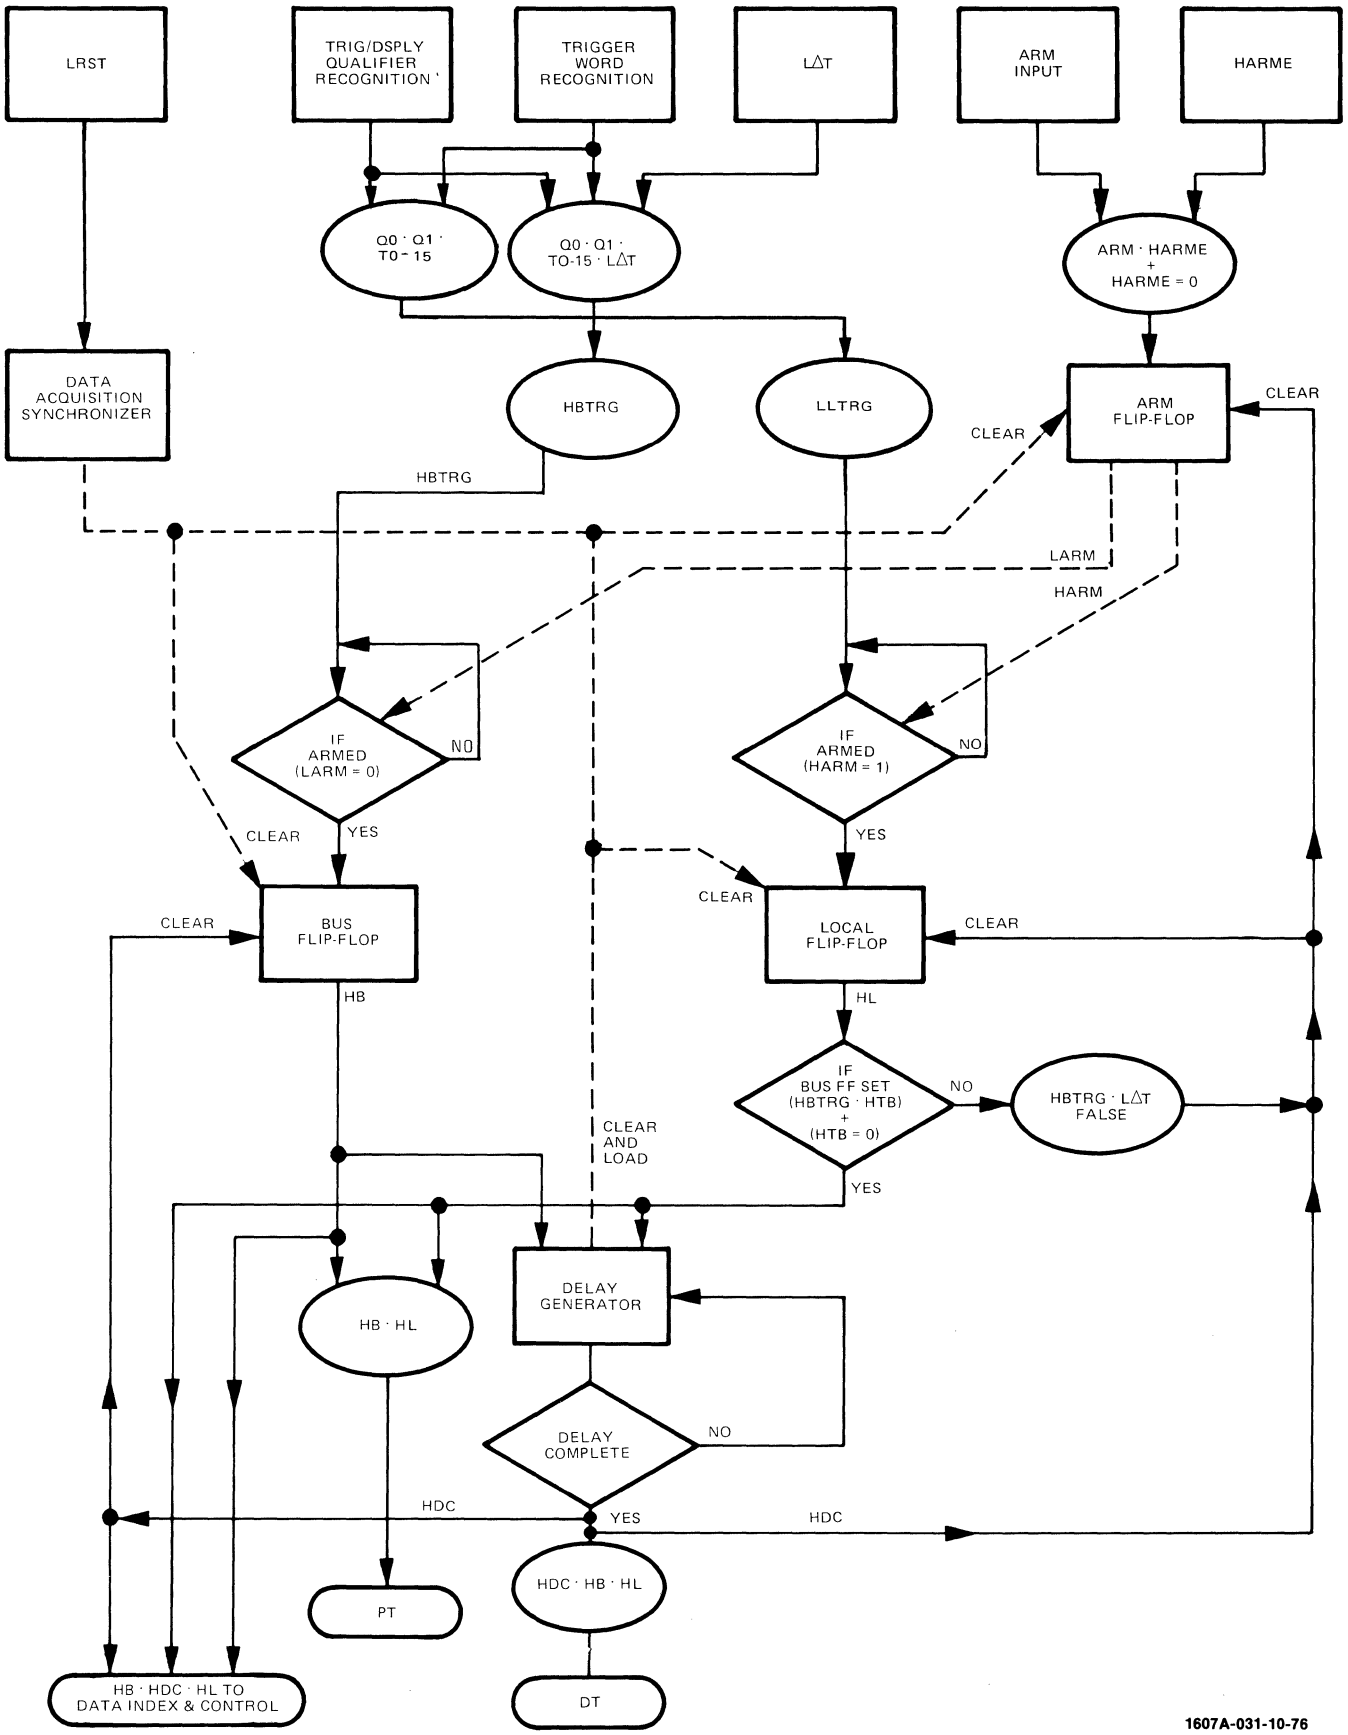

Figure 4-2. Digital Delay/Trigger Generator Algorithm

generator and their AND generates the pattern trigger output (PT). If HB is false (bus flip-flop not set), the local and arm flip-flops are cleared and the Model 1607A waits for the next trigger word.

4-16. Once enabled, the delay generator counts out the delay set on the DELAY thumbwheels. When the delay is complete, HDC goes true. The AND of HDC with HB and HL generates the delayed trigger output (DT). In addition, HDC is used to clear the local, arm, and bus flip-flops on the occurrence of LRST.

4-17. DATA INDEX AND CONTROL. Figure 4-3 shows the functional operation of the data index and control circuit. The data index and control circuit controls the read and write functions of the memory and determines when a data acquisition cycle is complete.

4-18. When the start display mode is selected, the occurrence of the trigger word and the subsequent completion of the delay (HB • HL • HDC) set the start flip-flop. The outputs of the start flip-flop are LTRG and HTRG*. LTRG is inverted (HTRG) and used as a control signal for the blanking circuit. HTRG* enables the data index counter. Once enabled, the data index counter counts the number of words written into memory. When the count reaches terminal count (16 words written into memory), HTC goes HI setting the end flip-flop. Setting the end flip-flop generates HDR, initiating a display cycle.

4-19. When the end display mode is selected, HSTR is LO, which sets the start flip-flop. The data index counter is enabled. When terminal count is reached, HTC goes HI and remains in that state. Since the trigger word has not been detected, data words continue to refresh the memory with the current input data word being written into the bottom of memory and the oldest word being bumped out the top. When the trigger word is detected and the delay generator counts out, HB•HL•HDC•HTC sets the end flip-flop initiating a display cycle.

4-20. DISPLAY CYCLE. The functional operation of the display section is shown in figure 4-4. At the end of a data acquisition cycle, HR1•$\overline{\text{HNCQ}}$ generates HDSPR which resets the horizontal and vertical state counters. The horizontal state count addresses each bit of the current word, displaying it on the CRT. If the trigger word is currently being displayed, the intensity counter is enabled, causing the current word to be written four times, resulting in that word being intensified. Once a word is written, the vertical counter is incremented to the next word address and the cycle is repeated.

4-21. At the end of word sixteen, the instrument checks the selected sample mode. If the Model 1607A is set to SINGLE, it increments the horizontal and vertical state counters, and rewrites the same data. If the Model 1607A is set to REPET, it checks display time. If display time is not complete, the instrument again increments the horizontal and vertical counters and rewrites the same data. When display time is complete, or when the RESET button is pressed, LRST goes LO, initiating a data acquisition cycle. At the same time, HDSPR goes HI, resetting the horizontal- and vertical-state counters and blanking the CRT during the data acquisition cycle.

4-22. BLOCK DIAGRAM.

4-23. The Model 1607A block diagram is shown on figure 8-4. Heavy lines enclose circuitry contained on a numbered schematic. The Model 1607A contains two major sections: (1) a data acquisition section and (2) a display section. The data acquisition section consists of circuitry shown on schematics 3 through 10. The display section circuitry is shown on schematics 11 through 15.

4-24. DATA ACQUISITION SECTION.

4-25. Data Input. (See figure 4-5.) Inputs to the Model 1607A are supplied by a clock probe and three data probes. The input threshold level for the clock and data probes is provided by the Model 1607A threshold supply. With TTL selected, the threshold level is fixed at +1.5 V. With VAR selected, the threshold level is variable from —10 V to +10 V by VAR SET. Clock Select supplies two clock slope commands (SS and SI) to the clock probe. These commands, controlled by the CLOCK pushbutton, determine which transition of the input clock signal transfers input data into the Model 1607A.

4-26. The clock probe supplies two buffered inputs: PCLK and NCLK. The leading-edge transitions of PCLK and NCLK are synchronous with data inputs from the data probes. When CLOCK is out (⌐), the leading-edge transition of PCLK is a positive-going transition, and the leading-edge transition of NCLK is a negative-going transition. With these conditions, data is clocked into the Model 1607A on the positive-going transition of the input clock signal. When CLOCK is in (¬), the leading-edge transition of PCLK is a negative-going transition, and the leading-edge transition of NCLK is a positive-going transition. With CLOCK in (¬), data is clocked on the negative-going transition of the input clock signal. PCLK transfers input data into temporary storage and is used by the timing generator to derive the internal data acquisition clocking signals. NCLK clocks the NO CLOCK indicator control logic.

4-27. Temporary Data Storage. Input data from the data probes is applied to a series of D flip-flops for temporary storage. The flip-flop outputs are the data word and its complement (T0 through T15 and $\overline{\text{T0}}$ through $\overline{\text{T15}}$), and the two qualifier bits and their complements (TQ0/TQ1 and $\overline{\text{TQ0}}$/$\overline{\text{TQ1}}$). The rising edge of PCLK loads new data into the temporary

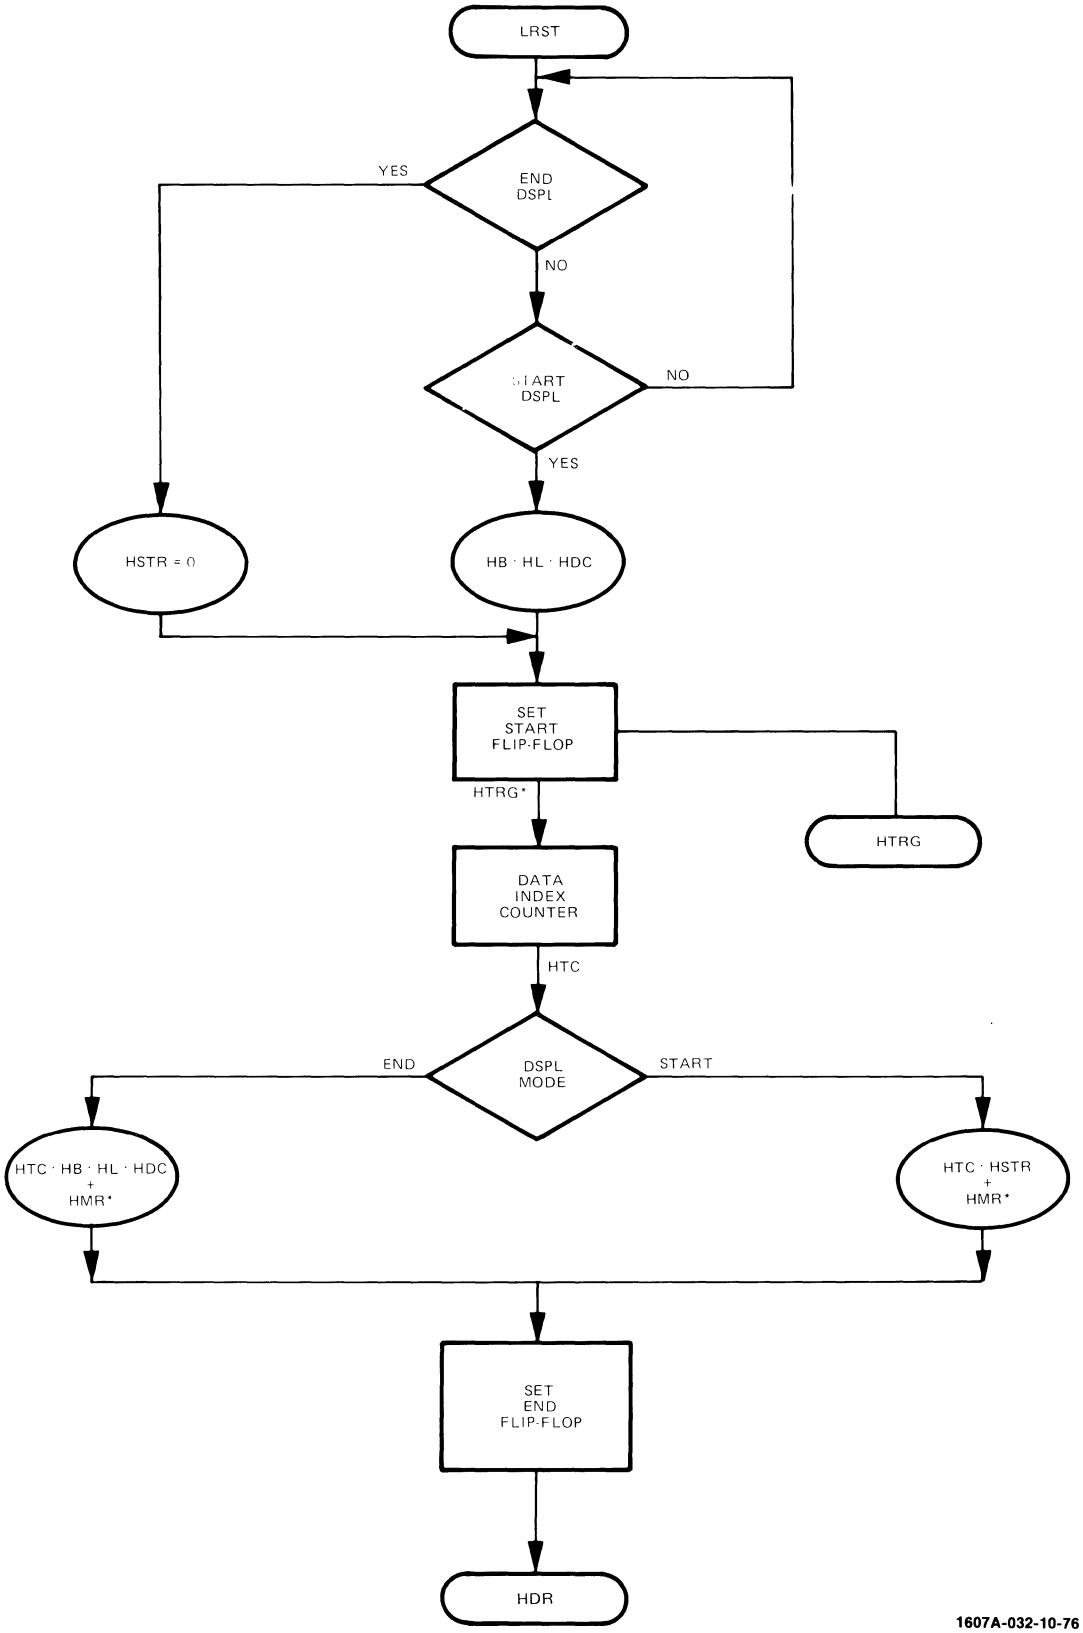

Figure 4-3. Data Index and Control Algorithm

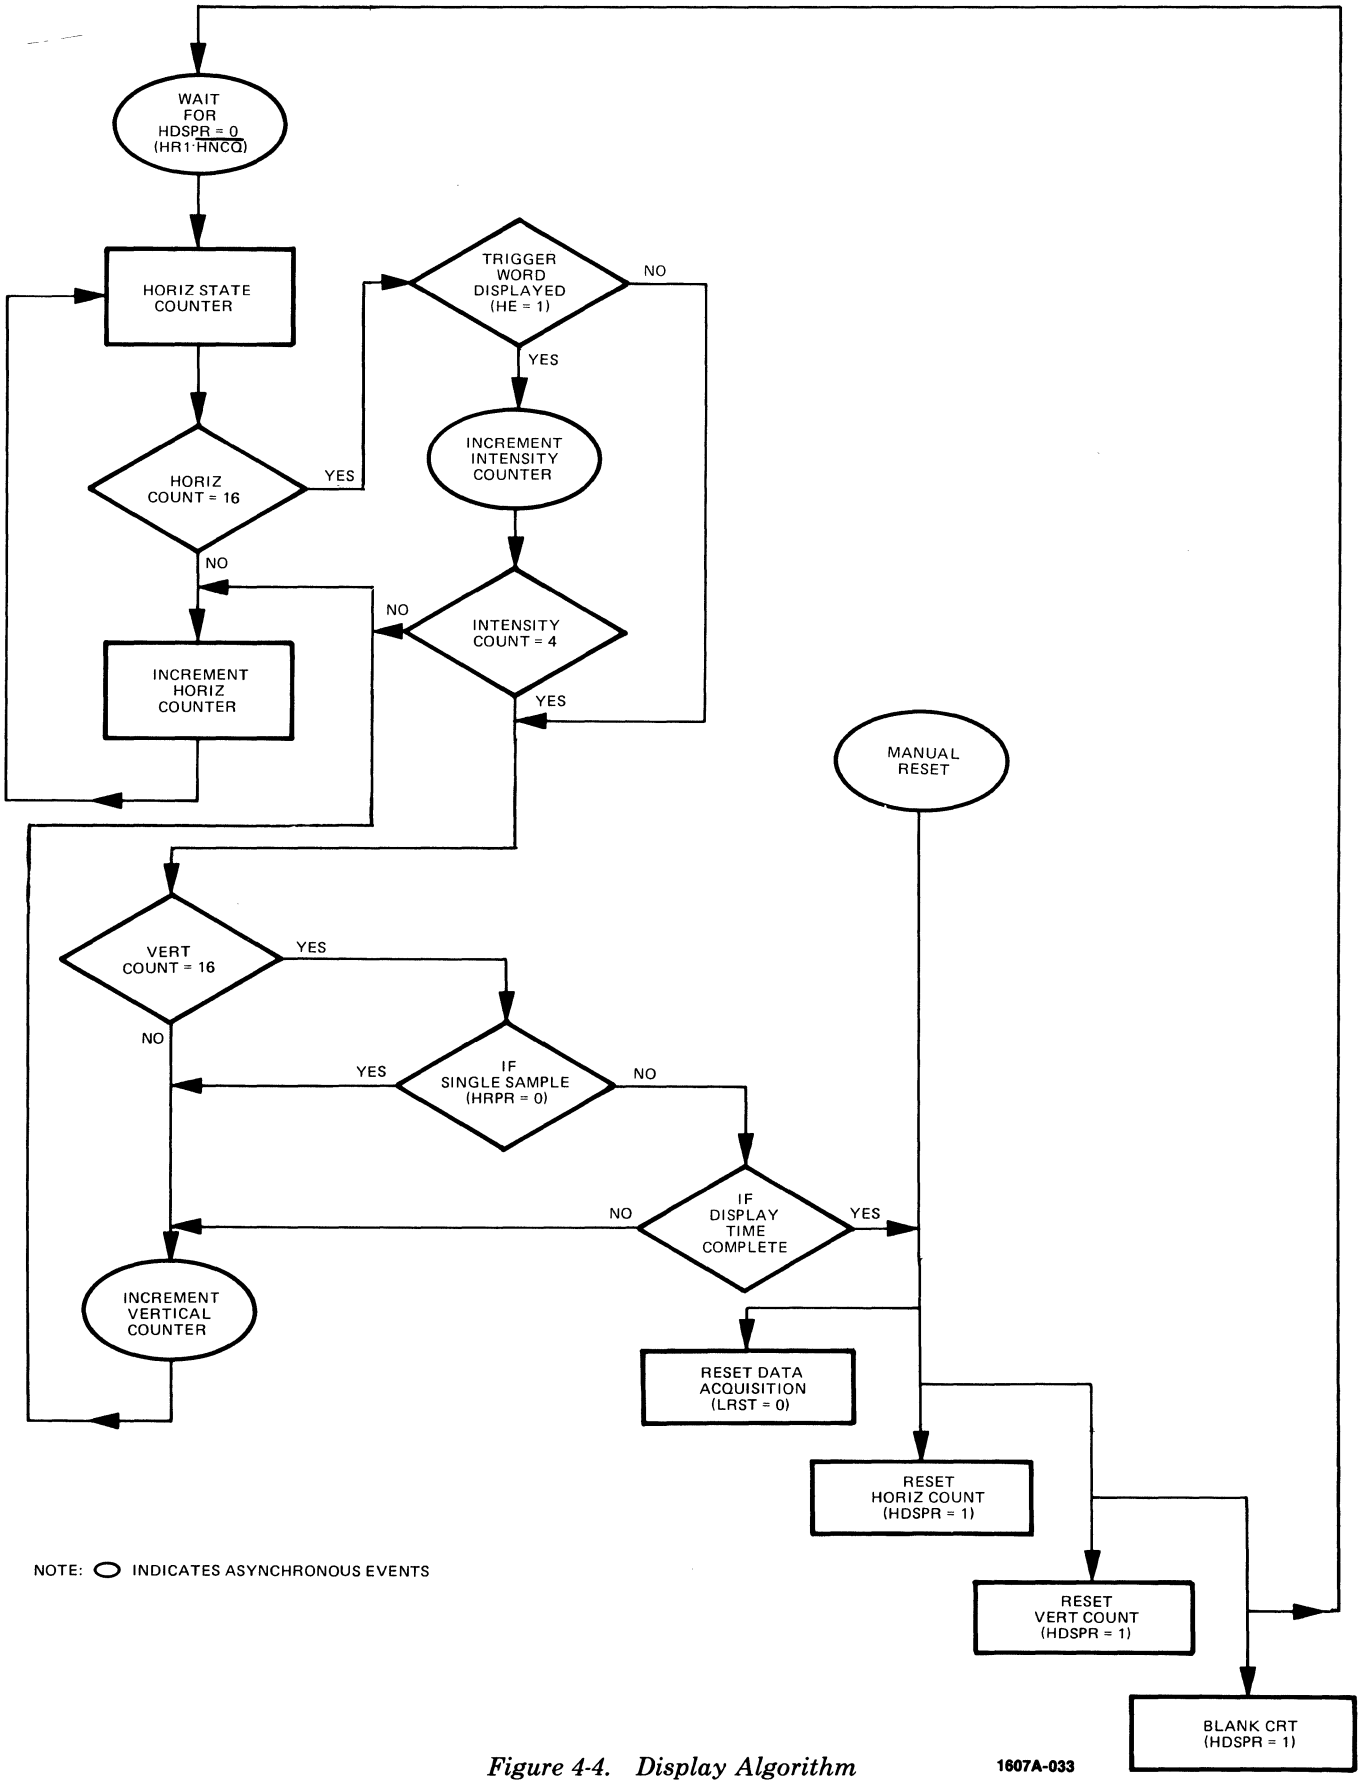

Figure 4-4. Display Algorithm 1607A-033

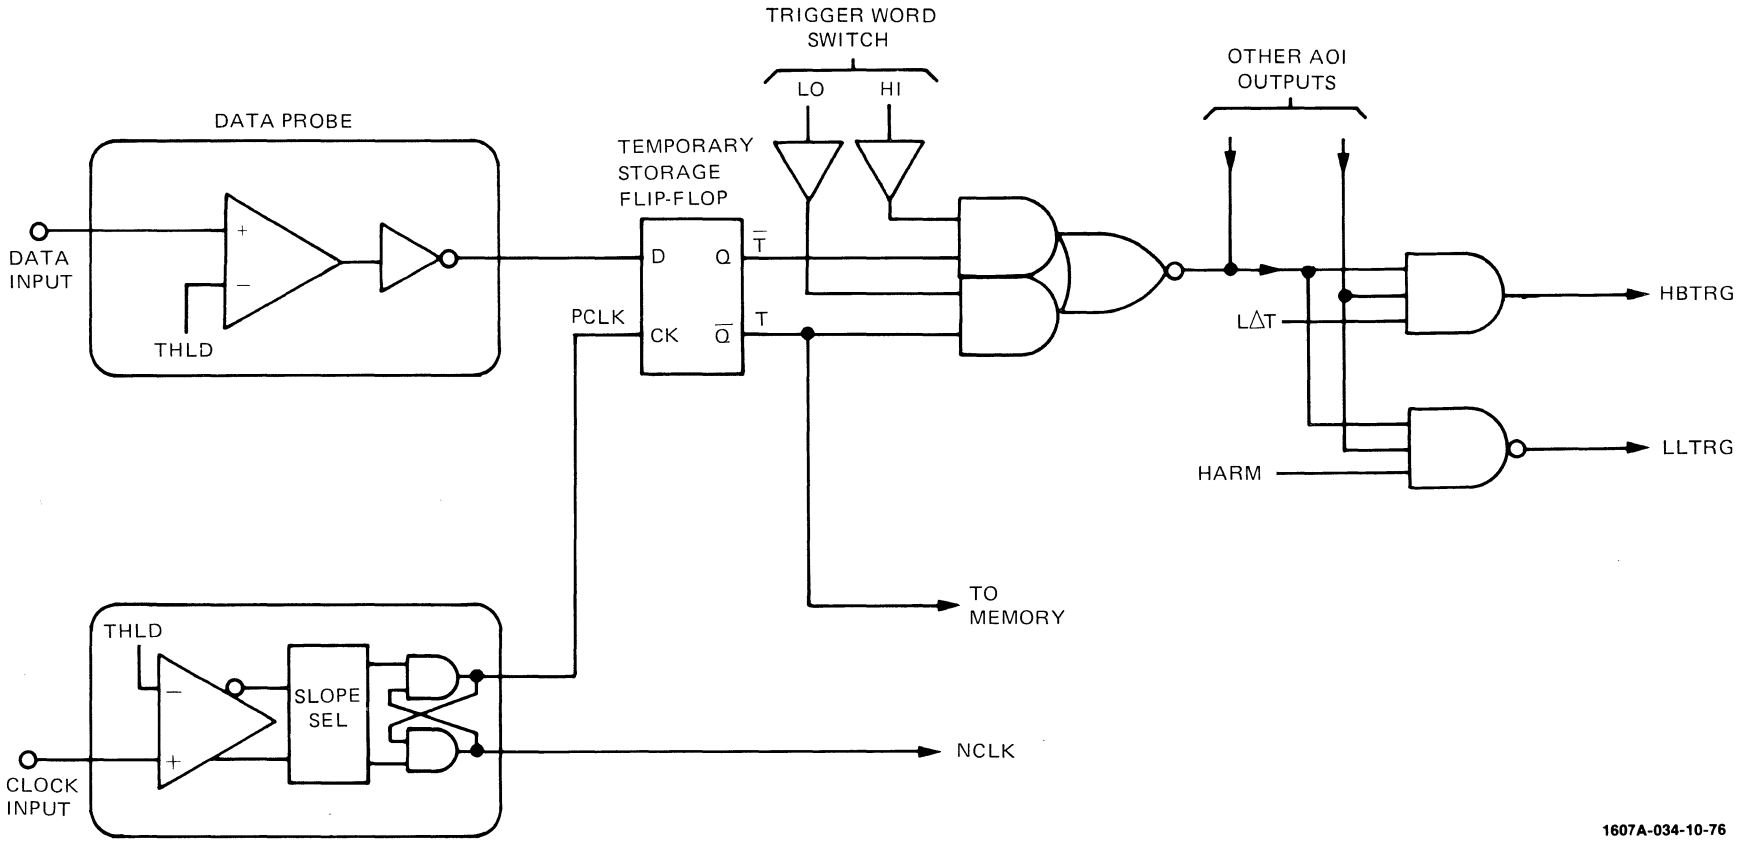

Figure 4-5. Data Input, Temporary Storage, and Pattern Recognition

storage flip-flops. The outputs of the D flip-flops are connected to the pattern recognition gates and A-memory.

4-28. Pattern Recognition. The pattern recognition gates compare the TRIGGER WORD and QUALIFIER switch settings with the input data and qualifier lines. When a match occurs, HBTRG (enabled by LΔT) and LLTRG (enabled by HARM) are produced. HBTRG is wire ANDED with the trigger bus. Thus, all inputs to the bus must be high before HBTRG will rise above threshold. When DSPLY qualifier mode is selected, the pattern recognition circuit generates HCLQ which is used to qualify timing signals in the Model 1600A.

4-29. Digital Delay and Trigger Generator. (See figure 4-6.) Once pattern recognition occurs, LLTRG is clocked into the local flip-flop. If BUS trigger mode is selected, the rising edge of HBTRG sets the bus flip-flop. When both flip-flops are set, HB and HL generate the pattern trigger (PT) and enable the delay generator. If the delay generator is set to zero, PT and DT (delayed trigger) are generated when the local and bus flip-flops are set. For delays other than zero, PT goes HI when the bus and local flip-flops are set and remains HI while the delay generator is running. When the delay has timed out, HDC occurs. DT is generated by HDC and PT is terminated. The delay generator and local flip-flop clock are qualified so that a trigger is recognized only when qualifier conditions are met.

4-30. When trigger arming is selected, the arm flip-flop disables the local and bus flip-flops until an arming pulse is received. Once an arming pulse is received, the local and bus flip-flops are enabled. When trigger and qualifier conditions are met, PT is generated, and the arm flip-flop is reset.

4-31. Memory/Multiplexer and Data Index and Control. (See figure 4-7.) When the display section generates LRST, a data acquisition cycle is initiated. The data index counters, and the start and end flip-flops are reset. When a qualified clock is detected, the memory address lines are switched to the write address counter and a memory write enable pulse (LWE) is generated. While LWE is true, one word is written in memory. At the trailing-edge of LWE, the write address counter is incremented and the memory address lines are switched back to the display or computed address (CA0-3).

4-32. With the start display mode selected, the data index counter is incremented by LWE2 only after the start flip-flop is set. The start flip-flop is set when a trigger word is detected and the digital delay is complete. When the data index counter reaches terminal count, the end flip-flop generates HDR. HDR indicates that memory data is complete and initiates a display cycle.

4-33. With the end display mode selected, the start flip-flop is preset enabling the data index counter to

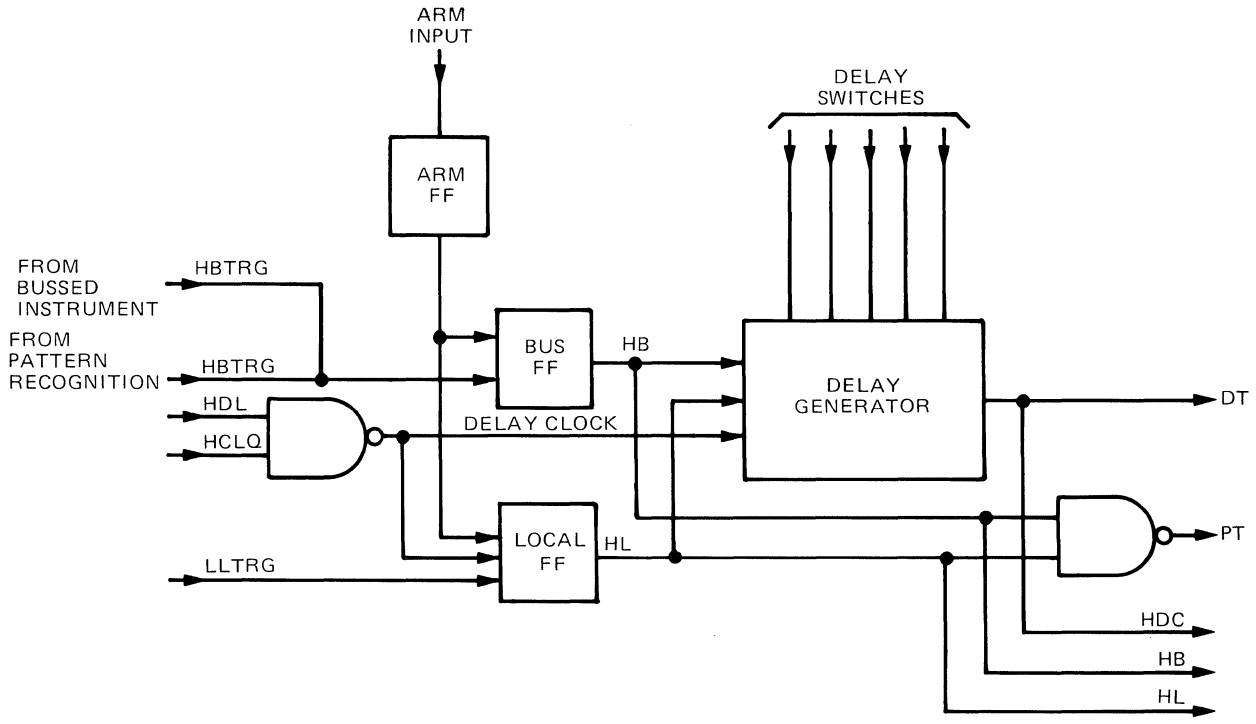

Figure 4-6. Digital Delay/Trigger Generator Block Diagram 1607A-035-10-76

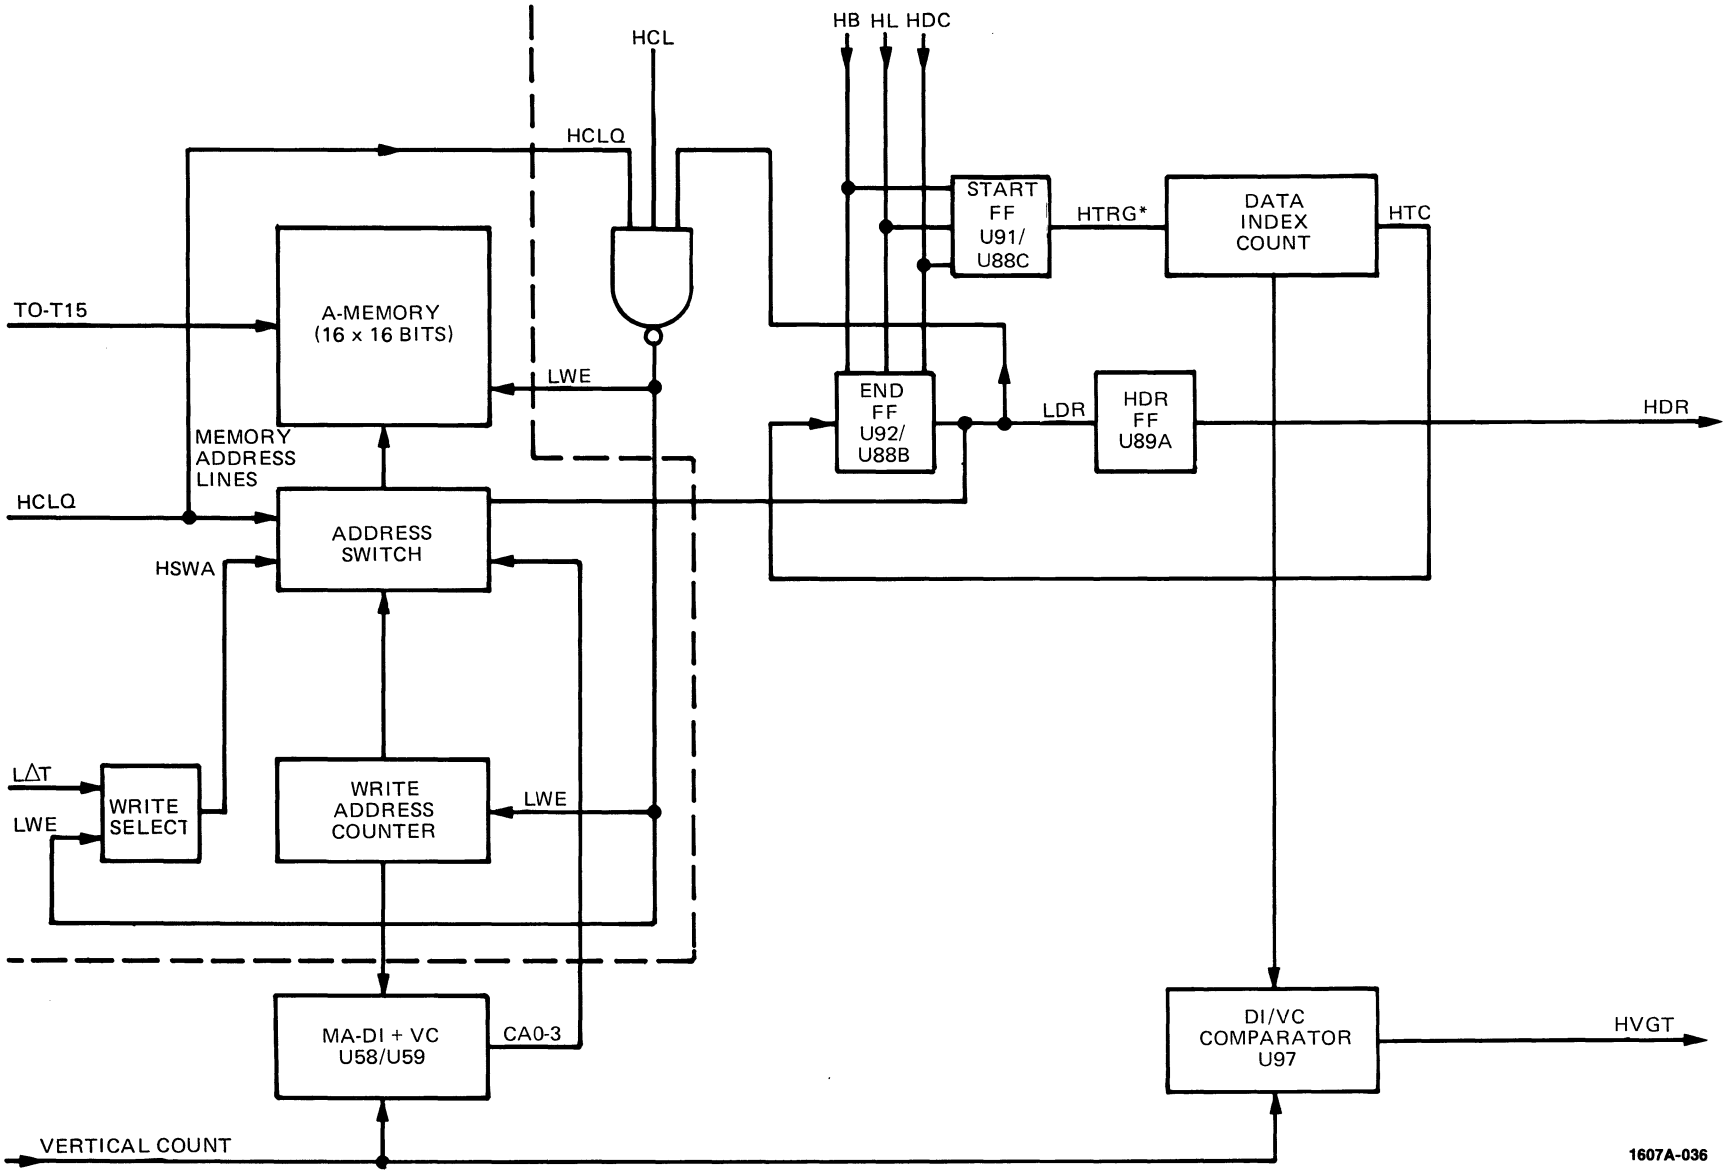

Figure 4-7. Memory and Data Index/Control Block Diagram

run prior to trigger word recognition. When the data index counter reaches terminal count, the end flip-flop is enabled to receive a trigger. The occurrence of a trigger after terminal count is reached generates HDR, which initiates a display cycle.

4-34. The data index counter keeps track of the number of valid words written into memory. The write address counter points to the next address in memory to be written into. The difference of the output of the two counters is taken in U58 to determine where the first word in memory is located. This computed first word address is added to the vertical state count from the display section to determine the address of the words to be read from memory during a display cycle.

3-35. Whenever the qualified clock rate drops below 30 Hz during a data acquisition cycle, the partial display mode is enabled. The vertical state counter reads partial memory data through U58/U59 and U97. When the vertical state count exceeds the data index count, i.e. addresses invalid data, comparator U97 provides HVGT to the display section. HVGT blanks the CRT so that only valid data is displayed.

4-36. Timing Generator. The timing generator develops four internal clocking signals in the Model 1607A based on the clock from the system under test. HCL is gated in the memory index control circuit to derive the write enable pulse (LWE). HDL is the clock for the delay generator. LΔT clocks the pattern recognition circuit and HΔT is used to clock the reset circuit for the local flip-flop in the trigger generator.

4-37. Indicator Light Control. The indicator light control logic provides a hierarchy that determines the sequence in which the indicator lights are enabled. When the NO CLOCK light is on, the NO QUAL and NO TRIG lights are disabled. When a clock is present and the NO QUAL light is on, NO TRIG is disabled. The NO ARM light also disables the NO TRIG light. Otherwise, the NO ARM light functions independently of the other lights.

4-38. The indicator light logic also provides HNCQ to the display section. When the qualified clock rate is less than 30 Hz, HNCQ places the display section in the partial display mode.

4-39. DISPLAY SECTION. The display section of the Model 1607A contains the circuitry required to generate horizontal, vertical and blanking drive to an oscilloscope CRT. These output signals provide information that positions the CRT electron beam and also determines whether a one or a zero is displayed. Data words are displayed from top to bottom, with specific bits displayed from right to left (least-significant bit to most-significant bit).

4-40. The horizontal and vertical drive circuits are synchronized together during a display cycle. When a display cycle begins, both the horizontal and vertical circuits are enabled and data is applied to the CRT. When the first data word has been displayed, the vertical circuitry moves the CRT electron beam to the second word position and the next data word is displayed. This process continues until the end of the sixteenth data word. If new data is required, LRST occurs and a new data acquisition cycle is initiated. If new data is not required, the memory contents are re-read and displayed as required.

4-41. Display Control and Reset. Figure 4-8 shows a functional block diagram of the display control and reset circuit. This portion of the display section consists of the reset circuit, the horizontal and vertical state counters, the word intensity control, and the circuitry for generating LZER which controls the one/zero switch.

4-42. At the end of a data acquistion cycle, HDR initiates a display cycle. HDR enables the vertical state counter which has been cleared previously by HDSPR. The vertical state counter counts the horizontal carry outputs (LHORC) from the horizontal state counter. The horizontal state counter outputs (H0-H3) address each bit of the current word addressed by the vertical state counter. The horizontal- and vertical-state counts are applied to a D/A converter to generate the horizontal and vertical drives for the CRT. When one complete word is written on the CRT, the horizontal-state counter generates LHORC. LHORC increments the vertical-state counter to the next word position and the cycle is repeated.

4-43. If the current word addressed by the vertical state counter is the trigger word (HE is true), the word intensity control logic inhibits LHORC's to the vertical state counter and enables the word intensify counter. The word intensify counter then counts LHORC's. At the count of four, Q3 of the word intensify counter goes HI, once again enabling LHORC's to the vertical state counter. This operation results in the trigger word being written on the CRT four times causing that word to be intensified.

4-44. When the last word is written on the CRT, the vertical state counter generates LVRTC. LVRTC is routed to the repetitive reset circuit, enabling that circuit. The repetitive reset circuit is controlled by the DISPLAY TIME control. When the repetitive reset circuit times out, HRPR is generated. If the repetitive sample mode is selected, the AND of HRPR with HRPS generates LRST. LRST switches the Model 1607A into a data acquisition cycle and forces HDSPR HI which resets the display section. If the Model 1607A is in the single sample mode, the display cycle is repeated until manually reset.

4-45. When the Model 1607A is connected to a Model 1600A through the I/O bus, the display cycle is controlled by the Model 1600A. In I/O bus operation, H1600 transfers control of the horizontal and vertical

state counters and the repetitive reset function to the Model 1600A. The horizontal and vertical state counts are then parallel loaded from the Model 1600A. The Model 1607A display section can be reset by the Model 1600A repetitive reset, the Model 1600A manual reset (after special modification), or the Model 1607A manual reset in the bus mode.

4-46. Clock Generator and Analog Circuitry. The clock generator and analog circuitry consists of the horizontal and vertical drive circuitry and the 100-kHz oscillator used for character generation. Figure 4-9 is a functional block diagram of the clock generator and analog circuitry.

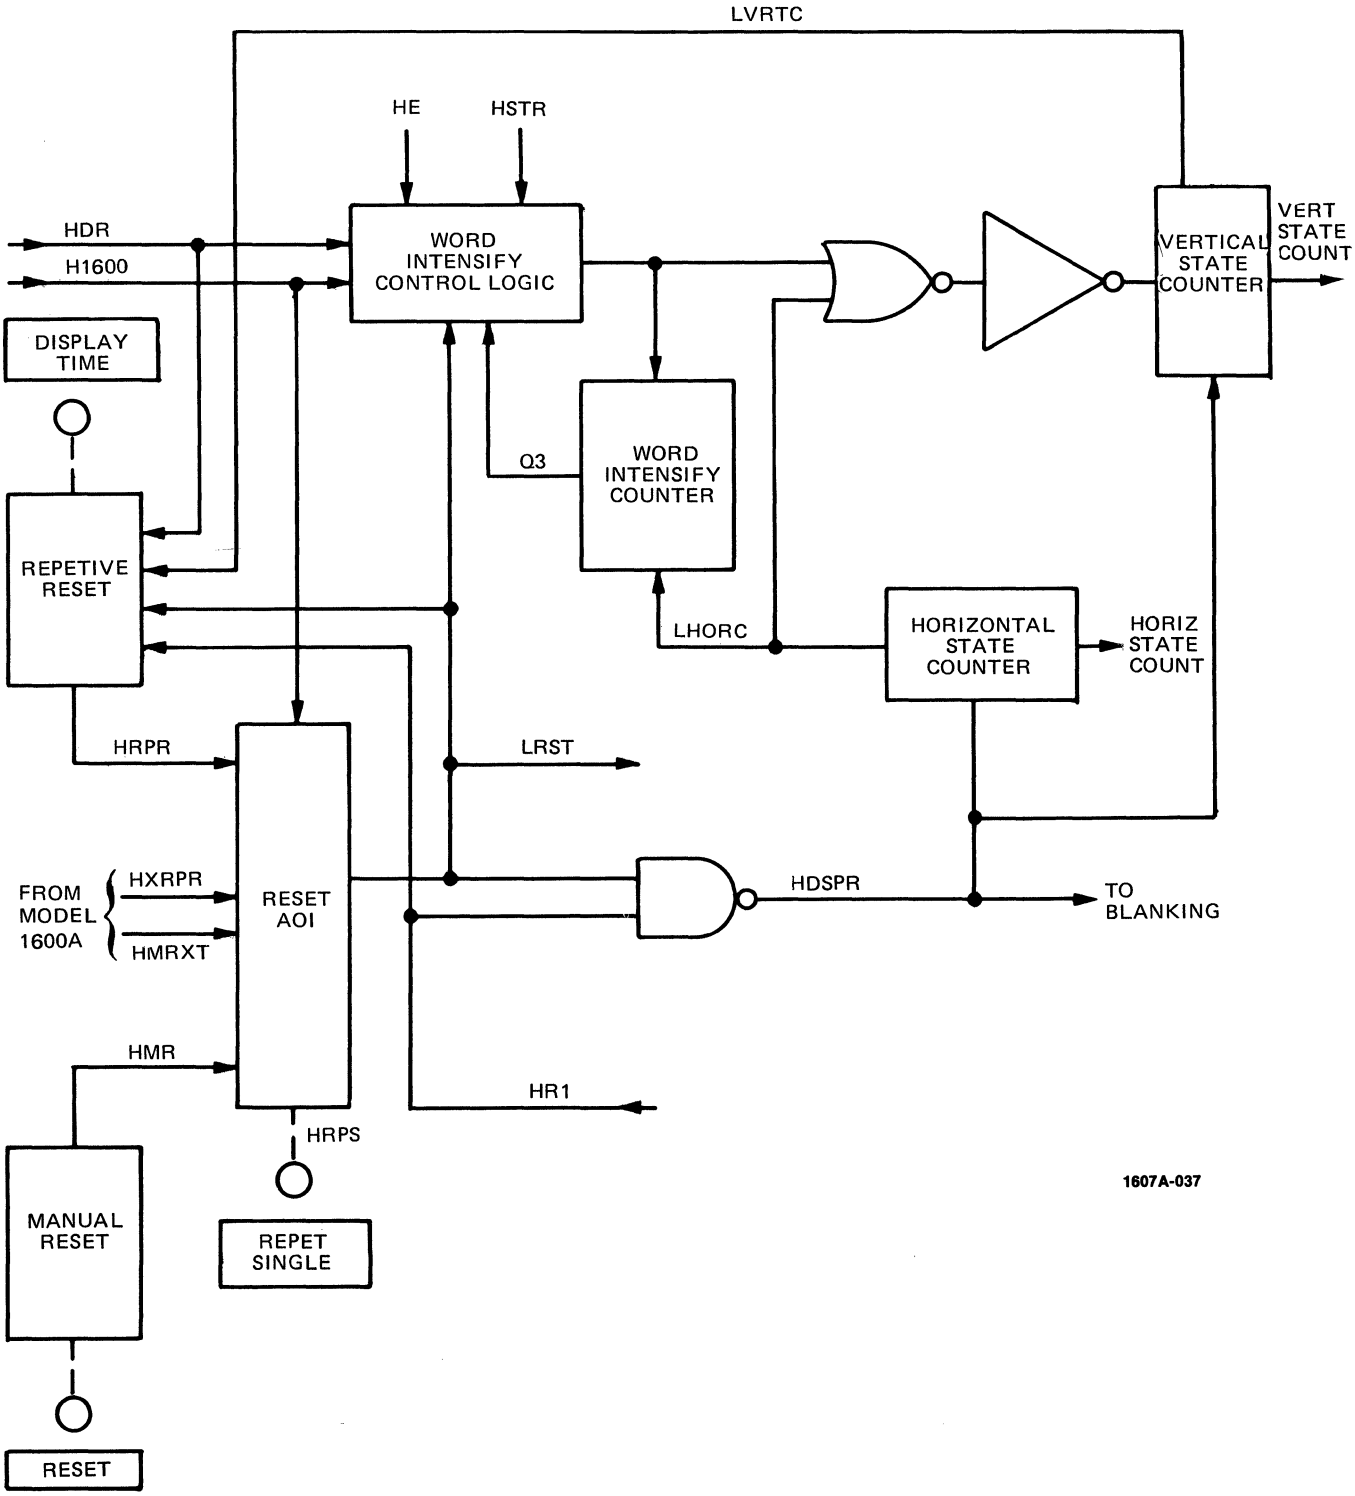

Figure 4-8. Display Reset and Control Block Diagram

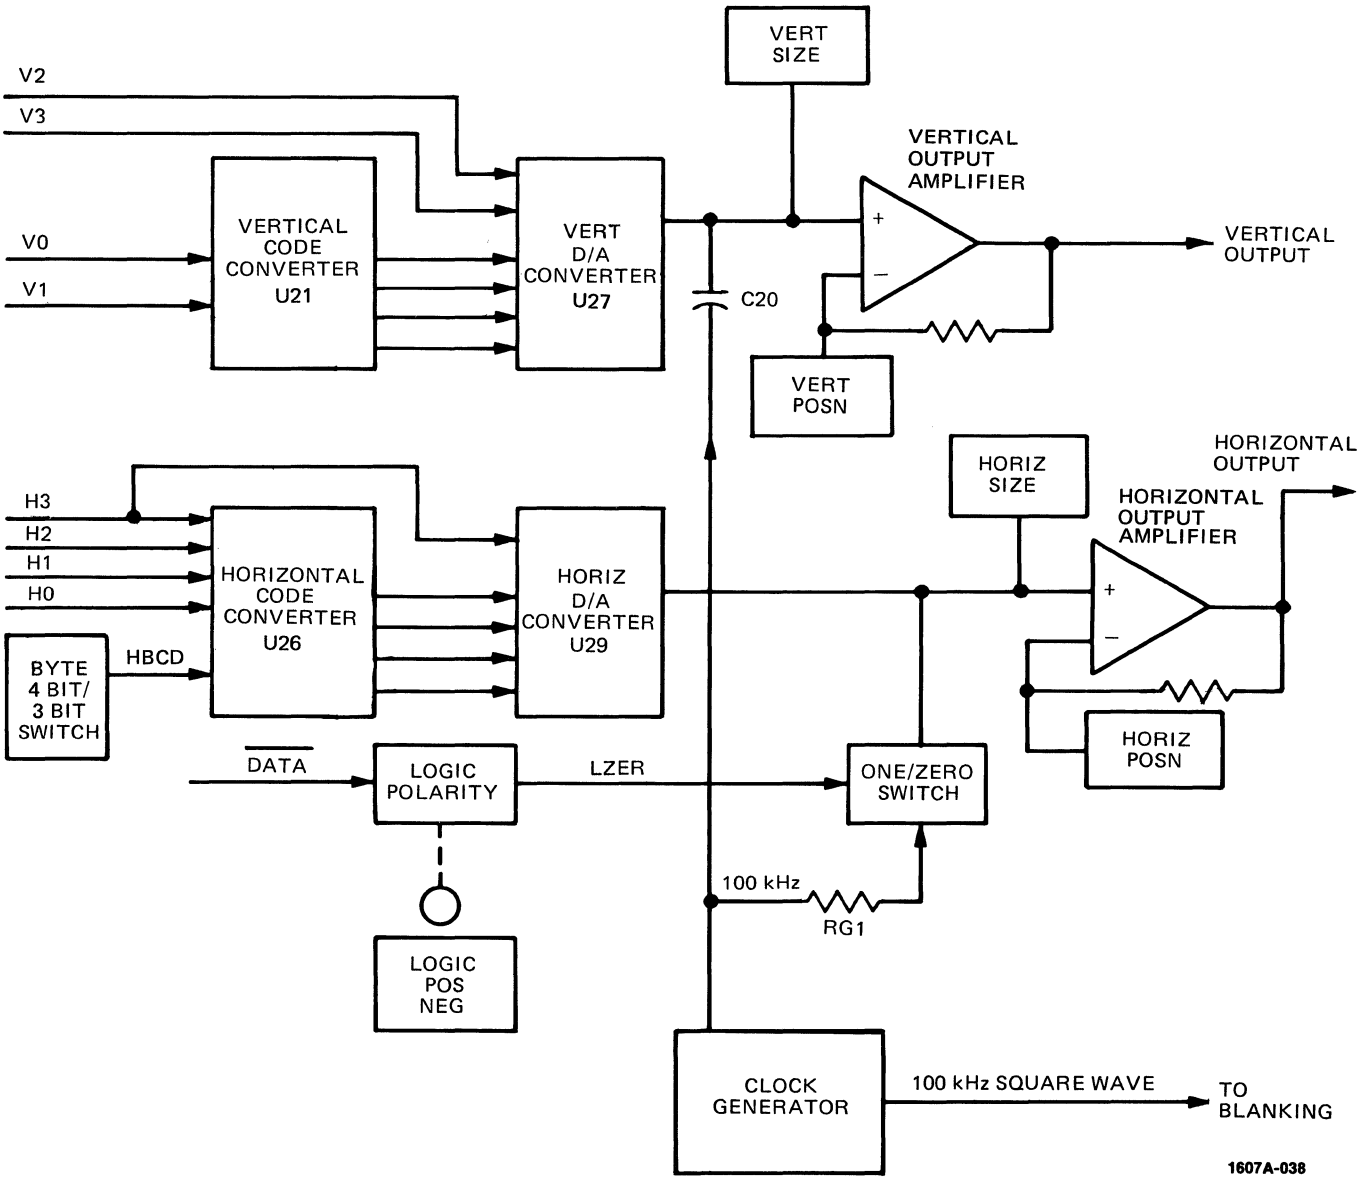

Figure 4-9. Clock Generator and Analog Circuit Block Diagram

4-47. The vertical drive circuitry is composed of the vertical code converter, D/A converter, and output amplifier. V0 and V1 of the vertical state count are applied to the code converter which is a two-input multiplexer. The code converter coverts V0 and V1 to a series of 16 4-bit coded words. The multiplexer output words, together with V2 and V3, are converted by the vertical D/A converter to produce a sixteen-position, staircased, vertical-drive voltage ramp. 100 kHz is superimposed on the vertical ramp for character generation. C20 provides 90 degrees of phase shift with respect to the horizontal 100-kHz sine-wave to generate Lissajous figures.

4-48. The vertical-drive voltage ramp drives an internally-compensated operational amplifier to produce the vertical-drive output. VERT SIZE determines the gain of the amplifier, and thus the vertical size of the characters. VERT POSN provides a variable offset on the output signal that determines the vertical position of the display.

4-49. The horizontal drive circuitry consists of the horizontal code converter (a read-only memory), D/A converter, one/zero switch, and output amplifier. The horizontal state count (H0-H3) and HBCD are applied to the horizontal code converter ROM. The code converter converts H0 through H3 and HBCD to a series of 16 4-bit coded words. HBCD determines the format of the displayed word. When HBCD is HI, the word is displayed in four 4-bit bytes. When HBCD is LO, the word is displayed in five 3-bit bytes with the most-significant bit left over.

4-50. The ROM output words, along with H3, are converted by the horizontal D/A converter to produce

a sixteen-step, staircased, horizontal-drive voltage ramp. 100 kHz is superimposed on the horizontal ramp through the one/zero switch. The one/zero switch is a CMOS transmission gate controlled by LZER. LZER is derived from $\overline{\text{DATA}}$ from the memory/multiplexer circuitry. When an input data bit is to be displayed as a zero, LZER is LO, enabling the 100-kHz sine wave to be superimposed on the horizontal ramp. When an input data bit is to be displayed as a one, LZER is HI inhibiting the application of the 100-kHz sine wave to the horizontal ramp. For each step of the vertical ramp, one sixteen-step horizontal ramp is produced. The horizontal voltage ramp drives an internally compensated operational amplifier identical to the vertical output amplifier. The aspect ratio of the displayed characters (height to width) is determined by R61.

4-51. Blanking. Figure 4-10 is a block diagram of the blanking circuit. The blanking select gate is controlled by a combination of inputs. The column blanking circuit converts the horizontal state count to a dc voltage by means of a discrete D/A converter. The dc voltage is proportional to the bit location in the displayed word. This voltage is compared with the COLUMN BLANKING setting to determine if the bit should be blanked. The column blanking circuit is either HI, indicating the column is to be blanked, or LO indicating the column is to be displayed. The least-significant bit cannot be blanked.

4-52. Another input to the blanking select gate is CLOCK. CLOCK goes HI for two clock generator intervals whenever LHORC occurs. The HI level blanks the CRT for a length of time sufficient to allow the horizontal amplifier (in the oscilloscope or other display that is being used with the Model 1607A) to settle down before writing each line. CLOCK also blanks the CRT when the display section is being reset (HDSPR = HI).

4-53. When no display-qualified clock occurs during an interval longer than 30 ms, HNCQ goes HI. When HNCQ is HI, LSC is LO and the Model 1607A goes into the partial display mode. LSC is combined with HEND+HTRG in NOR gate U1D. Therefore, when the

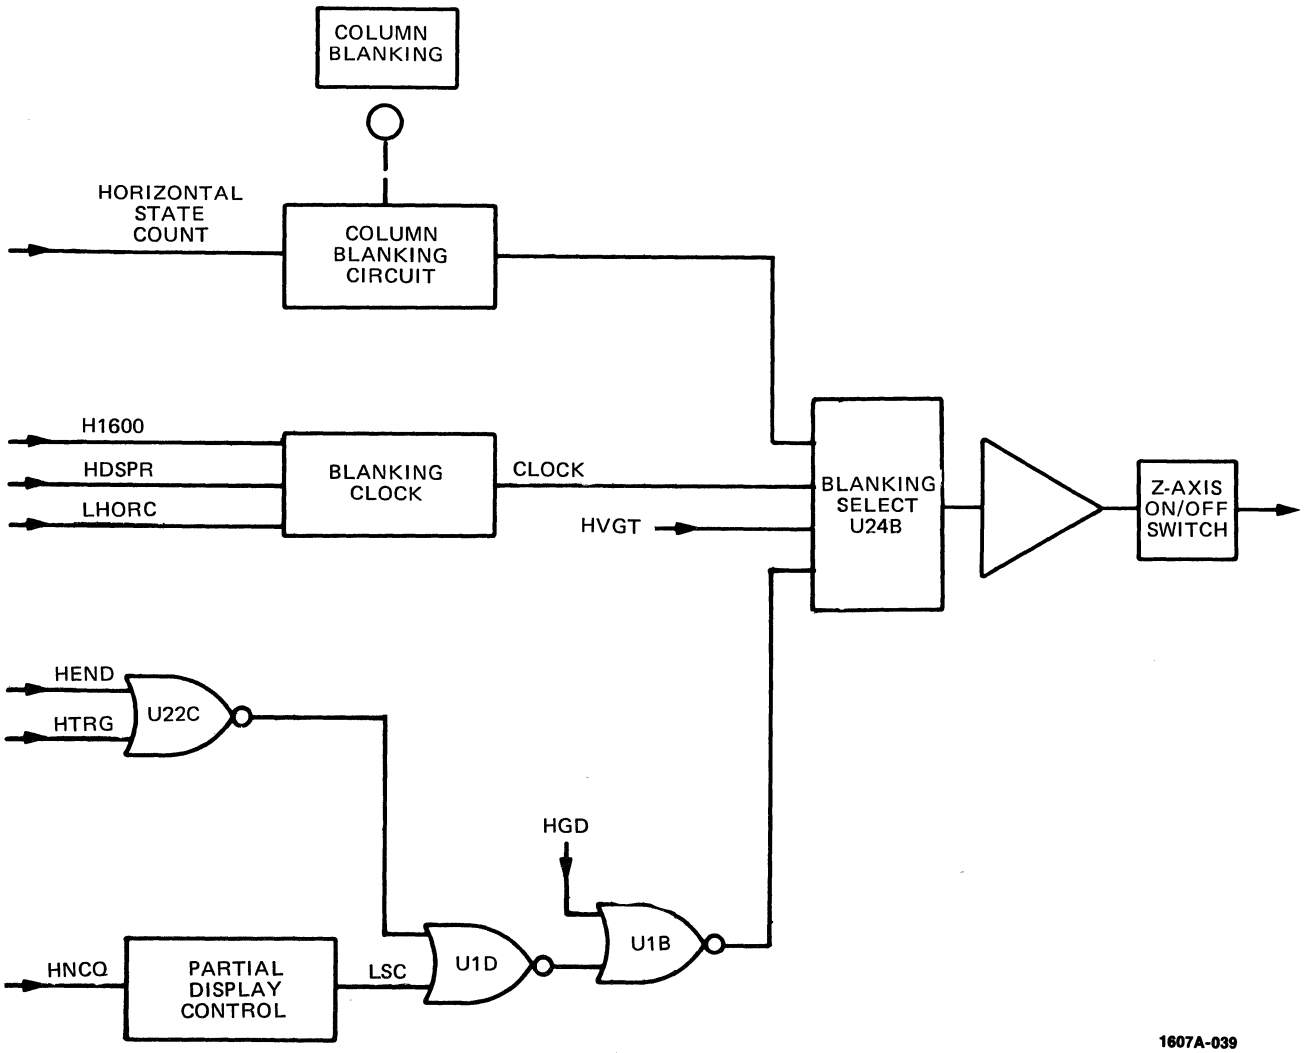

Figure 4-10. Blanking Block Diagram

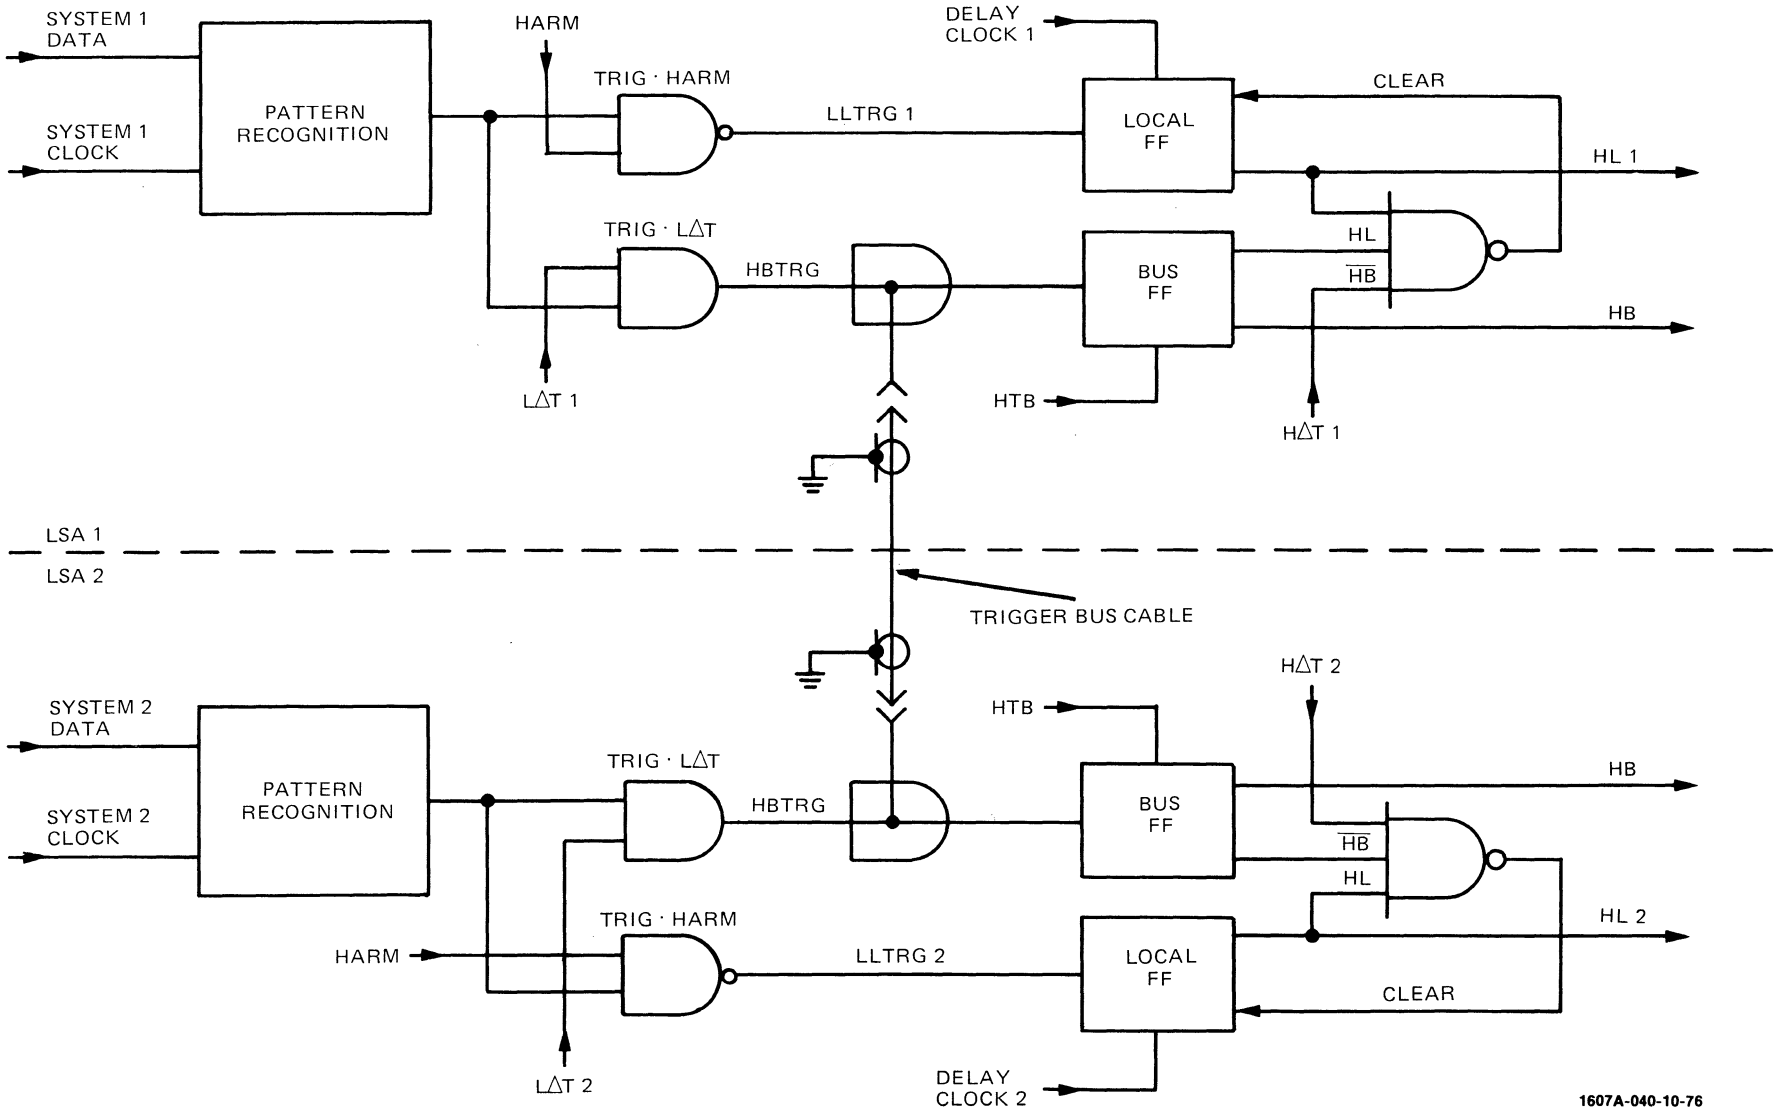

Figure 4-11. Trigger Bus Simplified Schematic

start display mode is selected and trigger word has been detected, LSC gates the output of U1D LO. This enables HGD to control blanking. HGD goes HI only after the trigger word is detected, unblanking the the CRT and allowing data to be displayed. The trigger word is written at the top of the display and the following 15 words are then written on the display one word at a time as they are clocked into the instrument. When end display is selected in the partial display mode, LSC unblanks the CRT allowing data to be displayed one word at a time as it is written into memory. When 16 words have been displayed, the the next word into memory is written in the bottom position and the top word is bumped from the display. This continues until the trigger word is detected, disabling the memory write function. HGD then goes HI, displaying the data in memory until the display section is reset. In the partial display mode, HVGT blanks memory locations which do not contain new data.

4-54. When LSC is HI (the qualified clock rate is greater than 60 Hz) HGD controls blanking.

4-55. DETAILED CIRCUIT DESCRIPTION.

4-56. The following detailed circuit description is limited to circuits that are unique or unusually complicated. No attempt is made to explain basic circuits or circuits using simple combinatorial logic.

4-57. TRIGGER BUS. (See figures 4-11 and 4-12.) The asynchronous trigger-bus circuit allows two logic state analyzers (LSA's) that are operating at different clock rates to be triggered simultaneously. The trigger bus circuit allows the 16-bit trigger words of the Model 1607A and a Model 1600A to describe a 32-bit state (trigger word) that must occur in the two circuits under test simultaneously.

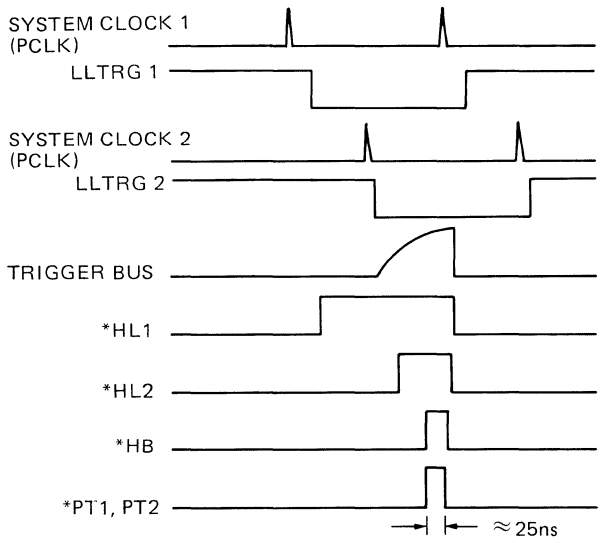

*WAVEFORMS SHOWN ARE TRUE WHEN DELAY IS OFF. WITH DELAY SELECTED, PULSES REMAIN HI UNTIL DELAY IS COMPLETE.

1607A-041-10-76

Figure 4-12. Trigger Bus Timing Diagram

4-58. The clock rates of systems 1 and 2 need not be harmonically or phase related. The only condition that must be met is that the trigger words of both LSA's must occur simultaneously, i.e., HBTRG's in both LSA's are HI at the same time. The trigger-bus circuits in the Model 1607A and the Model 1600A are identical. The open collector AND of the two trigger-bus circuits, formed through the trigger bus cable results in the 32-bit trigger word.

4-59. HBTRG rises when LLTRG1 and LLTRG2 occur simultaneously, setting the bus flip-flop. The pattern trigger outputs (PT) in both LSA's occur when both the local and bus flip-flops are set (HB•HL). The local flip-flop is set when the local trigger conditions are met and the delay clock rises. When the local flip-flop in either LSA is set and the bus flip-flop is not set, the local flip-flop is cleared when the next system clock (PCLK) occurs, i.e., during LΔT. Thus, residues of local trigger conditions in either LSA are not carried over from one clock cycle to the next.

4-60. The dependence of the individual LSA on the trigger bus is determined by HTB. Whenever the LOCAL/BUS switch on an LSA is set to LOCAL, HTB is LO. HTB=LO holds the bus flip-flop in the clear state, forcing HB HI. Therefore, LSA operation is dependent only on local trigger conditions.

4-61. LΔT clears the trigger bus at the beginning of the PCLK cycle through AND gates A1U25A and A1U25C in either LSA. Thus, with the trigger word turned off or during periods where the trigger conditions are met for multiple clock cycles, HBTRG will occur on each system clock, setting the bus flip-flops and generating pattern triggers.

4-62. DISPLAY QUALIFIER. (See figure 4-13 and schematics 5, 6, 8, and 9.) The display qualifier permits selective viewing of data in a parallel digital system, such as a computer or microprocessor, by allowing data to be clocked into the Model 1607A only when the inputs on the qualifier channels are true. For example, the two qualifier channels could be used to decode status lines in a computer system so that the Model 1607A would clock data into memory only when instructions are present on the monitored bus. Thus, the Model 1607A would display only instruction words and ignore all other data on the bus.

4-63. The display qualifier circuit functions in the following manner. Qualifier status (Q0, Q1) is stored in temporary storage flip-flops for one period of the system clock (PCLK). During this time interval, the qualifier status is tested against the qualifier conditions preset by the front-panel Q1/Q0 switches. When the qualifier status agrees with the preset conditions, HCLQ changes to a high level. HCLQ remains high

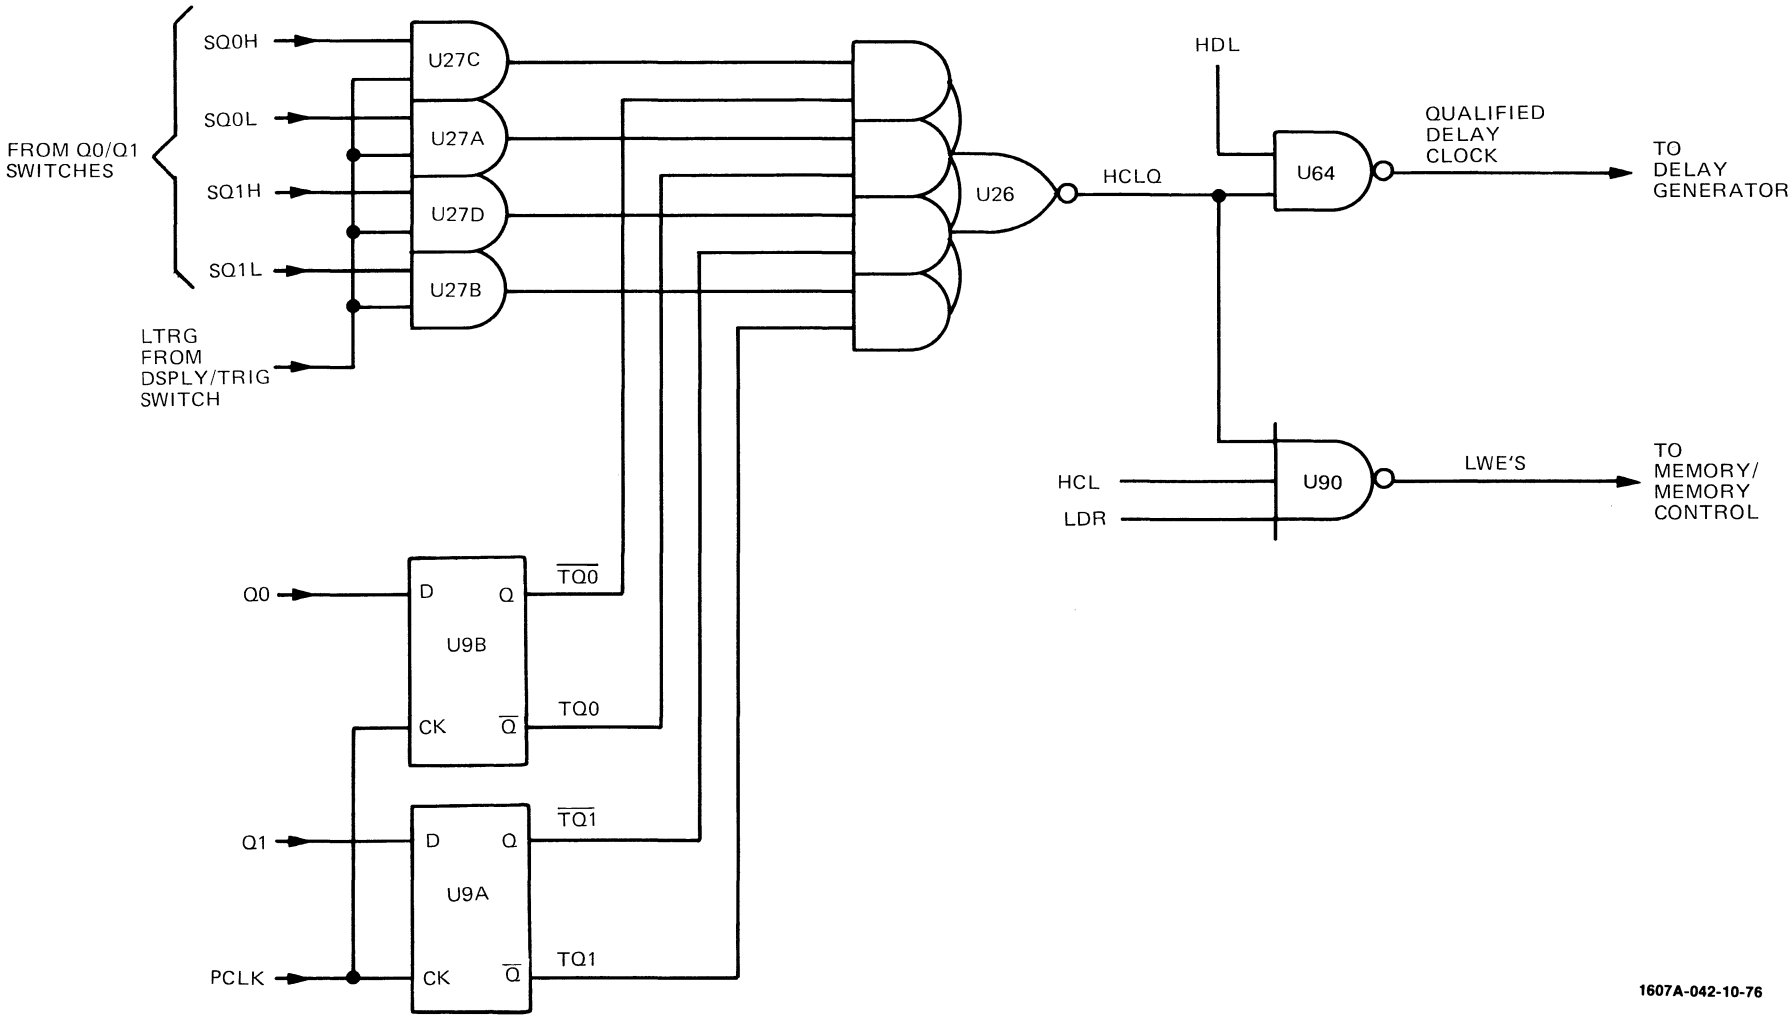

Figure 4-13. Simplified Display Qualifier Circuit

until either the status lines change or the qualification conditions are changed.

4-64. The delay clock and LWE1 have a fixed time relationship to PCLK set by the timing generator. The time relationship of HDL and HCL to PCLK make it possible to gate the two clock signals with HCLQ. Whenever HCLQ is high, HDL is gated through to the delay generator. During a data acquisition cycle, LDR is false. HCLQ then allows HCL to clock A1U90, generating LWE1 and LWE2. LWE equals $\overline{HCLQ \bullet LDR \bullet HCL}$. The NAND of HCLQ with HDL permits the delay generator to count only those clocks which occur when the qualifier conditions are true. The LWE pulses allow the Model 1607A to write into memory only data that occurs when the qualifiers are true.

4-65. In addition, the comparison of the qualifiers with the preset qualifier conditions is ANDed with the trigger recognition. Thus the Model 1607A can generate a pattern trigger only when the qualifiers are true. When the TRIG qualifier mode is selected, HCLQ is held in the true state by LTRQ.

4-66. DELAY GENERATOR. (See schematic 6.) The delay generator consists of two sections: the units-decade counter A1U70, and the four upper-decade counters A2U73 through A2U76. When the local and bus flip-flops are set (HB and HL are true), the units-decade counter is enabled, i.e., CEP and CET inputs are high. The clock for A1U70 is the NAND of HCLQ and HDL (A1U64, pin 8). When A1U70 reaches a binary count of 8, its Q3 output goes high. The Q3 output of A1U70 is routed to AOI gate A1U87 to provide the upper-decades clock. The upper-decades clock is a divide-by-ten of the delay clock. The Q3 output of A1U70 is also combined with the $\overline{Q}$ output of flip-flop A1U84A in AOI A1U81. When the upper-decade counters have reached terminal count (A1U84A, $\overline{Q}$ is HI), A1U81A, pin 8 goes low when A1U70, Q3 is high. This allows A1U84B to change states on the next delay clock, generating HDC.

4-67. When the TC output of the most significant decade (MSD) A1U76 occurs, the tens-decade counter A1U73 counts eight more clocks, setting its Q3 output HI. The NAND of the tens-decade Q3 output with the TC output of the MSD parallel enables the upper-decade counters. During the next TC output of A1U70, A1U84A is enabled to change states (through A1U66B). On the delay clock, the $\overline{Q}$ output of A1U84A goes high. This indicates that the upper-decade counters have reached terminal count. When the Q3 output of A1U70 goes low, the upper-decades of the delay generator are preset to the nines complement of the delay thumbwheel switch settings.

4-68. Functionally, A1U84A and A1U84B can be viewed as state nine of the tens-decade counter and the units-decade counter respectively. Assume the DELAY thumbwheels are set to 90. The upper-decade counters count 80 clocks and then are preset. Flip-flop A1U84A is latched, retaining the fact that the upper decades have reached terminal count. Units-decade counter A1U70 counts to 8 and is then preset. While A1U70 is being preset, A1U84B performs the last count for the units-decade. Therefore, the delay generator is ready to count again on the next clock pulse.

4-69. When the upper-decades of the DELAY thumbwheel switches are all set to zero, NAND gate A1U78 sets the $\overline{Q}$ output of A1U84B HI. Thus HDC occurs as soon as the units-decade completes its count. When all thumbwheel switches are set to zero, NAND gate A1U66A holds HDC HI. When the DELAY ON/OFF switch is set to OFF, LNDLY holds HDC in the HI state.

4-70. TRIGGER GENERATOR. (See schematic 6.) The trigger generator consists of the trigger arm flip-flop, the bus flip-flop, the local flip-flop, and some associated combinatorial logic.

4-71. When the NORM/ARM switch is set to NORM, LARM and HARM are held in the true state. When the NORM/ARM pushbutton is set to ARM, the occurrence of an external arming pulse clocks the arm flip-flop, generating LARM and HARM. When LARM and HARM are true, the local and bus flip-flops are enabled to operate until a trigger word is detected (HB and HL go true) and the delay is complete (HDC goes true). HB and HL are ANDed by A1U63C and A1U62A to generate PT (pattern trigger ontput pulse). HB•HL presets flip-flop A1U71B which generates HPTS. HPTS indicates the presence of a trigger and is a control signal for the NO TRIG indicator light. A1U71B is clocked clear when either HB or HL is false.

4-72. At the completion of the digital delay, the AND of HDC with HB and HL in NAND gates A1U69C and A1U62B generates the delayed trigger output (DT). DT remains HI for approximately 25 ns (determined by capacitor A1C30 and A1U63B). The trailing edge of the delayed trigger terminates the pattern-trigger output. HL•HB•HDC resets the trigger, arming, and terminal count flip-flops through A1U77 and A1U65.

4-73. DATA ACQUISITION SYNCHRONIZER. (See schematic 6.) Monostables A1U61 and A1U68A/B generate a timing sequence used to reset the delay and trigger generators to their initial conditions (waiting for a trigger). The three monostables also force the thumbwheel settings to be loaded into the decade counters. On the negative-going edge of LRST, A1U61 provides a low-level signal approximately 1 μs in width. This signal disables the delay clock AOI A1U64. A1U68A outputs a high-level signal (HRES) that resets the local, bus, arming, and terminal-count flip-flops and parallel enables the decade counters. During the time HRES is true, HRCL clocks the delay generator through A1U64, loading the nines-

complement of the DELAY thumbwheel switch settings into the decade counters.

4-74. TIMING GENERATOR. (See schematic 7.) The timing generator provides four timing signals used in the data acquisition section of the Model 1607A. HΔT is used in the reset circuitry for the local flip-flop. LΔT is a clock signal for the pattern recognition circuit and memory index and control. HCL is a clock signal used in memory index and control, and memory. HDL is the clock for the delay generator and is also used in the data index and control circuit.

4-75. The timing diagram for the four timing signals is shown on schematic 7. The negative-going LΔT pulse remains LO for an interval of time determined by transistor array A1U45 and the time constants of A1R48, A1R49, and A1C33. Shortly before the positive-going transition of LΔT, the output of A1U45, pin 8, clocks J/K flip-flop A1U43B and resets LΔT (A1U42, pin 10). The $\overline{Q}$ output of A1U43B goes HI, generating HCL. HCL remains HI for approximately 25 ns. Shortly after the positive-going edge of HCL, HDL goes HI. The negative-going transition of HDL occurs 5 ns before the negative-going transition of HCL. The widths of the timing signals and the time relationship between them are determined by A1C33 (LΔT), A1C37 (HDL), A1C41 (HCL), and A1R49 (LΔT). A complete adjustment procedure for the timing generator is provided in Section V.

4-76. All three circuits in the timing generator operate essentially in the same manner. When the input to the transistor array goes LO, its emitters ramp down at a rate determined by the RC network tied to the emitters. The ramp continues until it reaches threshold voltage minus V_{be} of the second transistor in the pair. The threshold voltage is approximately 0.5 volt and is supplied by A1U44, pin 10. When the emitters reach threshold voltage minus V_{be}, the undriven transistor turns on. The collector of the undriven transistor then goes LO presetting the flip-flop. A1U42A/B form an RS flip-flop, and A1U43A and A1U43B are JK flip-flops.

4-77. As soon as the flip-flop is preset, the input to to the transistor array goes HI, pulling the emitter up. When the emitters go up, the undriven transistor turns off and the timing generator waits for another PCLK.

4-78. MEMORY/MULTIPLEXER. (See schematic 8.) The memory/multiplexer circuit consists of four random access memories (RAM's) that store the incoming data from the system under test, associated memory address control circuitry, and a multiplexer that serializes the parallel memory outputs for display on the CRT.

4-79. Memory. A1U28, A1U30, A1U32, and A1U34 are random access memories. Inverters A1U29, A1U31 and A1U33 delay the data from the temporary storage flip-flops to provide proper time relationships between the data and other operations in the data acquisition section. Write address counter A1U60 addresses memory during a write operation. The computed address (CA0-CA3) addresses memory during a read operation. AOI's A1U54, A1U55, A1U56, and A1U57 switch between the computed address and the write address counter.

4-80. The AOI's are controlled by several signals. When LDR and HDR* are true (Model 1607A in a display cycle), the AOI's point to the computed address. When the Model 1607A is in a data acquisition cycle, address selection is a function of the clock rate and the display qualifiers. If HCLQ or HSWA is LO, the AOI's point to the computed address. If HCLQ and HSWA are both HI, the AOI's point to the write address counter.

4-81. HSWA is generated by JK flip-flop A1U46B. A1U46B is controlled by LWE1 and LΔT. LΔT presets the flip-flop, generating HSWA and LSWA. LWE1 goes LO shortly after the positive-going edge of LΔT. On the positive-going edge of LWE1, A1U46B is clocked, forcing HSWA and LSWA false. The data stored in the temporary storage flip-flops is written into memory during the time interval that LWE1 and HSWA are true. The width of HSWA is 60 nanoseconds.

4-82. The operation described in the preceding paragraph can occur only at clock rates less than 15 MHz. When the qualified clock rate exceeds 15 MHz. LΔT's overlap the LWE1's and flip-flop A1U46B is never cleared out. Therefore HSWA and LSWA remain in the true state.

4-83. Thus, at clock rates below 15 MHz, the memory is addressed by the computed or display address between write cycles. The partial display mode which occurs at clock rates below 60 Hz utilizes this feature.

4-84. Multiplexer. Multiplexer A1U39 serializes the parallel output of the memories for display on the CRT screen. The horizontal state count sequences through the 16 parallel bits on the multiplexer input and provides a serial representation of the 16 bits at its output with bit 0 first.

4-85. DATA INDEX AND CONTROL. (See schematic 9 and figure 4-14.)

4-86. Reset. At the end of a display cycle LRST resets the data index and control circuit and initializes a data acquisition cycle. The trailing-edge of LRST clocks JK flip-flop A1U93A, setting HR1 and LRHS in the true state. LRHS resets the start flip-flop U88C/U91 and pulls the J input of flip-flop A1U89B LO. HR1 pulls the J input of flip-flop A1U93B and the K input of A1U89B HI. HR1 is also routed to the display section where it performs several functions. The first LΔT after LRST sets JK flip-flop A1U93B. The $\overline{Q}$ output of A1U93B (LR2) resets the end flip-flop

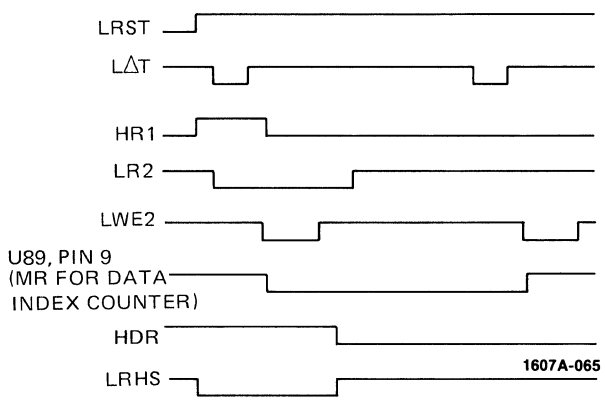

Figure 4-14. Data Index and Control Reset Timing Diagram

A1U92/U88B. The negative-going transition of the first LWE after LRST clocks the Q output of A1U89B HI. The Q output of A1U89B resets the data index counter A1U94 and stops the clock to terminal-count flip-flop A1U94B. LWE2 presets flip-flop A1U93A and clears A1U94A. On the trailing-edge of LWE2, HWE clears out flip-flop A1U89A which sets HDR LO. This causes the K input of A1U93A to go LO, prohibiting any additional LRST's.

4-87. On the next LΔT, A1U93B is cleared by the negative-going transition. On the negative-going transition of LWE2, A1U89B is cleared. This releases the data index counter master reset line. LWE2 also enables NAND gate A1U96A to pass HDL's.

4-88. Start Display Mode. In the start display mode, HSTR enables flip-flop A1U88C/A1U91. When LRHS is HI and a trigger word is detected (HB•HL•HDC), LTRG and HTRG go true. HTRG enables the data index counter to start counting qualified clocks. Count 14 of the data index counter is detected by NAND gate A1U96C, which applies a high level to the input of JK flip-flop A1U94B. On the next clock after state 14, A1U94B counts the 15th state. The $\overline{Q}$ output of A1U94B parallel enables the data index counter, locking it in the terminal count state. Thus, the data index terminal count is generated by A1U94B. This reduces the propagation delay from clock to terminal count of the data index counter. At the same time that the data index counter is parallel enabled, HTC sets the end flip-flop. This generates LDR which turns off further LWE's so that data is no longer written into memory. LDR indicates to the display section that memory is loaded with good data by presetting flip-flop A1U89A through NAND gate U96B. This generates HDR, which initiates a display cycle.

4-89. End Display Mode. In the end display mode, HSTR is LO which holds the start flip-flop preset. This holds LTRG and HTRG* in the true state. Thus, the first LWE2 after LRST increments the data index counter. When the data index counter reaches terminal count (HTC is true), the end flip-flop waits for HB, HL and HDC. When a trigger word is detected and the digital delay is complete, HDC•HB•HL•HTC sets the end flip-flop which generates LDR. LDR does not occur until the memory index counter is in the TC state indicating a full memory.

4-90. Read Address Computation. During the display cycle, the memory data read to the display section is addressed by the computed address (CA0-CA3). The computed address is derived in four-bit adders A1U58 and A1U59. A1U58 and A1U98A through A1U98D subtract the data index count from the write address count (WA0-WA3). The difference appears on the four sum outputs of A1U58. This difference is the address of the memory location containing the first word acquired during the data acquisition cycle. The first word address is added to the vertical state count in A1U59. The output of A1U59 is the computed address which is the sum of the first word address and the vertical state count.

4-91. During a partial display, the data index counter and write address counter are incremented; but the first word address will not change as long as there are fewer than 16 words in memory. As soon as 16 words are written into memory in the end display mode, the data index counter value becomes a fixed constant. However, the write address counter will continue to be incremented. Thus, the first word address changes. The instrument then keeps adding words at the bottom of the display and bumping a word out the top. This results in rolling the display on the CRT screen. As soon as the trigger word is detected, LWE2 is turned off and the write address counts stops counting. Thus, the output of U58 becomes constant. The output of A1U59 now changes as a function of the vertical state count.

4-92. HVGT Comparator. Comparator A1U97 compares the data index count with the vertical state count. Whenever the vertical state count exceeds the data index count, HVGT is true. HVGT indicates to the display section that the data stored in the memory location currently being addressed has not been updated during the present data acquisition cycle and is therefore invalid. The CRT is blanked whenever HVGT is true.

4-93. Manual Reset. Whenever a manual reset occurs, HMR* sets the end flip-flop, forcing LDR to the true state. HMR* also toggles JK flip-flop A1U94A. This generates HRBL, forcing HVGT HI. HVGT blanks the CRT. HMR* is followed by LRST which resets the data index and control circuit.

4-94. WORD INTENSIFY CIRCUIT. (See schematic 11.) The word intensify circuit determines when the vertical state count is addressing the trigger word location in memory. When the vertical state count addresses the trigger word, the trigger word intensify comparator A1U86 generates HE. HE is applied to the word intensify control logic (schematic 12). When HE is HI, the word intensify control logic causes the current

word being addressed in memory to be intensified on the display.

4-95. Multiplexer A1U83 and 4-bit adder A1U79 perform a code conversion on the DELAY thumbwheel switch outputs. A1U79 performs the following addition of the thumbwheel switch outputs:

	2D3	$\overline{1D3}$	1D2	1D1
+	2D0	$\overline{2D0}$	1	2D0
Carry (C4)		Σ3	Σ2	Σ1

where 1D1-1D3 are units-decade switch output bits 1-3, and 2D0, 2D3 are tens-decade switch output bits 0 and 3.

The outputs of the adder are applied to the I_0 inputs of multiplexer A1U83, and $\overline{HSTR}$ is applied to the I_1 inputs of the multiplexer.

4-96. Selection of either the I_0 data from the adder or I_1 data from NAND gate A1U85B for output by the multiplexer is determined by the output of NAND gate A1U85C. I_0 data is selected when the output of A1U85C is LO; I_1 data is selected when the output of A1U85C is HI. A1U85C is LO only when LNDLY is false and the selected delay is 15 or less. Therefore, in the end display mode with a selected delay of 15 or less, the vertical state count is compared with the output code from the adder. When they match, the A = B output (HE) of comparator A1U86 goes HI. When the delay is greater than 15, the A4 input of A1U86 is LO, forcing HE to the false state.

4-97. When the start display mode is selected, the comparator is enabled only when the delay is set to 0. For all other delays, the A4 and B4 inputs of the comparator are held at different levels; holding HE false.

4-98. When LNDLY is true, the select input of the multiplexer is held HI. Therefore the multiplexer always points to the I_1 inputs. With HSTR true, the I_1 inputs are all LO, causing the first word on the display to be intensified. With HSTR false, the I_1 inputs are all HI, causing the last word on the display to be intensified.

Table 4-1. Model 1607A Mnemonics

MNEMONIC	FUNCTION	ORIGIN
AM0-AM15	Memory output data. Data stored in memory for display.	Schematic 8, A1U28, A1U30, A1U32, A1U33 PINS 5, 7, 9, and 11
ARM	Arming input signal from TRIG ARM IN connector.	Schematic 6, TRIG ARM IN Connector J3
CLOCK	50 kHz display clock. CLOCK provides clock signal for horizontal state counter and blanking.	Schematic 14, A2U14D, PIN 11
CA0-CA3	Computed Address. Memory address used to read memory during display cycle. Computed address = vertical state count + (Write Address Count - Data Index Count).	Schematic 9, A1U59, PINS 2, 6, 9, and 15
$\overline{DATA}$	Serialized data output from memory used to derive LZER and XDSPD.	Schematic 8, A1U39, PIN 10
DT	Delayed Trigger. Trigger generator output signal applied to DELAYED TRIG OUT connector.	Schematic 6, A1U62B, PIN 8
D0-D15	Input data bits 0 through 15 from Data Probes.	Schematic 3, A1J2, PINS 13 - 16; A1J3, PINS 11 - 16; A1J4, PINS 11 - 16
HARM	HI, Armed. Complement of LARM.	Schematic 6, A1U71A, PIN 7
HARME	HI, Arm Enable. Data acquisition control signal (dc level). HARME = HI when NORM/ARM is set to ARM position (in). When HI, the Model 1607A must be armed before it will recognize a trigger.	Schematic 10, NORM/ ARM Switch A2S2D

Table 4-1. Model 1607A Mnemonics (Cont'd)

MNEMONIC	FUNCTION	ORIGIN
HB	HI, Bus. Data acquisition control signal. HB = HI when bus flip-flop is set.	Schematic 6, A1U67A, PIN 7
HBCD	HI, BCD. Display control signal (dc level) for Horizontal Code Converter U26. When HI, displayed word format is four four-bit bytes. When LO, displayed word format is five three-bit bytes with MSB left over.	Schematic 13, BYTE 4 BIT/3 BIT switch A2S1E
HBR	HI, Brighten. Control signal to Model 1600A HBR = HI indicates current displayed character in table B should be intensified.	Schematic 12, A2U23E, PIN 12
HBTRG	HI, Bus Trigger. Trigger signal (HI state) indicating both Model 1607A and Model 1600A Trigger words have occurred simultaneously in the trigger bus mode.	Schematic 5, A1U25B, PIN 8
HCL	HI, Clock. Clocking signal from timing generator used to clock data index and control. HCL is derived from PCLK.	Schematic 7, A1U43B, PIN 7
HCLQ	HI, Clock Qualifier. DSPLY qualification signal. HCLQ is HI when DSPLY qualifier requirements are met.	Schematic 5, A1U26, PIN 8
HDC	HI, Delay Complete. Data acquisition control signal. HDC = HI when delay generator has counted out the delay set on DELAY thumbwheels.	Schematic 6, A1U84B, PIN 9
HDL	HI, Delay Clock. Clocking signal from timing generator used to clock delay generator. HDL is derived from PCLK.	Schematic 7, A1U43A, PIN 6
HDR	HI, Data Ready. HI state occurs at the end of a data acquisition cycle.	Schematic 9, A1U89A, PIN 5
HDR*	HI, Data Ready*. Memory Address control signal indicating trigger word has been found and memory is loaded with valid data. When HI, HDR* enables reading of memory by display section.	Schematic 9, A1U88B, PIN 8
HDSPR	HI, Display Reset. Reset signal for all display functions.	Schematic 12, A2U14E PIN 4
HΔT	HI, Delta T. Clocking signal for local flip-flop reset gate. HΔT is derived from PCLK.	Schematic 7, A1U42A, PIN 6
HE	HI, Equal. Control signal for word intensify circuit. HI when trigger word is being addressed by display section.	Schematic 11, A1U86, PIN 14
HEND	HI, End. Display control signal (dc level). HEND = HI when END DSPL is selected. HEND = LO when START DSPL is selected.	Schematic 10, START DSPL Switch A2S2B
HGD	HI, Good Data. True state indicates current data in memory is valid and should be displayed. HGD = HDR • $\overline{\text{HR1}}$ latched at end of each display cycle.	Schematic 2, A2U23F, PIN 15
HMAP	HI, Map. Control signal for delay generator and data index and control. HMAP is always LO.	Schematic 12, GND

Table 4-1. Model 1607A Mnemonics (Cont'd)

MNEMONIC	FUNCTION	ORIGIN
HMR	HI, Manual Reset. Manual reset pulse. HMR goes HI on trailing edge of HMR*.	Schematic 12, A2U4A. PIN 3
HMR*	HI, Manual Reset*. Manual reset signal for data index and control circuit.	Schematic 12, A2U4A, PIN 3
HMRXT	HI, Manual Reset External. External manual reset pulse from Model 1600A.	Schematic 15, I/O PORT Connector J5, PIN 16
HNCQ	HI, No Clock or No Qualifier. Signal used to derive LSC. HNCQ = HI when no qualified clock has occurred for more than approximately 20 ms.	Schematic 10, A1U47C, PIN 8
HNQL	HI, No Qualifier. NO QUAL indicator light control signal. HNQL = HI when no display qualifier has occurred for more than approximately 100 ms.	Schematic 10, A1U49C, PIN 10
HNTRG	HI, No Trigger. NO TRIG indicator light control signal. HNTRG = HI when no trigger has occurred for more than approximately 100 ms.	Schematic 10, A1U49A, PIN 1
HPTS	HI, Pattern Trigger Stored. Control signal for indicator light logic. When HPTS is HI, NO TRIG light is held off.	Schematic 6, A1U71B, PIN 10
HRBL	Hi, Reset Button Latched. Data index control signal. When HRBL goes HI, HVGT is forced HI.	Schematic 9, A1U94A, PIN 5
HRECL	HI, Reset Clcok. Clocking signal for digital delay and trigger generator during reset function (LRST = LO).	Schematic 6, A1U68B, PIN 6
HRES	HI, Reset. Reset pulse used in digital delay and trigger generator circuit. HRES is derived from LRST.	Schematic 6, A1U68A, PIN 10
HR1	HI, Reset 1. When HI, HR1 indicates that a reset has been requested and will happen on next input clock.	Schematic 9, A1U93A, PIN 6
HRPS	HI, Repetitive selected. Display control signal (dc level). HRPS = HI when REPET/SINGLE switch is set to REPET.	Schematic 12, REPET/ SINGLE Switch A2S1B
HSSS	HI, Single Sample Start. Disables HVGT at instrument turn-on ensuring display on CRT in SINGLE mode. HSSS = HI at instrument turn-on. Once reset occurs, HSSS remains LO.	Schematic 12, A2U19E, PIN 12
HSTR	HI, Start. Data acquisition/display control signal (dc level). HSTR = HI when START DSPL is selected.	Schematic 10, END DSPL Switch A2S2C
HSWA	HI, Select Write Address. Address control signal. When HSWA is HI, memory is addressed by write address counter.	Schematic 8, A1U46B, PIN 9
HL	HI, Local. Data acquisition control signal. HL = HI when local flip-flop is set.	Schematic 5, A1U67B, PIN 9

Table 4-1. Model 1607A Mnemonics (Cont'd)

MNEMONIC	FUNCTION	ORIGIN
HTB	HI, Trigger Bus. Data Acquisition control signal (dc level). HTB = HI when SRC LOCAL/BUS switch is set to BUS. When HI, Model 1607A will trigger only when its trigger word and the Model 1600A trigger word are true simultaneously in the trigger bus mode.	Schematic 10, SRC LOCAL/BUS Switch A2S2E
HTC	HI, Terminal Count. Data index control signal. HTC = HI when data index counter is at terminal count.	Schematic 9, A1U94B, PIN 9
HTRG	HI, Trigger. HTRG goes HI when trigger word is found and remains HI until data acquisition section is reset.	Schematic 9, A1U88D, PIN 11
HTWO	HI, Trigger Word ON. Data acquisition control signal (dc level). HTWO enables TRIGGER WORD switches. HTWO = HI when OFF/WORD switch is set to WORD (in position).	Schematic 10, WORD OFF/ON Switch A2S2F
HVGT	HI, Vertical Greater Than. Display control signal to blank CRT when display section addresses invalid data in memory. HVGT = HI when vertical state count is greater than data index count.	Schematic 9, A1U97, PIN 15
HWE	HI, Write Enable. Data index control signal. HWE = HCLQ • HCL • LDR	Schematic 9, A1U88A, PIN 3
HXRPR	HI, External Repetitive Reset. External repetitive reset signal from Model 1600A.	Schematic 15, I/O PORT J5, PIN 17
H0-H3	Horizontal State Count. Each four-bit word indicates address of a specific bit of current displayed word.	Schematic 12, A2U25, PINS 3, 2, 6, and 7
H1600	HI. H1600. Control signal from Model 1600A derived from L1600. H1600 = HI when Model 1607A is connected to Model 1600A via I/O Bus.	Schematic 12, A2U15B, PIN 4
LARM	LO, Armed. Control signal for trigger generator circuit and indicator and control logic. LARM = LO when ARM and HARME are both HI, or when HARME = LO.	Schematic 6, A1U71A, PIN 6
LBNK	LO, Blank. Display blanking control signal. Display is blanked when LBNK = LO.	Schematic 14, A2U23A, PIN 2
LCLQ	LO, Clock Qualified. Complement of HCLQ.	Schematic 5, AU41C, PIN 8
LDR	LO, Data Ready. Control signal used to initiate display cycle. LDR goes LO when data acquisition is complete.	Schematic 9, A1U92, PIN 8
LDSPR	LO, Display Reset. Model 1600A table B reset signal. Used in I/O Bus operation.	Schematic 2, A2U19C, PIN 6
LΔT	LO, Delta T. Clocking signal for pattern recognition, data index and control, and memory. LΔT is derived from PCLK.	Schematic 7, A1U42B, PIN 8
LECMP	LO, Enable Compare. Enable signal for trigger word intensify comparator A1U86.	Schematic 5, DSPLY/ TRIG Switch A1S1C

Table 4-1. Model 1607A Mnemonics (Cont'd)

MNEMONIC	FUNCTION	ORIGIN
LHORC	LO, Horizontal Carry. Carry output from horizontal state counter. LHORC = 0 occurs following writing MSB of each displayed word.	Schematic 12, A2U25, PIN 12
LLTRG	LO, Local Trigger. Trigger signal (LO state) indicating Model 1607A has met local triggering requirements.	Schematic 6, A1U69A, PIN 8
LNARM	LO, No Arm. NO ARM indicator light control signal, LNARM = LO when no arming signal has occurred for more than approximately 100 ms.	Schematic 10, A1U72B, PIN 8
LNCK	LO, No Clock. NO CLOCK indicator light control signal. LNCK = LO when no qualified clock signal has occurred for more than approximately 100 ms.	Schematic 10, A1U47D, PIN 11
LNDLY	LO, No Delay. Data acquisition control signal (dc level) LNDLY = LO when DELAY OFF/ON switch is set to OFF.	Schematic 10, DELAY OFF/ON Switch A2S2A
LRHS	LO, Reset HI Start. Start flip-flop reset signal.	Schematic 9, A1U93A, PIN 5
LRST	LO, Reset. Reset signal for data acquisition section. LRST occurs at end of display cycle.	Schematic 2, A2U9, PIN 8
LR2	LO, Reset 2. Data index and control reset signal.	Schematic 9, A1U93B, PIN 7
LSC	LO, Slow Clock. Blanking control signal enabling words to be written one at a time as they are written in memory in partial display mode with END DSPL selected. LO when clock rate is less than approximately 50 Hz.	Schematic 14, A2U1C, PIN 10
LSWA	LO, Select Write Address. Complement of HSWA.	Schematic 8, A1U46B, PIN 7
LTRG	LO, Trigger. LTRG is inverted and routed to display section to control blanking.	Schematic 9, A1U91, PIN 8
LTRQ	LO, Trigger Qualified. Qualifier control signal. When LTRQ = LO, HCLQ is held HI.	Schematic 5, DSPLY/ TRIG Switch A1S1C
LVRTC	LO, Vertical Carry. Carry output from vertical state Counter. LVRTC occurs following writing of last word on display.	Schematic 12, A2U20, PIN 12
LWE1	LO, Write Enable 1. Memory address control signal. LWE1 = LO enables HSWA and LSWA.	Schematic 9, A1U90A, PIN 6
LWE2	LO, Write Enable 2. Clock signal for write address counter.	Schematic 9, A1U90B, PIN 8
LXMR	LO, External Manual Reset. External manual reset signal from Model 1600A for data index and control circuitry.	Schematic 15, I/O PORT Connector J5
LXPG	LO, External Plugged. DC level applied to Model 1600A indicating Model 1607A is connected on I/O Bus. LXPG is always LO.	Schematic 12, A2U15C, PIN 6
LZER	LO, Zero. Determines whether a one or a zero is displayed on the CRT. When 100 kHz is applied to the horizontal output a zero is displayed.	Schematic 12, A2U2A, PIN 3

Table 4-1. Model 1607A Mnemonics (Cont'd)

MNEMONIC	FUNCTION	ORIGIN
L1600	LO, 1600. Control signal from Model 1600A enabling that instrument to exercise control of the Model 1607A display section.	Schematic 15, I/O PORT Connector J5
NCLK	Negative (Transition) Clock. A buffered TTL reproduction of the clocking signal from the system under test, the complement of PCLK.	Schematic 3, CLOCK INPUT Connector A1J1, PIN 11
Q0, Q1	Qualifiers 0 and 1. Input qualifier bits 0 and 1 from data probes.	Schematic 3, Q1, Q0/ INPUTS 15 - 12 Connector A1J2, PINS 11 and 12
SI	Slope Invert. Clock slope command signal to the Clock Probe. The complement of SS. SI = HI when CLOCK is ⎍ (out) and LO when CLOCK is ⎏ (in).	Schematic 3, CLOCK/ Switch A1S1B
SQ0H, SQ1H	Buffered QUALIFIER Q0/Q1 switch outputs for HI position. TERM = +5 V when applicable switch is set to HI and ≈0 V when set to OFF or LO.	Schematic 4, A1U24A, PIN 2; A1U24B, PIN 4
SQ0L, SQ1L	Buffered QUALIFIER Q0/Q1 switch outputs for LO position. TERM = +5 V when applicable switch is set to LO and ≈0 V when set to OFF or HI.	Schematic 4, A1U24C, PIN 6; A1U24F, PIN 15
SS	Slope Switch. Clock slope command signal to Clock Probe. SS and SI control PCLK and NCLK leading edge transitions in reference to clocking signal from system under test. SS = LO when CLOCK is ⎍ (out) and HI when CLOCK is ⎏ (in).	Schematic 3, CLOCK ⎍/⎏ Switch A1S1B
S0H-S15H	Buffered TRIGGER WORD switch outputs for HI position. TERM = +5 V when applicable switch is set to HI and ≈0 V when set to OFF or LO.	Schematic 4, A1U19 thru U24
S0L-S15L	Buffered TRIGGER WORD switch outputs for LO position. TERM = +5 V when applicable switch is set to HI and ≈0 V when set to OFF or HI.	Schematic 4, A1U19 thru U24
THRESHOLD	A dc level applied to the Clock and Data Probes which matches probe comparator switching threshold to the switching threshold of the system under test.	Schematic 3, A1U48, PIN 6
TQ0, TQ1	Temporary Storage flip-flop qualifier output bits 0 and 1.	Schematic 5, A1U9, PINS 6 and 8
$\overline{TQ0}$, $\overline{TQ1}$	Complemented Temporary Storage flip-flop qualifier output bits 0 and 1.	Schematic 5, A1U9, PINS 5 and 9
T0-T15	Temporary Storage flip-flop output bits 0 through 15.	Schematic 5, A1U1 thru U8, PINS 6 and 8
V0-V3	Vertical State Count. Four-bit address of word currently being displayed.	Schematic 12, A2U20, PINS 3, 2, 6, and 7
WA0-WA3	Write Adress Count. WA0 - WA3 address memory during write function.	Schematic 8, A1U6, PINS 14, 13, 12, and 11

Table 4-1. Model 1607A Mnemonics (Cont'd)

MNEMONIC	FUNCTION	ORIGIN
XDSPD	External Display Data. Value of bit currently being addressed by V0 - V3 and H0 - H3. Signal is routed to Model 1600A via I/O Bus for display on table B.	Schematic 12, A2U15D, PIN 8
XH0-XH3	External Horizontal State Count. Bit address from Model 1600A display section.	Schematic 15, I/O PORT Connector, PINS 6, 7, 8, and 9
XV0-XV3	External Vertical State Count. Word address from Model 1600A display section.	Schematic 15, I/O PORT Connector, PINS 10, 11, 12, and 13
1D0-3, 2D0, 2D3, 3D0, 3D3, 4D0, 4D3, 5D0, 5D3	Outputs from DELAY switch used to derive HE. Term is XDY where X = decade and Y = bit of 4-bit code.	Schematic 6, A10S1

SECTION V

PERFORMANCE TESTS AND ADJUSTMENTS

5-1. INTRODUCTION.

5-2. This section contains performance tests and adjustment procedures for the Model 1607A. The performance test procedures verify that the instrument meets its specifications as listed in table 1-1. The adjustment procedures in this section are provided to help you maintain the instrument within specification limits.

5-3. RECOMMENDED TEST EQUIPMENT.

5-4. Equipment required for the performance checks, adjustment procedures, and troubleshooting is listed in table 5-1. Any equipment that satisfies the critical specifications given in the table may be substituted for the recommended model(s).

5-5. TEST RECORD.

5-6. Results of the performance tests may be tabulated on the Test Record at the end of this section. The Test Record lists all of the tested specifications and their acceptable limits. The results recorded at incoming inspection can be used for comparison in periodic maintenance and troubleshooting and after repairs or adjustments.

5-7. PERFORMANCE CHECK.

5-8. Two performance tests are provided: 1) the operational check verifies critical operation of the instrument and clock and data probes; 2) the performance verification test checks the 1607A electrical specifications listed in table 1-1 as the performance standard. Unless a detailed verification is required, perform only the initial operation check.

5-9. TEST CONNECTOR. The performance test and calibration procedures require that the CLOCK and DATA probe inputs be connected to pulse generator outputs. A convenient connector that includes a 50-ohm termination for the pulse generator may be constructed per figure 5-1. Hewlett-Packard part numbers are given below; any equivalent parts, however may be used.

BNC connector	1250-0083
solder lug	0360-1632
nut	2950-0001
2 resistors, 1 watt, 100 ohms	0760-0024

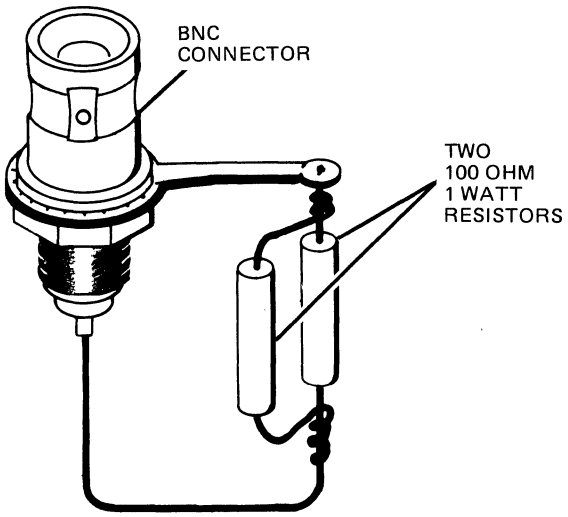

Figure 5-1. 50-ohm Test Connector

5-10. OPERATIONAL CHECK.

DESCRIPTION:

This check verifies functional operation of the 1607A and clock and data probes. Unless a detailed specifications verification is required, perform only the operational check.

EQUIPMENT:

Pulse Generators (2)
Monitor Oscilloscope
Display Instrument (Oscilloscope or X-Y Display)

PROCEDURE:

a. Perform the TURN-ON PROCEDURE and OPERATORS CHECKS AND ADJUSTMENTS listed in Section III (paragraphs 3-38 and 3-40) to verify proper operation of the display functions in the Model 1607A.

b. Connect test equipment as shown in figure 5-2, and apply test waveforms to clock and all data inputs.

PERFORMANCE TESTS

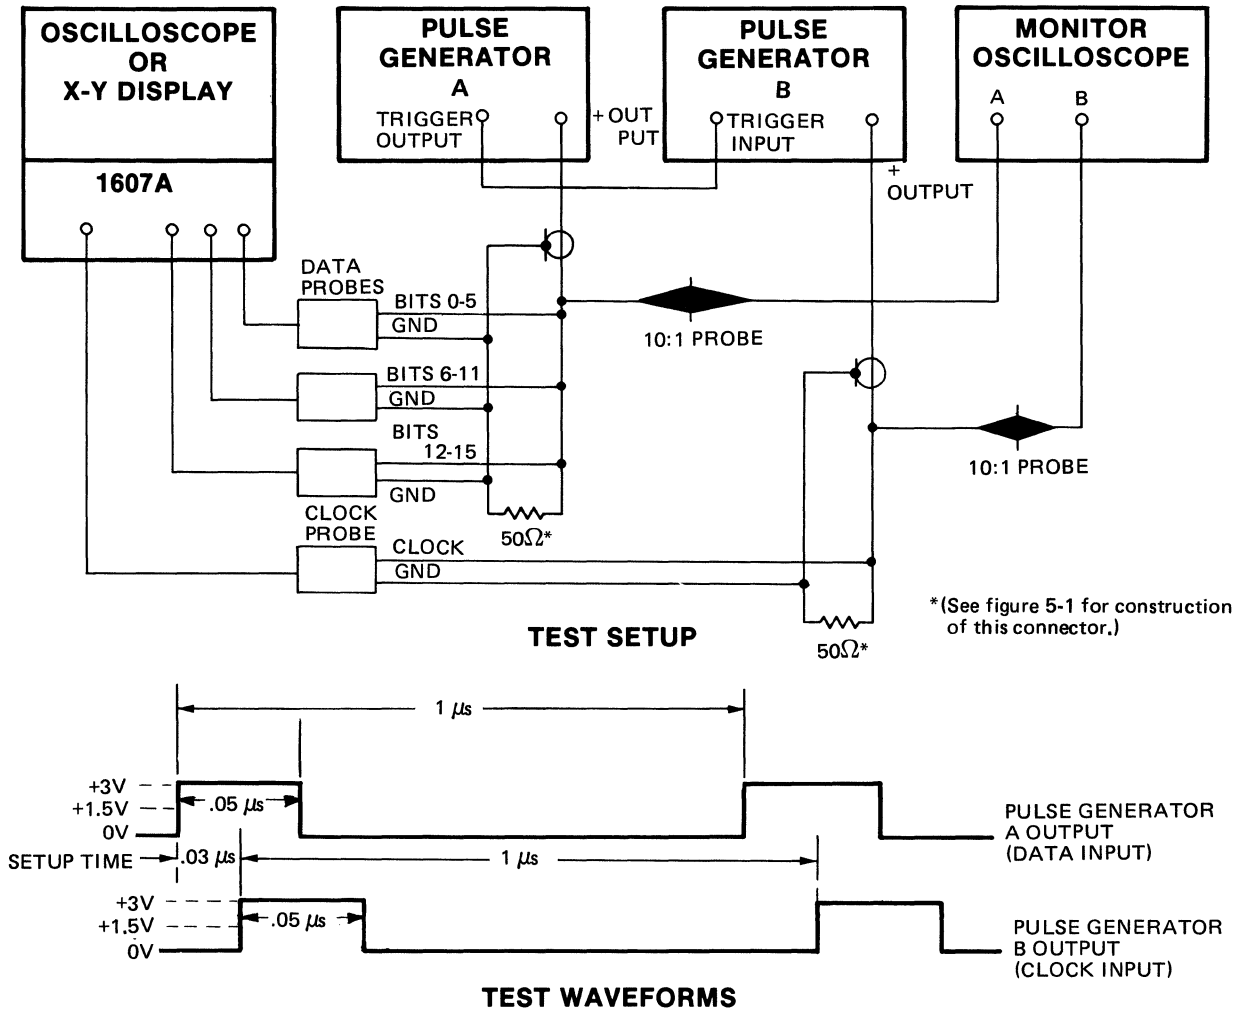

Figure 5-2. Operational Test Setup

c. Set Model 1607A controls as follows:

CLOCK ..... ⌐
THLD ..... TTL
QUALIFIER Q1, Q0 ..... OFF
SAMPLE MODE ..... REPET
START DSPL ..... ON
TRIGGER MODE
NORM/ARM ..... NORM
LOCAL/BUS ..... LOCAL
TRIGGER WORD ..... all HI

d. Alternately switch each TRIGGER WORD switch to LO and back to HI. Verify that NO TRIG lamp turns on and that a loss of display occurs when switch is set to LO.

e. Ground each data probe separately. Verify loss of display and NO TRIG indication when probe is grounded.

Table 5-1. Recommended Test Equipment

Instrument	Critical Specification	Recommended Model	Use
Waveform Monitoring	Bandwidth: 100 MHz Input Z: 50 and 1 M ≈ 20 pF Vertical Sensitivity: 5 mV	HP 1740A	P, A, T
Display Instrument (Oscilloscope or X-Y Display)	External X and Y Inputs: 0.1 to 1-volt sensitivity, DC to > 500 kHz bandwidth Z-axis Input: DC coupled positive blanking Must be able to fully blank with 10 V input at 10 mA	HP 1700 Series	P, A, T
Pulse Generators (2)	Adjustable 0 to 20 MHz; Adjustable 0 to 5 V pk amplitude; Positive and Negative Polarity; Adjustable 20 ns to to 0.5 μs width; Adjustable 0 to 5-V offset	HP 8013A	P, T
Multimeter	Dc current 0 to 30 μA; dc voltage, 0 to 10 V; Resistance, 0 to 43 kilohms	HP 3435A	P, A, T
LCR Meter	Capacitance, 0 to 25 pF	HP 4332A	P, T
50-ohm BNC feedthrough	50-ohm feedthrough termination	HP 11048B	P
Function Generator	±10 V offset	HP 3310A	P
Counter	Period Measurement	HP 5300A HP 5302A	P
Logic State Analyzer	Pattern recognition and State Display	HP 1600A	T
Logic Troubleshooting Kit	Logic Pulser, Logic Probe, Logic Clip	HP 5015T	T
P = Performance Check, A = Adjustments, T = Troubleshooting			

PERFORMANCE TESTS

5-11. INPUT RC.

SPECIFICATION:
40 kΩ ±3 kΩ shunted by ≤14 pF.

DESCRIPTION:
This test verifies the input impedance and shunt capacitance of all data and clock inputs.

EQUIPMENT:
Multimeter
LCR meter

PROCEDURE:
a. Using a multimeter, measure the resistance between each data probe input and ground and between the clock-probe input and ground. Verify that input impedance of clock and data probes is 40 kΩ ±3 kΩ.

b. Using LCR meter, measure shunt capacitance between each data-probe and clock-probe input and ground. Verify that each input capacitance is less than 14 pF.

5-12. INPUT BIAS CURRENT.

SPECIFICATION:
30 μA.

DESCRIPTION:
This test verifies that each clock and data probe current input is less than 30 μA.

EQUIPMENT:
Multimeter

PROCEDURE:
a. Set THLD to VAR. Using multimeter, monitor VAR MEAS and adjust VAR SET for −10 Vdc.

b. Using multimeter, measure current between each clock and data probe inputs and ground. Verify that current is less than 30 μA.

5-13. INPUT THRESHOLD, MINIMUM INPUT SWING.

SPECIFICATION:
Input Threshold; TTL, fixed at approx +1.5 V, variable +10 Vdc.
Minimum Input Swing; 0.5 V pk-pk +5% of threshold voltage.

DESCRIPTION:
This procedure verifies that the clock and data inputs recognize the proper state of 1 or 0 when an input signal is compared with a threshold voltage. It also checks operation at different threshold levels and the associated minimum p-p input signal swing required for each threshold voltage.

PERFORMANCE TESTS

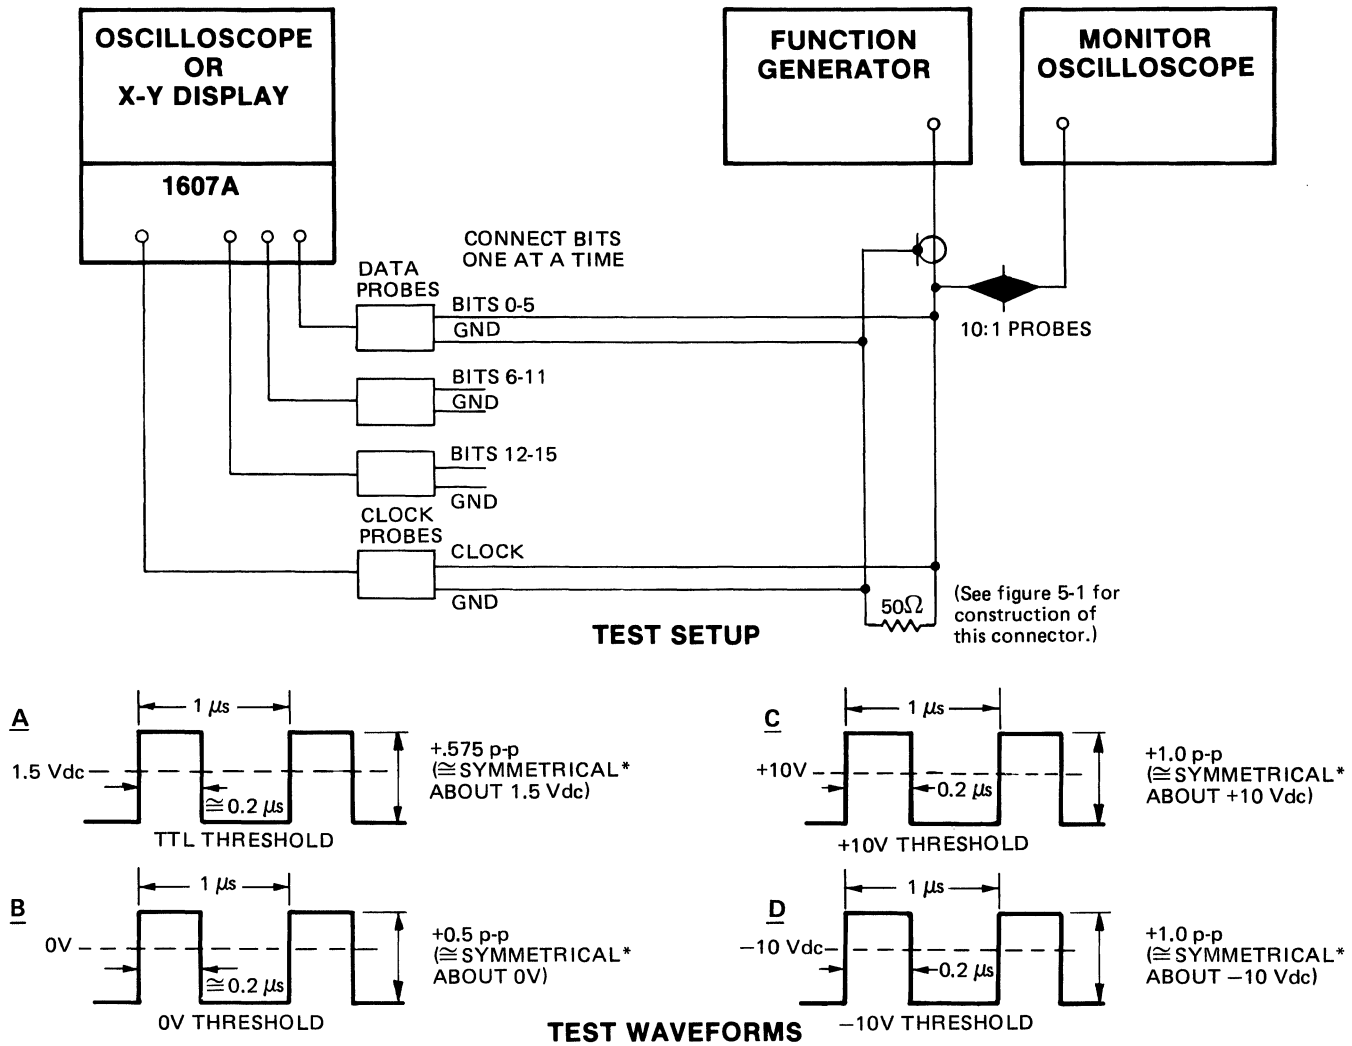

*Thresholds shown are approximate and will be slightly higher than symmetrical. Function generator offset may be adjusted for stable logic analyzer display.

Figure 5-3. Input Threshold, Minimum Input Swing

EQUIPMENT:

Function Generator
Monitor Oscilloscope
Display Instrument

PROCEDURE:

a. Connect test equipment to CLOCK and DATA probe input bit 0 as shown in figure 5-3.

b. Set 1607A controls as follows:

CLOCK ..... ⌐
THLD ..... TTL
START DISPLAY ..... ON
WORD ..... ON
QUALIFIER
  DISPLAY/TRIG ..... DISPLAY
  Q0, Q1 ..... OFF
TRIGGER WORD, bits 0-15 ..... LO

c. Apply test waveform A to CLOCK and DATA probe input 0.

PERFORMANCE TESTS

d. Set trigger word switch bit 0 to HI.

e. Observe that display has a 1 only at data bit 0 and NO CLOCK, NO TRIG, and DATA HELD indicators are off. This verifies that the 1607A is properly accepting data at the fixed TTL threshold level with minimum p-p input signal swing.

f. Repeat steps c thru e for remaining trigger word switches one bit at a time.

NOTE

The following steps verify that the 1607A is recognizing and accepting data correctly at different threshold levels with minimum p-p signal swing applied.

g. Apply test waveform B to CLOCK and DATA probe input 0.

h. Set TRIGGER WORD bit 0 to HI, all others to LO.

i. Set THLD to VAR and adjust VAR SET for stable display with data bit 0 indicating 1 and all other data bits indicating 0; NO CLOCK, NO TRIG, and DATA HELD indicators should be off.

j. Repeat steps g thru i for remaining trigger word switches one bit at a time.

k. Remove 50-ohm termination from function generator in order to get ±10 volt offset for waveforms C and D in following steps.

l. Apply test waveform C to CLOCK and DATA probe input 0.

m. Set TRIGGER WORD bit 0 to HI and all others to LO.

n. Adjust VAR SET for stable display with data bit 0 indicating 1 and all other data bits indicating 0 and NO CLOCK, NO TRIG, and DATA HELD indicators off.

o. Repeat steps 1 thru n for remaining trigger word switches one bit at a time.

p. Set CLOCK slope to ⌐.

q. Apply test waveform D to CLOCK and DATA probe input 0.

r. Set TRIGGER WORD bit 0 to LO and all others to HI.

s. Adjust VAR SET for stable display with data bit 0 indicating 0 and all other data bits indicating 1; NO CLOCK, NO TRIG, and DATA HELD indicators should be off.

t. Repeat steps q thru s for remaining trigger word switches one bit at a time.

5-14. SETUP AND HOLD TIME.

SPECIFICATION:

Data setup time: (time data must be present prior to clock transition) 20 ns.
Hold Time: (time data must be present after clock transition) 0 ns.

DESCRIPTION:

Setup Time is the length of time that data must be present at a 1607A data probe input before it is clocked into the 1607A. Hold Time is the length of time data must remain stable at a 1607A probe input after it is clocked into the 1607A.

EQUIPMENT:

Pulse Generator
Monitor Oscilloscope
Display Instrument

PERFORMANCE TESTS

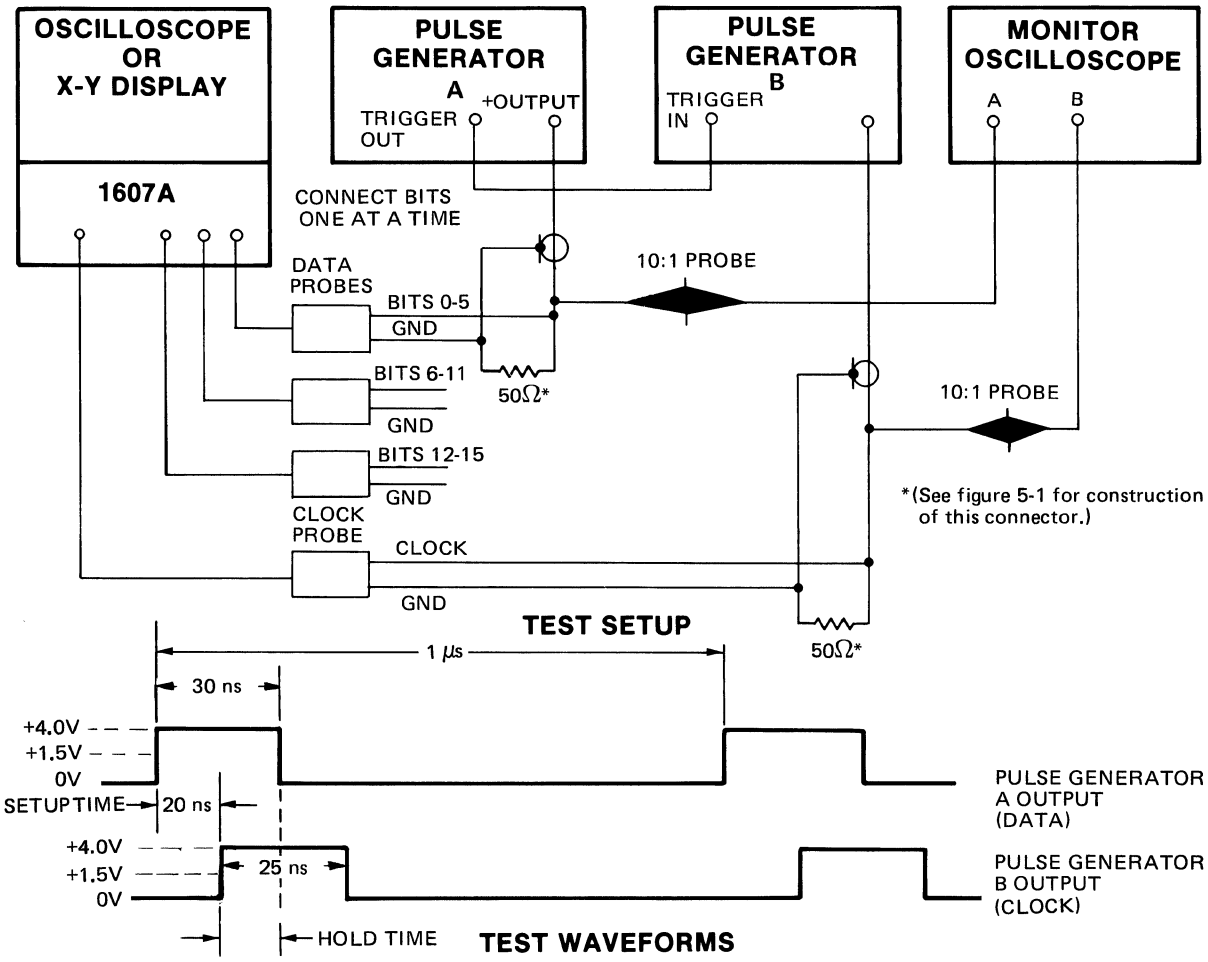

Figure 5-4. Setup and Hold Time Test Setup

PROCEDURE:

a. Connect test equipment to CLOCK and DATA probe input 0 as shown in figure 5-4.

b. Set 1607A controls as follows:

CLOCK ..... ⌐¬
THLD ..... TTL
START DISPLAY ..... ON
WORD ..... ON
QUALIFIER
DISPLAY/TRG ..... DISPLAY
Q0, Q1 ..... OFF
TRIGGER WORD, bit 0-15 ..... LO

c. Set TRIGGER WORD bit 0 to HI.

d. Observe stable display of 1's for selected data bit and that NO CLOCK, NO TRIG, and DATA HELD indicators are off. This verifies that the 1607A is properly accepting data.

e. Adjust delay time between pulses so that trailing edge (¬⌊) of data pulse is coincident with leading edge (⌐¬) of clock pulse (0 hold time). Observe that 1607A display remains stable for 0 hold time.

f. Repeat steps c thru e for remaining data probe inputs one probe at a time.

5-15. REPETITION RATE.

SPECIFICATION:

0 to 20 MHz

PERFORMANCE TESTS

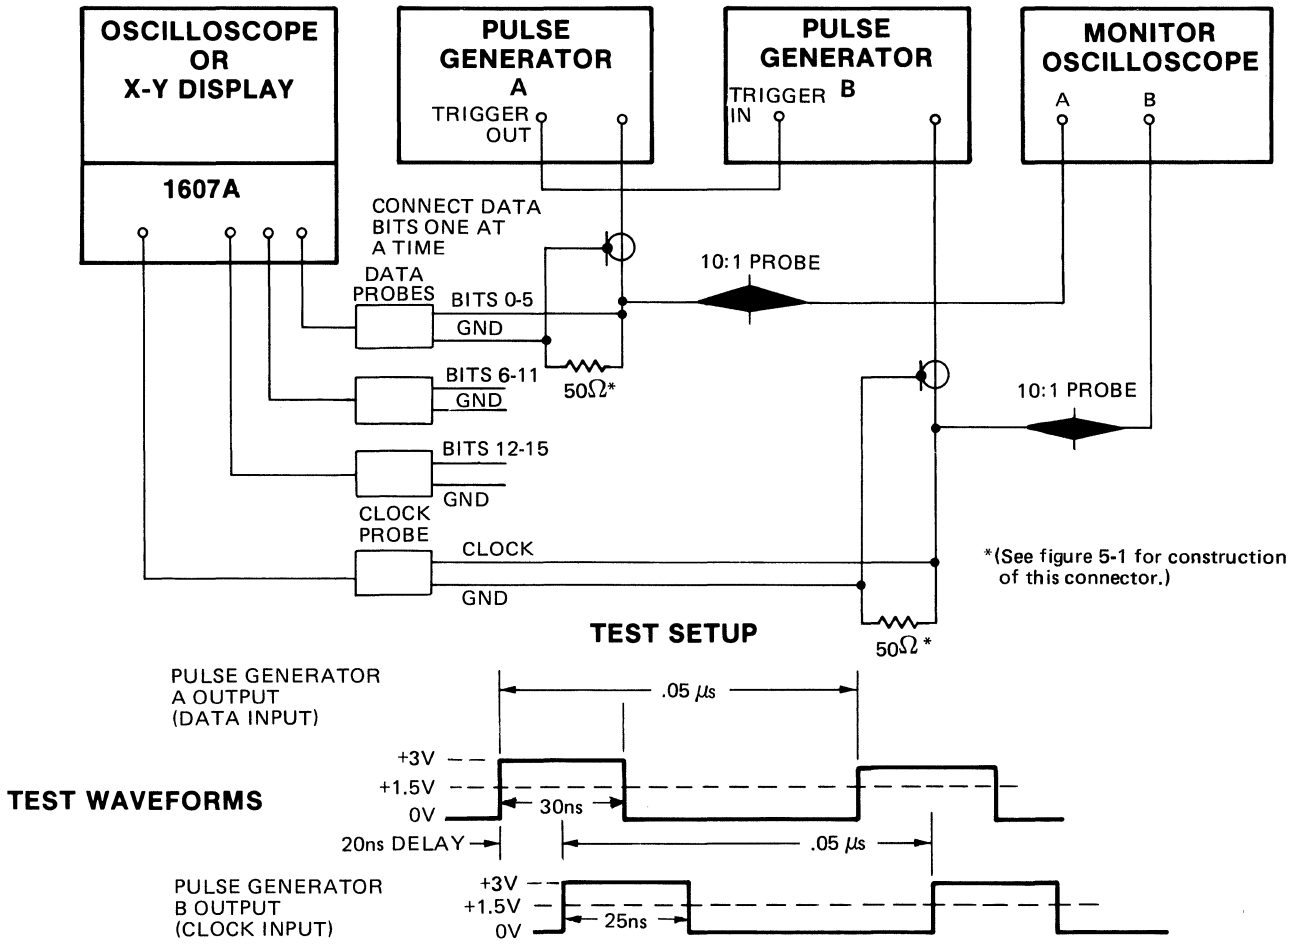

Figure 5-5. Repetition Rate Test Setup

EQUIPMENT:

Pulse generator (2)
Monitor Oscilloscope
Display Instrument

PROCEDURE:

a. Connect test equipment as shown in figure 5-5.

b. Set 1607A controls as follows:

CLOCK ..... ⌐
THLD ..... TTL
SAMPLE MODE ..... REPET
START DISPLAY ..... ON
TRIGGER MODE
NORM/ARM ..... NORM
LOCAL/BUS ..... LOCAL
WORD ..... ON
TRIGGER WORD, bits 0-15 ..... LO
Q0, Q1 ..... OFF

c. Apply test waveforms shown in figure 5-5 to CLOCK and DATA probe input 0.

d. Set TRIGGER WORD bit 0 to HI.

e. Observe that the 1607A display is 1 for data bit with signal applied and that NO CLOCK, NO TRIG, and DATA HELD indicators are off. This verifies that the 1607A is properly accepting data at the maximum specified rate.

f. Repeat steps c thru e for remaining data probe inputs one at a time.

PERFORMANCE TESTS

5-16. MINIMUM CLOCK AND DATA PULSE WIDTHS.

SPECIFICATION:

Minimum Clock Pulse Width: 20 ns at threshold.
Minimum Data Pulse Width: 25 ns at threshold.

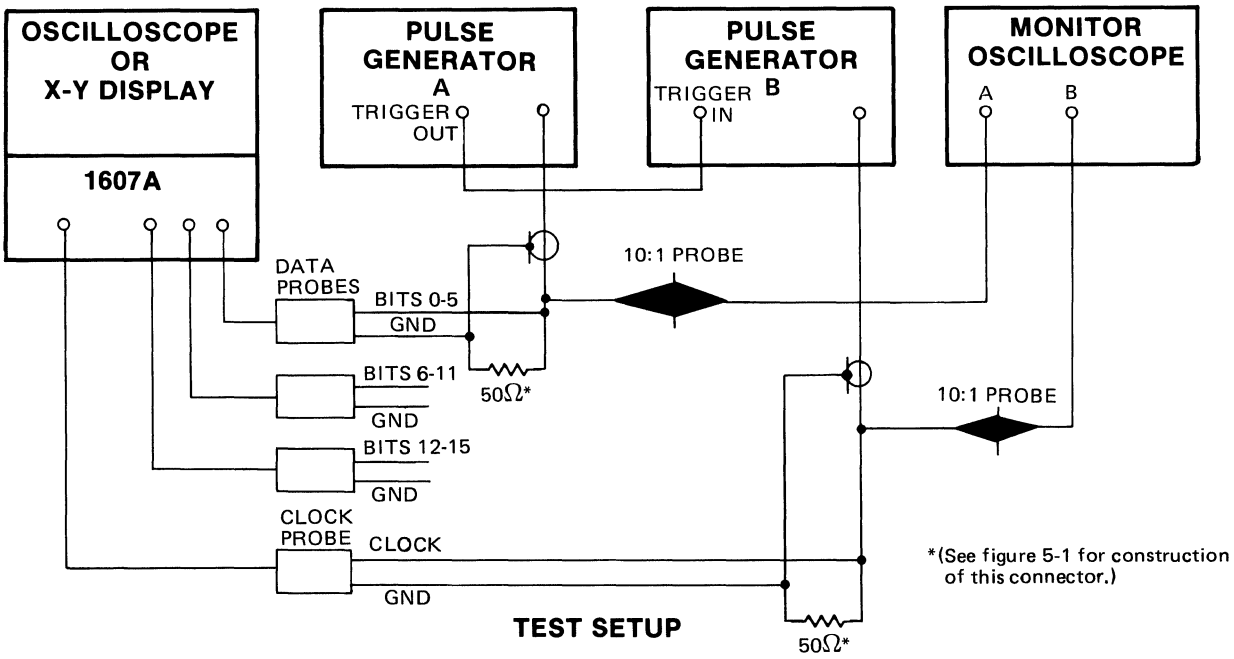

TEST SETUP

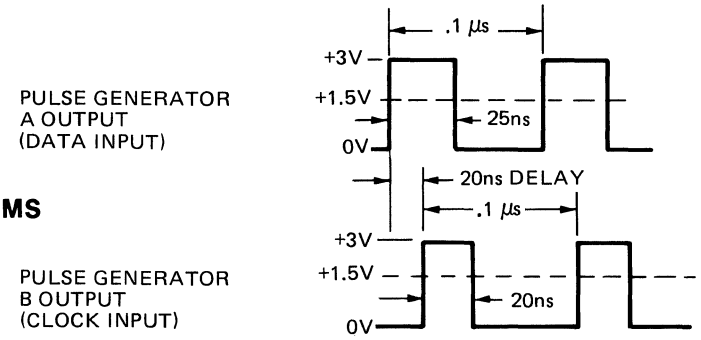

TEST WAVEFORMS

EQUIPMENT:

Pulse Generator (2)
Monitor Oscilloscope
Display Instrument

Figure 5-6. Minimum Clock and Data Pulse Width Test Setup

PROCEDURE:

a. Connect test equipment as shown in figure 5-6.
b. Set 1607A controls as follows:

CLOCK ..... ⌐
THLD ..... TTL
START DISPLAY ..... ON
WORD ..... ON
QUALIFIER
DISPLAY/TRIG ..... DISPLAY
Q0, A1 ..... OFF
TRIGGER WORD ..... LO

c. Apply waveforms shown in figure 5-6 to clock and data probe input bit 0.
d. Set TRIGGER WORD bit 0 switch to HI.
e. Observe stable display of 1 for selected data bit and NO CLOCK, NO TRIG, and DATA HELD indicators are off. This verifies that the 1607A is properly accepting data with minimum width clock and data pulses applied.
f. Repeat steps c thru e for remaining data inputs one input at a time.

PERFORMANCE TESTS

5-17. TRIGGER ARM INPUT.

SPECIFICATIONS:

Impedance: 50 ohms, Level: low state, 0 V to 0.4 V; high state, 2 V to 5 V, Pulse Width: 15 ns minimum at 1.5 V level. Arming Conditions: If the arming pulse positive edge occurs 45 ns after clock, triggering occurs on the same clock cycle that it is armed. If the arming pulse positive edge occurs 75 ns after a clock, triggering occurs on the next clock cycle.

DESCRIPTION:

This test verifies that, when in the ARM mode, if a TTL level, positive-transition signal is applied to the TRIG ARM input less than 45 ns after a clock leading edge, that same clock will pulse the PATTERN TRIG OUT output high when data input matches the TRIGGER WORD switch settings. Also, this test verifies that when in the ARM mode, if a TTL level, positive-transition signal is applied to the TRIG ARM input more than 75 ns after a clock leading edge, the next clock will pulse the PATTERN TRIG OUT output high when data input matches the TRIGGER WORD switch settings.

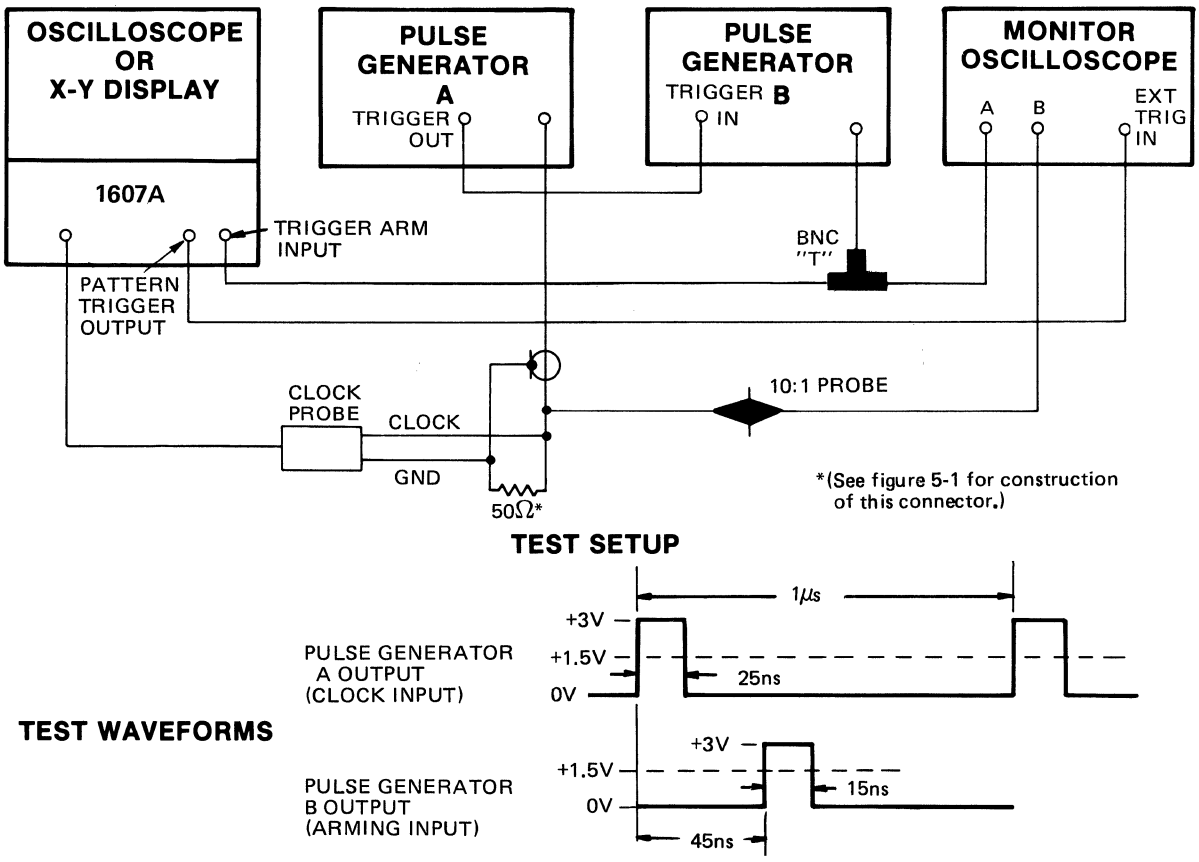

Figure 5-7. Trigger Arm Input

EQUIPMENT:

Pulse Generators (2)
Monitor Oscilloscope
Multimeter
Display Instrument

PROCEDURE:

a. Remove power from 1607A.

PERFORMANCE TESTS

b. Set 1607A controls as follows:

CLOCK ..... ⌐
THLD ..... TTL
QUALIFIERS
  DISPLAY/TRIG ..... DISPLAY
  Q0, Q1 ..... OFF
SAMPLE MODE ..... REPET
START DISPLAY ..... ON
TRIGGER MODE
  NORM/ARM ..... ARM
  LOCAL/BUS ..... LOCAL
  WORD ..... ON
TRIGGER WORD, bit 0-15 ..... LO

c. Using multimeter, measure input impedance of the trigger arm input. Verify that measured value is 50 ohms ±2.5 ohms.

d. Reapply power to 1607A.

e. Connect test equipment as shown in figure 5-7 and apply test waveforms to CLOCK and TRIG ARM inputs.

NOTE

Steps f thru h verify that the 1607A PATTERN TRIGGER OUTPUT pulses high when a TTL level positive transition input is applied to the ARM input within 45 ns after a clock leading edge when input data matches the TRIGGER WORD switch settings.

f. Set pulse generator A for single pulse operation.

g. Set monitor oscilloscope for EXTERNAL trigger, NORMAL trigger mode, and 5 ms/div sweep.

h. Press pulse generator A MANUAL (single pulse) pushbutton. Verify that a sweep occurs on the monitor oscilloscope for every pulse input to the 1607A.

NOTE

Step i thru l verify that the 1607A PATTERN TRIGGER OUTPUT pulses high on the next clock to occur when a TTL level positive transition signal is applied more than 75 ns after a clock edge when input data matches the TRIGGER WORD switch settings.

i. Return pulse generator A repetition rate to approximately 1 MHz and adjust pulse generators for 75 ns delay between clock pulse and arming pulse leading edges.

j. Set pulse generator A for single pulse operation.

k. Set oscilloscope for EXTERNAL trigger, NORMAL trigger mode, and 5 ms/div sweep.

l. Press pulse generator A MANUAL (Single pulse) pushbutton. Observe that a sweep occurs on the monitor oscilloscope on every other pulse input to the 1607A.

5-18. PATTERN AND DELAYED TRIGGER OUTPUTS.

SPECIFICATION:
High, ≥ 2 V into 50 ohms; low, < 0.4 V into 50 ohms; width, approx 25 ns.

DESCRIPTION:
This test verifies amplitude, width and operation of the Pattern and Delayed Trigger Outputs.

PERFORMANCE TESTS

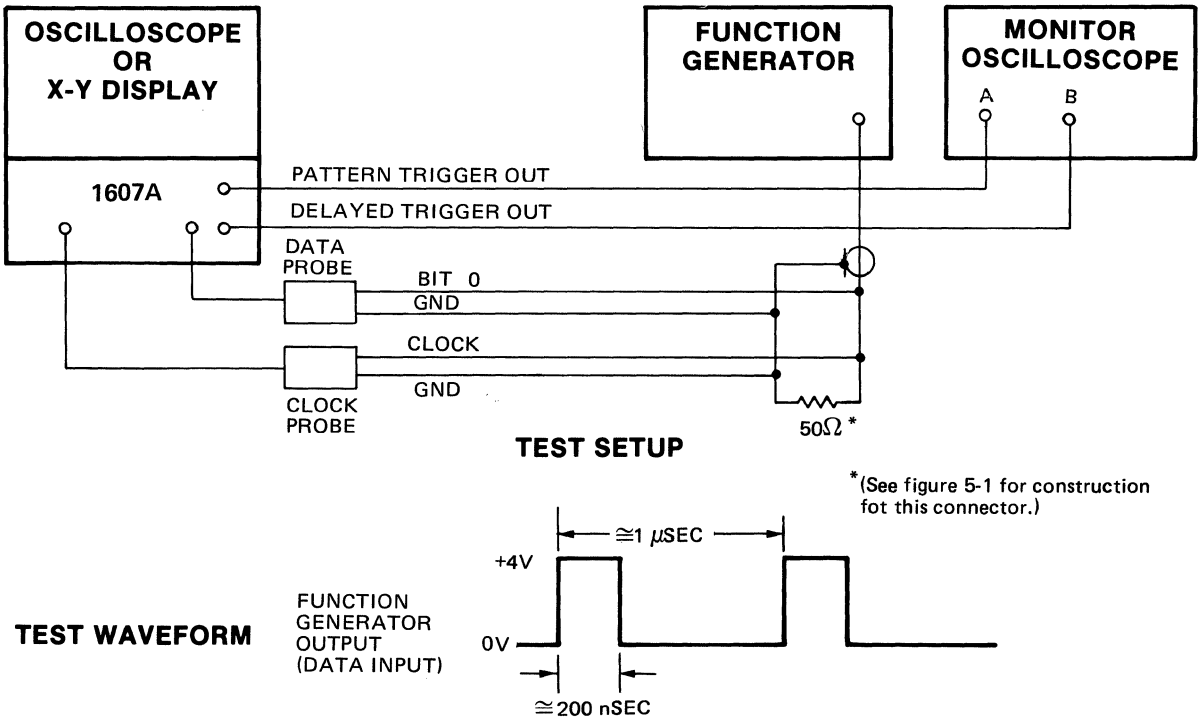

Figure 5-8. Pattern and Delayed Trigger Outputs Test Setup

EQUIPMENT:

Monitor Oscilloscope
Function Generator
50-ohm Terminations (2)

PROCEDURE:

a. Connect test equipment as shown in figure 5-8.

b. Set 1607A controls as follows:

CLOCK ..... ⌐
THLD ..... TTL
START DISPLAY ..... ON
WORD ..... ON
QUALIFIER
  DISPLAY/TRIG ..... DISPLAY
  Q1, Q0 ..... OFF
TRIGGER WORD
  bit 0 ..... HI
  bit 1-15 ..... LO
DELAY ..... OFF

c. Apply test waveform to clock and data probe input bit 0. The 1607A display should be all 0's except bit 0. This indicates that a trigger word is being recognized.

d. Connect PATTERN TRIG OUT and DELAYED TRIG OUT to channels A and B inputs respectively of monitor oscilloscope. Use 50-ohm termination at each channel input.

e. Observe that output pulses have a low level less than +0.4 V and a high level greater than 2 V.

PERFORMANCE TESTS

5-19. DISPLAY OUTPUTS.

SPECIFICATION:
Horizontal: < 0.6 V to > 6.0 V p-p, ±8 V maximum into 100 kΩ.
Vertical: < 0.6 V to > 6.0 V p-p, ±8 V maximum into 100 kΩ.
Z-axis: 0 V to 10 V p-p into 1000 ohms.

DESCRIPTION:
This test verifies amplitude and offset of the Horizontal, Vertical, and Z-axis outputs.

EQUIPMENT:
Monitor Oscilloscope

PROCEDURE:
a. Monitor HORIZ output at rear panel.

b. Set 1607A controls as follows:

POWER	ON
TRIGGER MODE	WORD
TRIGGER WORD switches	all OFF
SAMPLE MODE	SINGLE
COLUMN BLANKING	full CCW
QUALIFIER Q0, Q1	OFF
Z-AXIS	ON
All Other Pushubuttons	out

c. Set HORIZ SIZE fully ccw, adjust HORIZ POSN for approx 0 volts. Verify that ramp is < 0.6 volts p-p.

d. Set HORIZ SIZE fully cw. Verify that ramp is > 6 volts p-p.

e. Set HORIZ SIZE for 6 volts p-p ramp.

f. Adjust HORIZ POSN from fully ccw to fully cw. Verify that top of ramp can be positioned above +8 volts and that bottom of ramp can be positioned below —8 volts.

g. Monitor VERT output at rear panel.

h. Set VERT SIZE fully ccw, and adjust VERT POSN for approx 0 volts. Verify that ramp is < 0.6 volts p-p.

i. Set VERT SIZE fully cw, and observe that ramp is > 6 volts p-p.

j. Set VERT SIZE for 6 volts p-p ramp.

k. Adjust VERT POSN from fully ccw to fully cw. Verify that top of ramp can be positioned above +8 volts and that ramp bottom of ramp can be positioned below —8 volts.

l. Connect monitor oscilloscope to Z-AXIS BNC on 1607A rear panel.

m. Turn front panel Z-AXIS adjustment from fully ccw to fully cw position. Verify that output varies from 0 volts to greater than 10 volts.

ADJUSTMENTS

5-20. ADJUSTMENT PROCEDURES.

WARNING

Read the Safety Summary at the front of this manual before performing adjustment procedures.

5-21. The following adjustment procedures for the Model 1607A should be performed only if it has been established by the performance checks that the instrument is out of adjustment. The adjustments can be made separately following repairs to the instrument or in sequence as part of a periodic calibration procedure. The locations of adjustments and test points are shown in figure 5-12 at the end of this section.

CAUTION

Adjustments are performed with top and bottom covers removed. Use care to avoid shorting or damaging internal parts of the instrument.

5-22. +5 VOLT POWER SUPPLY ADJUSTMENT.

REFERENCE:
Figure 5-12, schematic 2.

DESCRIPTION:
This adjustment sets the +5 V Power Supply output voltage.

EQUIPMENT:
Multimeter

PROCEDURE:
a. Remove power from 1607A and remove top and bottom covers.

b. Connect all data and clock probes to the 1607A.

c. Apply power to 1607A.

d. While monitoring +5 volt power supply at test point A1TP1 with respect to ground (A1TP2), adjust A3R8 for +5 V ±0.01 V.

5-23. CHARACTER SIZE ADJUSTMENT.

REFERENCE:
Figure 5-12, schematic 13.

DESCRIPTION:
An oscilloscope or X-Y display with external Z-axis, vertical and horizontal inputs must be used to display the 1607A data in order to perform the following procedure.

EQUIPMENT:
Display Instrument

PROCEDURE:
a. Remove covers from 1607A.

b. Set 1607A controls as follows:

POWER	OFF
SAMPLE MODE	SINGLE
COLUMN BLANKING	fully ccw
Z-AXIS	ON

c. Adjust character size A2R5 (see figure 5-12) for slight space between 0's. Displayed characters should be as large as possible without overlap.

ADJUSTMENTS

5-24. TIMING ADJUSTMENTS.

REFERENCE:
Figure 5-12, schematic 9.

DESCRIPTION:
This procedure sets up the timing relationships between the clocks used to load input data into the memory RAMs. The adjustment is made with the 1607A in a continuous trigger search mode.

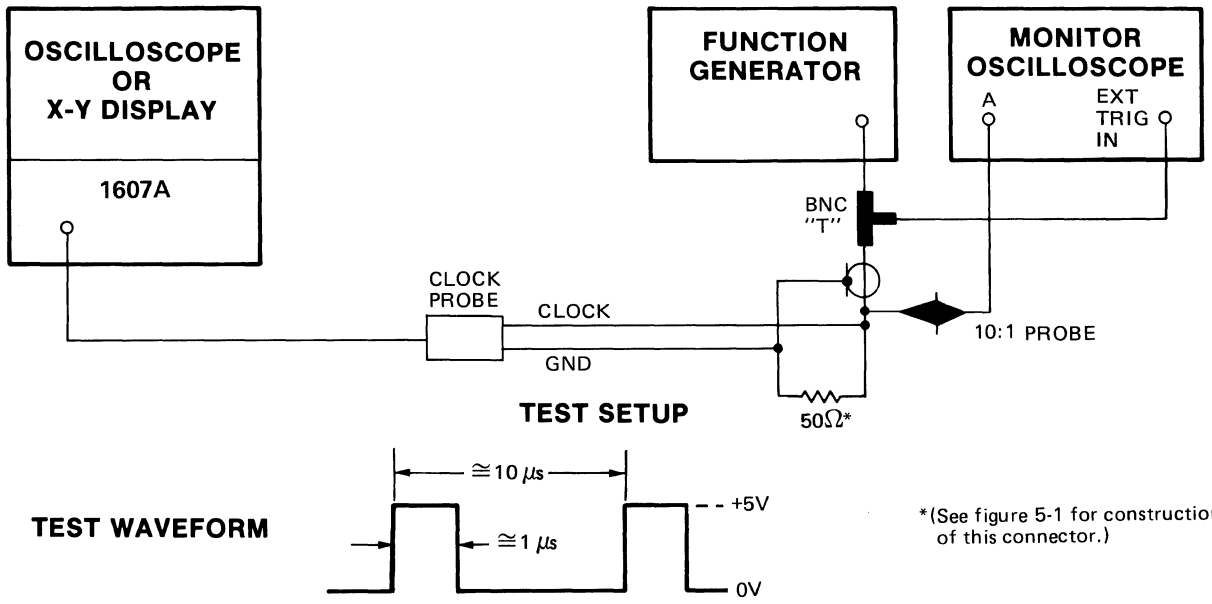

Figure 5-9. Timing Adjustment Setup

EQUIPMENT:
Function Generator
Monitor Oscilloscope
Display Instrument
BNC "T" Connector

PROCEDURE:
a. Connect equipment as shown in figure 5-9.

b. Set 1607A controls as follows:

CLOCK ..... ⌐
THLD ..... TTL
QUALIFIER, Q0, Q1 ..... OFF
SAMPLE MODE ..... REPET
START DISPLAY ..... ON
TRIGGER MODE
  NORM/ARM ..... NORM
  LOCAL/BUS ..... LOCAL
  WORD ..... ON
TRIGGER WORD, bit 0-15 ..... LO
all other switches ..... out
MONITOR OSCILLOSCOPE
  TRIGGER ..... EXTERNAL

c. Apply test waveform to 1607A CLOCK INPUT and to monitor oscilloscope External Trigger input.

d. Set TRIGGER WORD bit 0 to HI. Verify that the 1607A display is blanked and that NO TRIG indicator is on.

ADJUSTMENTS

e. Set monitor oscilloscope controls for 5 ns/division sweep speed, and monitor signal PCLK at A1U5 pin 3. Adjust monitor oscilloscope controls to position +1.5 volt point on positive edge of PCLK at some reference point on the CRT graticule.

NOTE

Timing adjustment waveform relationships are shown in figure 5-10.

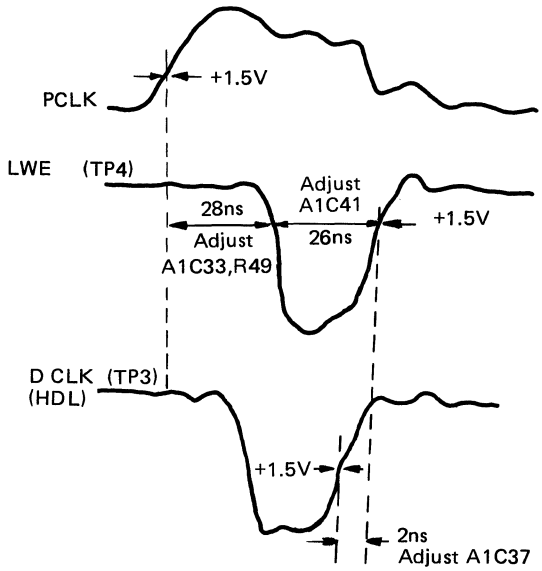

Figure 5-10. Timing Adjustment Waveforms

f. Use same probe as in step e and without moving monitor oscilloscope trigger level or position controls, monitor signal LWE (A1TP4, figure 5-12).

g. Adjust A1C33 (figure 5-12) for maximum delay betwen reference point established by PCLK in step e and leading edge of signal LWE.

h. Adjust A1R49 (figure 5-12) to position leading edge of signal LWE 28 ns from PCLK reference point.

i. Adjust A1C41 (figure 5-12) for 26 ns pulse width on LWE.

j. Note position of +1.5 V point on trailing edge of LWE.

k. Use oscilloscope probe and without moving oscilloscope trigger level or position controls, monitor signal D CLK (HDL) at A1TP3 (figure 5-12).

l. Adjust A1C37 (figure 5-12) to set trailing edge of D CLK (HDL) 2 ns in front of trailing edge of LWE noted in step j.

ADJUSTMENTS

5-25. CUSTOMER MODIFICATIONS.

DESCRIPTION:

As shipped from the factory, the Model 1600A RESET pushbutton controls only the 1600A. If it is desirable to control both the 1600A and the 1607A with the Model 1600A RESET, modify the 1607A Display Board Assembly A2 (see figure 5-11) as follows:

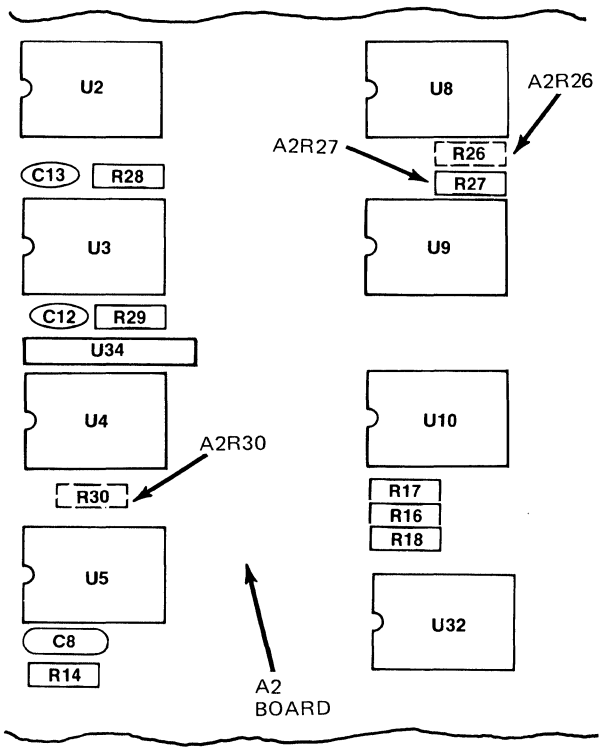

Figure 5-11. Reset Modification Location

PROCEDURE:

a. Turn off instrument power and remove power cable from rear-panel connector.

b. Remove A2 board (refer to disassembly procedure in Section VIII).

c. Remove 10-ohm resistor A2R27 (factory installed).

d. Install 10-ohm resistor A2R26 and A2R30 (not installed at factory).

e. Reinstall A2 board.

NOTE

This modification affects instrument operation in the bus mode only. The Model 1607A reset circuit will function normally when used with an oscilloscope.

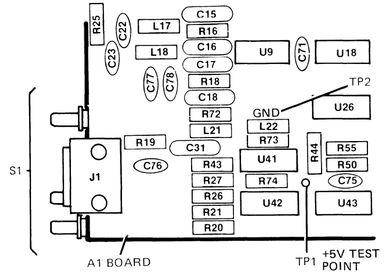

+5 Volt Power Supply Adjustment Location

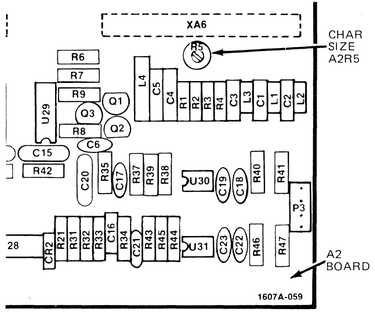

Character Size Adjustment Location

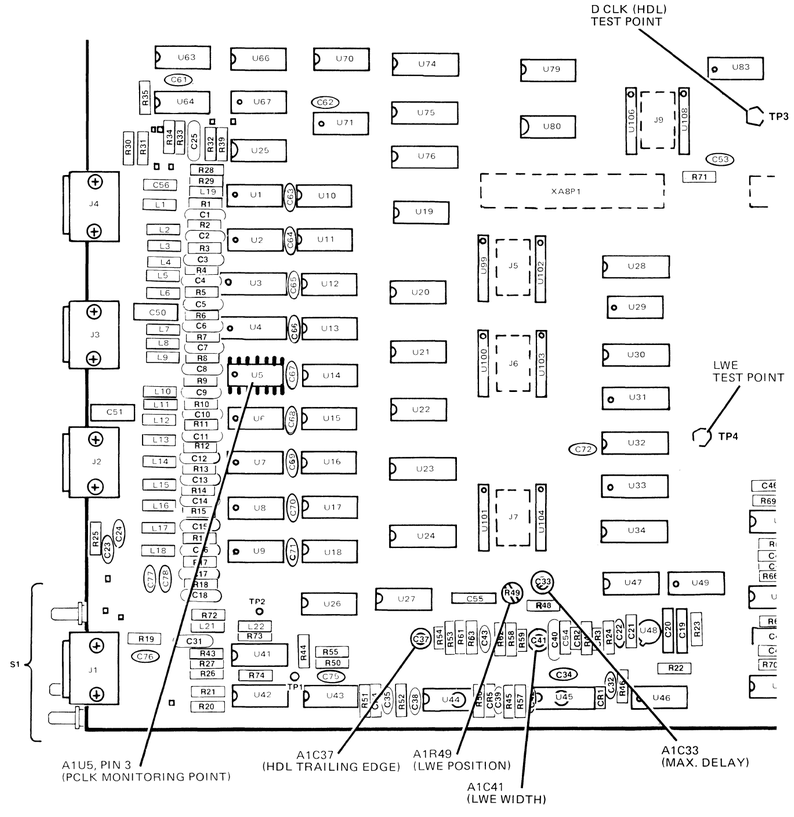

Figure 5-12. Adjustment Locations

PERFORMANCE TEST RECORD

HEWLETT-PACKARD

MODEL 1607A

LOGIC STATE ANALYZER **Tested By**_____

Serial No. _____ **Date**_____

Paragraph Number	Test	Results		
		Min	Actual	Max
5-10	Initial Operational Check			
	Trigger Word Switches	NO TRIG Loss of Data		
	Grounded Probes	NO TRIG Loss of Data		
5-11	INPUT RC			
	Input Resistance	40 kΩ ±3 kΩ		
	Shunt Capacitance	≤14 pF		
5-12	Input Bias Current			
	Clock & Probe Inputs			≤30 μA
5-13	Input Threshold/Swing	.5 V +5% of THLD		
	VAR MEAS/SET Swing			
	+1.5 V Threshold	Valid Data		
	0 V Threshold	Valid Data		
	+10 V Threshold	Vaild Data		
	—10 V Threshold	Valid Data		
5-14	Setup and Hold Time			
	Setup Time	20 ns		
	Hold Time	0 ns		
5-15	Repetition Rate			20 MHz
5-16	Minimum Clock Pulse Width			
	Applied pulses > 20 ns	20 ns		
	Minimum Data Pulse			
	Applied pulse > 25 ns	25 ns		
5-17	Trigger Arm Input			
	Levels			
	HI	> 2 V, < 5 V		
	LO	> 0 V, < 0.4 V		
5-18	Pattern and Delay Trigger Outputs	into 50		
	Pattern Trigger Output	2 V < HI > 5 V pk 0 V < LO > .4 V pk		
	Delay Trigger Output	2 V < HI > 5 V pk 0 V < LO > .4 V pk		
	WIDTH	≈ 25 ns Synchronous		

PERFORMANCE TEST RECORD (Cont'd)

Paragraph Number	Test	Results		
		Min	Actual	Max
5-19	Display Outputs			
	Horizontal Output	< 0.6 V to >6 V p-p, ±8 V max into 100 kΩ		
	Vertical Output	< 0.6 V to >6 V p-p, ±8 V max into 100 k Ω		
	Z-axis Output	>10 V p-p		

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. The abbreviations used in the parts list are described in table 6-1. Table 6-2 lists the parts in alphanumeric order by reference designation and includes the manufacturer and manufacturer's part number. Table 6-3 contains the list of manufacturers' codes.

6-3. ORDERING INFORMATION.

6-4. To obtain replacement parts from Hewlett-Packard, address order or inquiry to the nearest Hewlett-Packard Sales/Service Office and supply the following information:

a. Instrument model and serial number.

b. HP part number of item(s).

c. Quantity of part(s) desired.

d. Reference designation of part(s).

6-5. To order a part not listed in the table, provide the following information:

a. Instrument model and serial number.

b. Description of the part, including function and location in the instrument.

c. Quantity desired.

Table 6-1. Abbreviations for Replaceable Parts List

A	AMPERE(S)	H	HENRY(IES)	NPN	NEGATIVE-POSITIVE-NEGATIVE	RWV	REVERSE WORKING VOLTAGE
ASSY	ASSEMBLY	HG	MERCURY				
		HP	HEWLETT-PACKARD	NSR	NOT SEPARATELY REPLACEABLE	S-B	SLOW-BLOW
BD	BOARD(S)	HZ	HERTZ			SCR	SILICON CONTROLLED RECTIFIER
BH	BINDER HEAD						
BP	BANDPASS	IF	INTERMEDIATE FREQ.				
		IMPG	IMPREGNATED	OBD	ORDER BY DESCRIPTION	SE	SELENIUM
C	CENTI (10^{-2})	INCD	INCANDESCENT			SEC	SECOND(S)
CAR	CARBON	INCL	INCLUDE(S)	OH	OVAL HEAD	SECT	SECTION(S)
CCW	COUNTERCLOCKWISE	INS	INSULATION(ED)	OX	OXIDE	SI	SILICON
CER	CERAMIC	INT	INTERNAL			SIL	SILVER
CMO	CABINET MOUNT ONLY			P	PEAK	SL	SLIDE
COAX	COAXIAL	K	KILO (10^{3})	PC	PRINTED (ETCHED) CIRCUIT(S)	SP	SINGLE POLE
COEF	COEFFICIENT	KG	KILOGRAM			SPL	SPECIAL
COMP	COMPOSITION			PF	PICOFARADS	ST	SINGLE THROW
CONN	CONNECTOR(S)	LB	POUND(S)	PHL	PHILLIPS	STD	STANDARD
CRT	CATHODE-RAY TUBE	LH	LEFT HAND	PIV	PEAK INVERSE VOLTAGE(S)		
CW	CLOCKWISE	LIN	LINEAR TAPER			TA	TANTALUM
		LOG	LOGARITHMIC TAPER	PNP	POSITIVE-NEGATIVE-POSITIVE	TD	TIME DELAY
D	DECI (10^{-1})	LPF	LOW-PASS FILTER(S)			TFL	TEFLON
DEPC	DEPOSITED CARBON	LVR	LEVER	P/O	PART OF	TGL	TOGGLE
DP	DOUBLE POLE			PORC	PORCELAIN	THYR	THYRISTOR
DT	DOUBLE THROW	M	MILLI (10^{-3})	POS	POSITION(S)	TI	TITANIUM
		MEG	MEGA (10^{6})	POT	POTENTIOMETER(S)	TNLDIO	TUNNEL DIODE(S)
ELECT	ELECTROLYTIC	MET FILM	METAL FILM	P-P	PEAK-TO-PEAK	TOL	TOLERANCE
ENCAP	ENCAPSULATED	MET OX	METAL OXIDE	PRGM	PROGRAM	TRIM	TRIMMER
EXT	EXTERNAL	MFR	MANUFACTURER	PS	POLYSTYRENE		
		MINAT	MINIATURE	PWV	PEAK WORKING VOLTAGE	U	MICRO (10^{-6})
F	FARAD(S)	MOM	MOMENTARY				
FET	FIELD-EFFECT TRANSISTOR(S)	MTG	MOUNTING			V	VOLTS
		MY	MYLAR	RECT	RECTIFIER(S)	VAR	VARIABLE
FH	FLAT HEAD			RF	RADIO FREQUENCY	VDCW	DC WORKING VOLT(S)
FIL H	FILLISTER HEAD	N	NANO (10^{-9})	RFI	RADIO FREQUENCY INTERFERENCE		
FXD	FIXED	N/C	NORMALLY CLOSED			W	WATT(S)
		NE	NEON	RH	ROUND HEAD OR RIGHT HAND	W/	WITH
G	GIGA (10^{9})	N/O	NORMALLY OPEN			WIV	WORKING INVERSE VOLTAGE
GE	GERMANIUM	NOP	NEGATIVE POSITIVE ZERO (ZERO TEMPERATURE COEFFICIENT)				
GL	GLASS			RMO	RACK MOUNT ONLY	W/O	WITHOUT
GRD	GROUNDED			RMS	ROOT MEAN SQUARE	WW	WIREWOUND

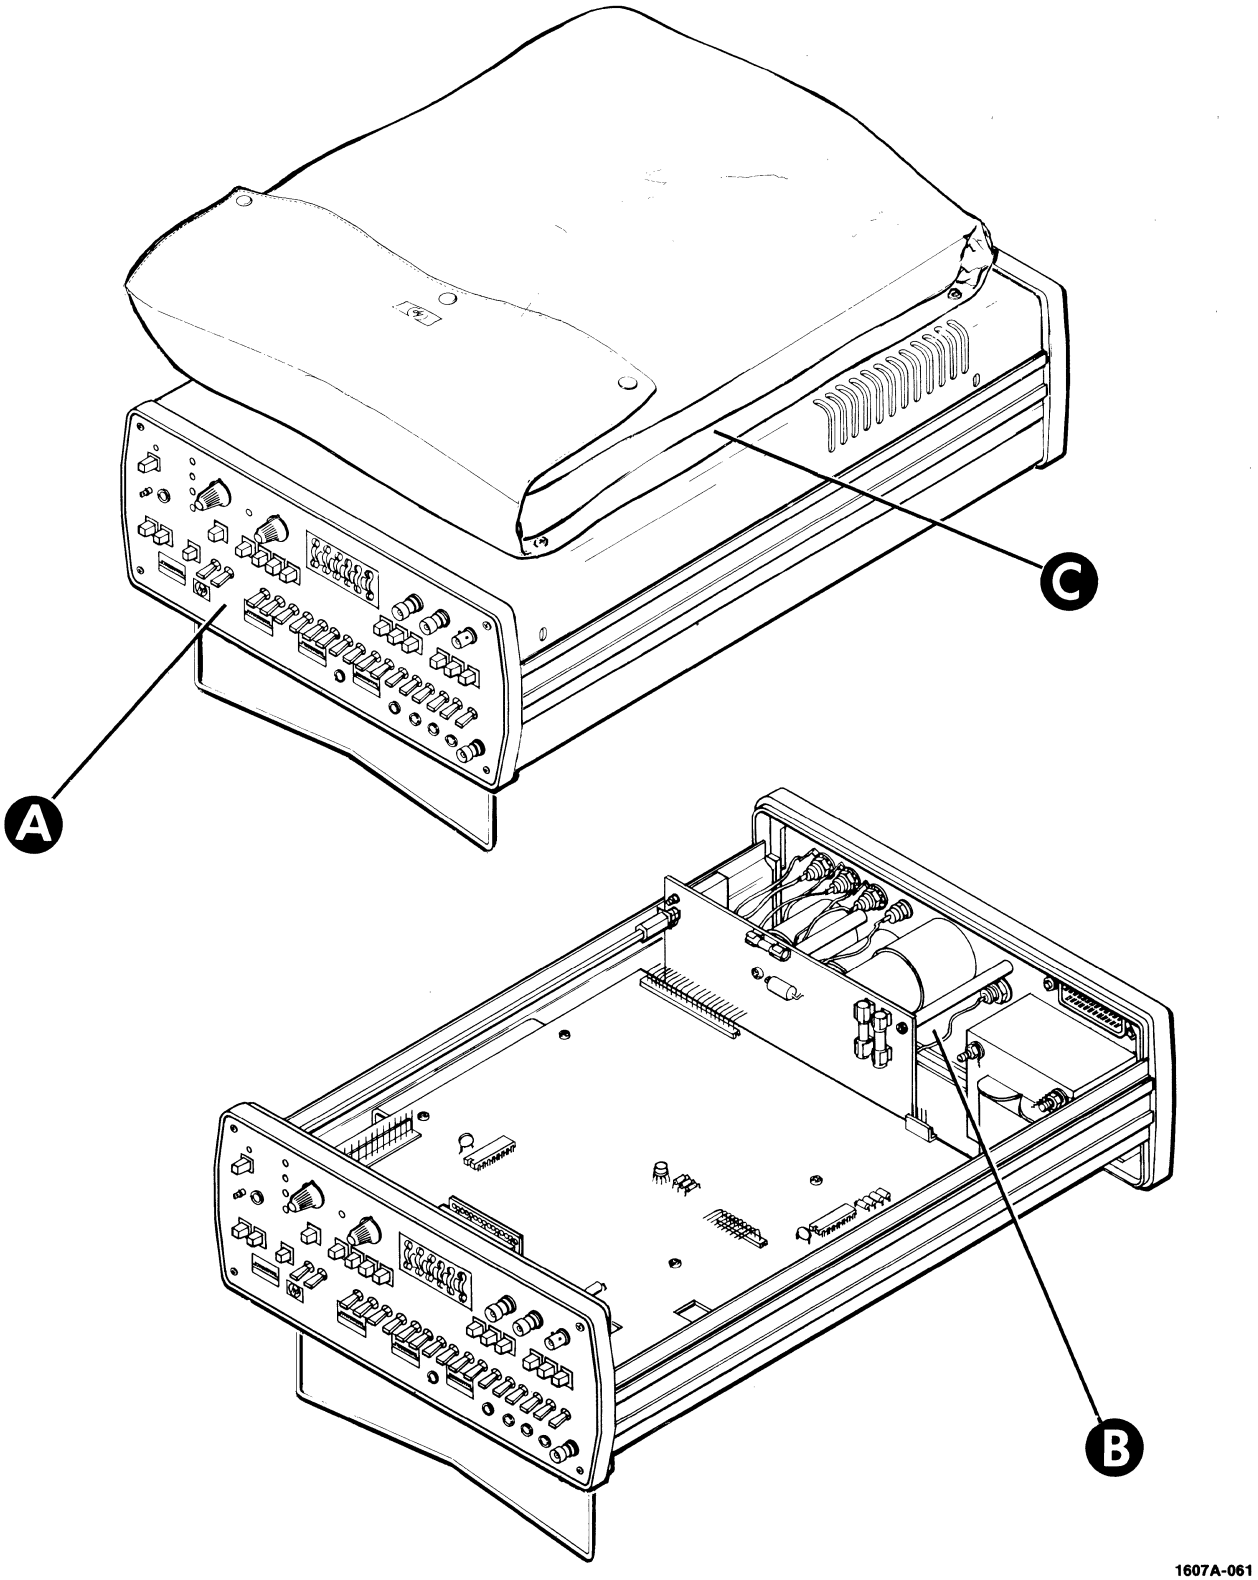

Figure 6-1. Illustrated Parts Breakdown (Sheet 1 of 3)

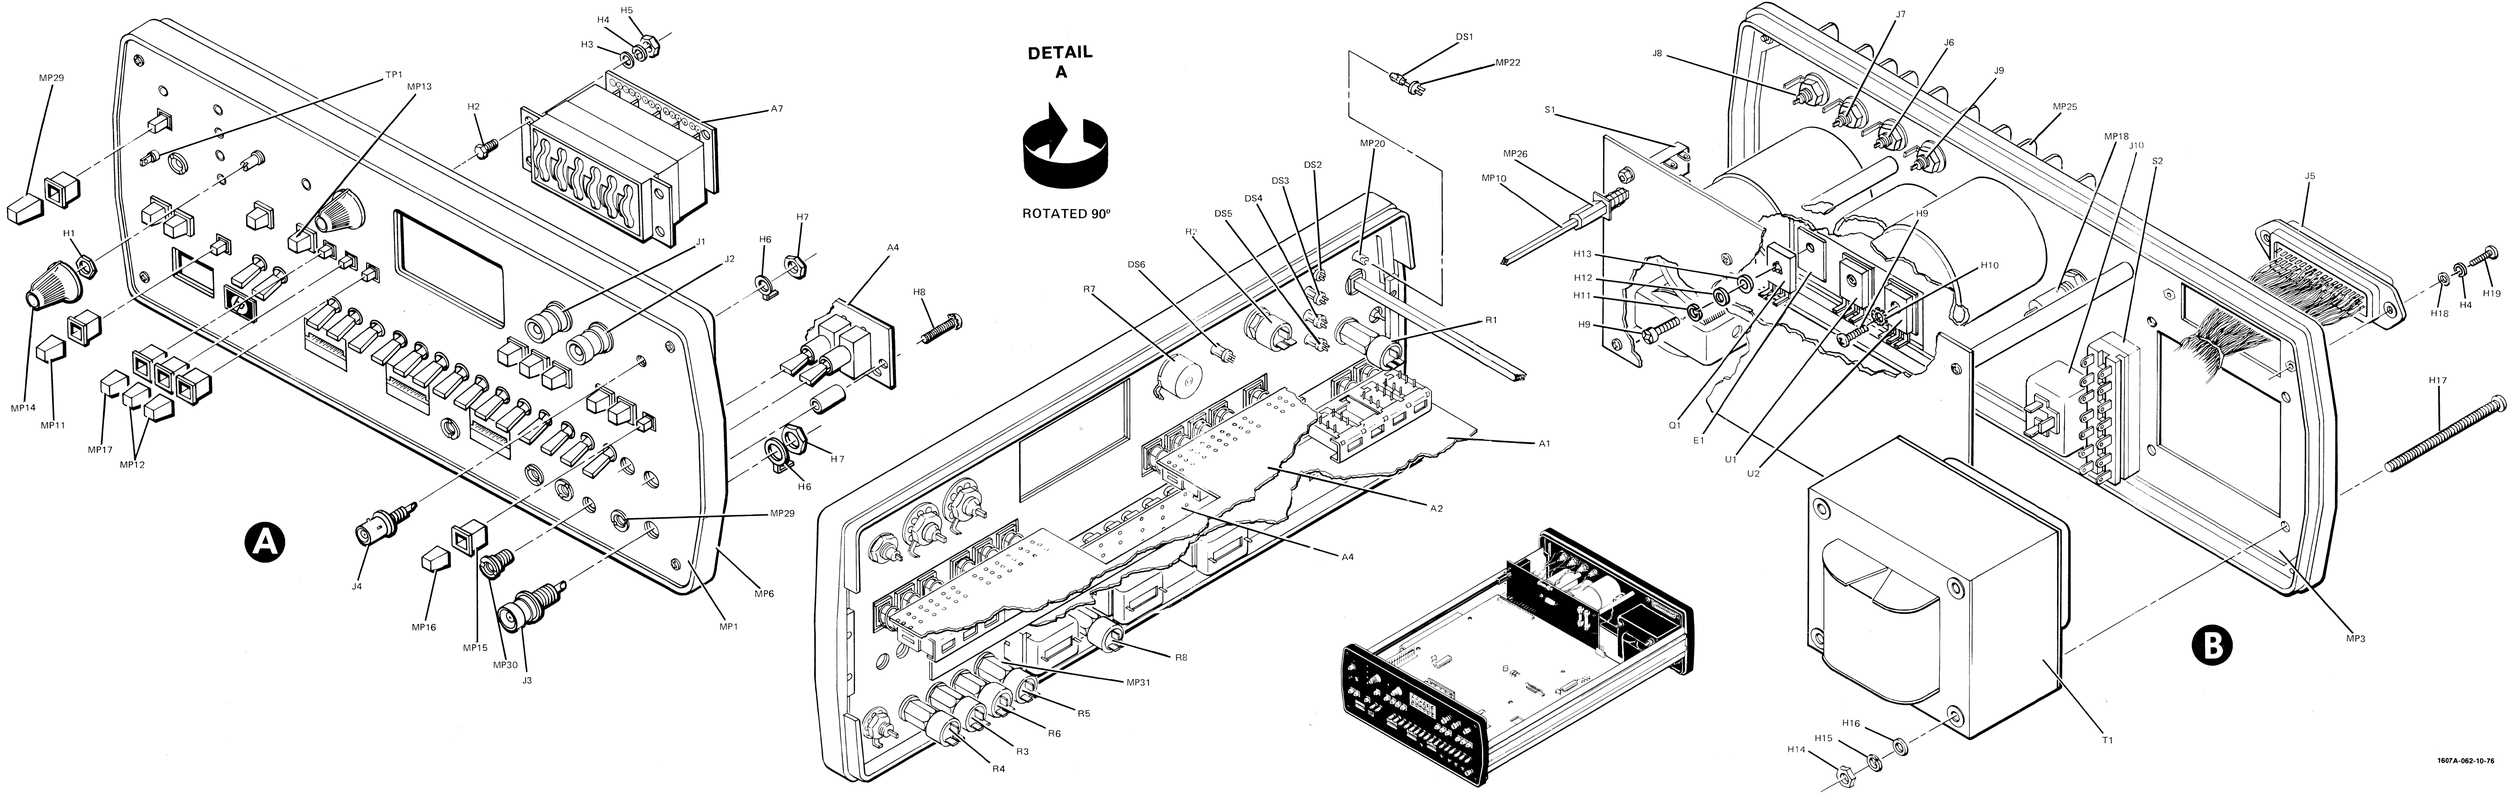

Figure 6-1.
Illustrated Parts Breakdown (Sheet 2 of 3)

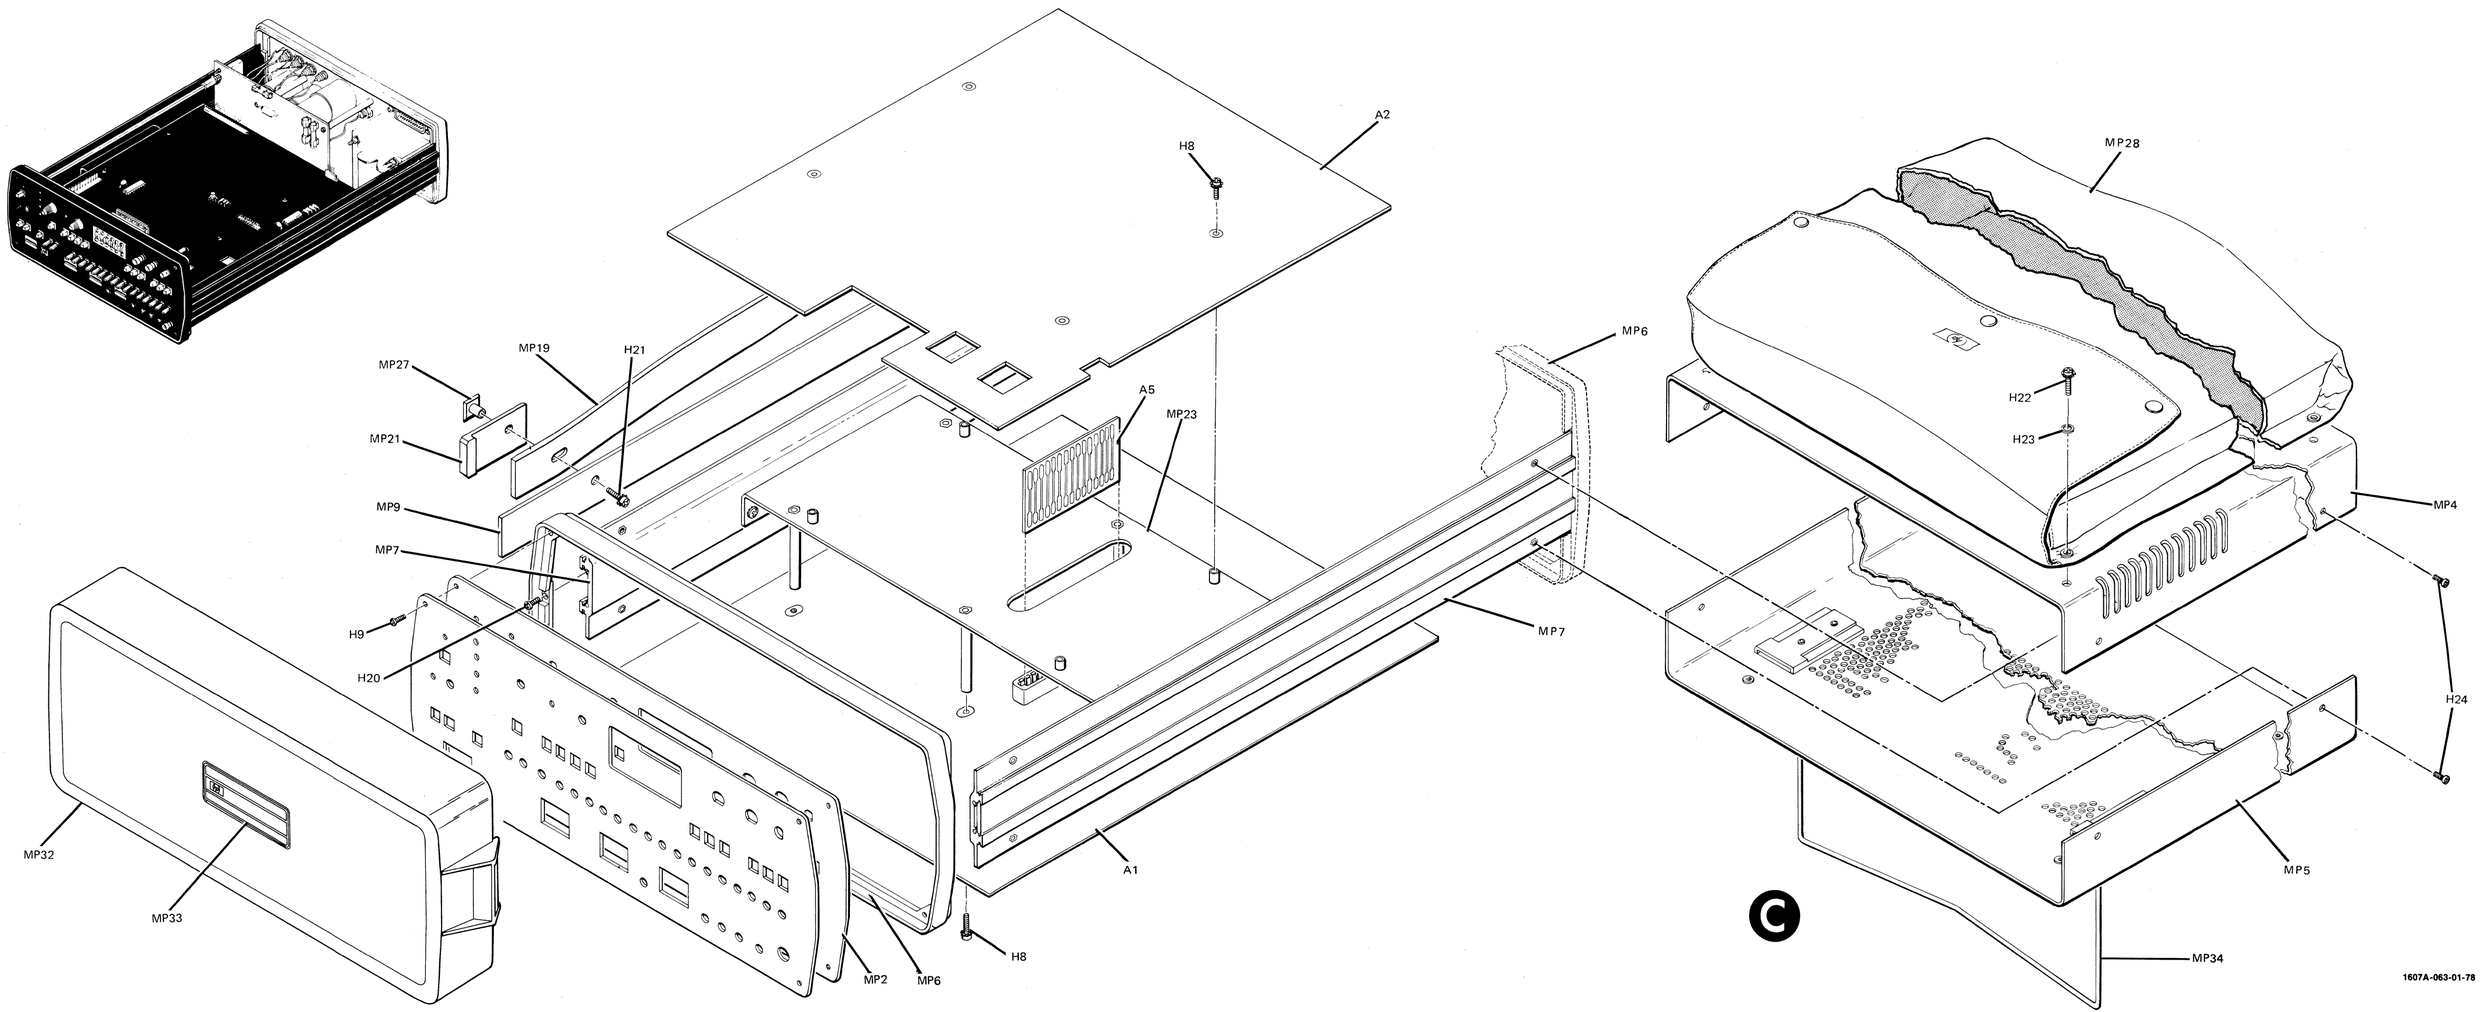

Figure 6-1. Illustrated Parts Breakdown (Sheet 3 of 3)

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1	01600-66517		BOARD ASSY, DATA ACQUISITION	28480	01600-66517
A2	01607-66504		BOARD ASSY, DISPLAY	28480	01607-66504
A3	01607-66502		BOARD ASSY, LOW VOLTAGE P.S.	28480	01607-66502
A4	01600-66506		BOARD ASSY, TRIGGER SWITCH	28480	01600-66506
A5	01607-26503		BOARD, PRINTED CIRCUIT	28480	01607-26503
A6	01607-26503		BOARD, PRINTED CIRCUIT	28480	01607-26503
A7	01600-66510		BOARD ASSY, DIGITAL SWITCH	28480	01600-66510
CR1	1901-0511	1	DIODE-PWR RECT 1N3889R 200NS 50V 12A	12954	1N3889R
DS1	1990-0486	5	LED-VISIBLE	28480	1990-0486
DS2	1990-0486		LED-VISIBLE	28480	1990-0486
DS3	1990-0486		LED-VISIBLE	28480	1990-0486
DS4	1990-0486		LED-VISIBLE	28480	1990-0486
DS5	1990-0486		LED-VISIBLE	28480	1990-0486
DS6	2140-0016	1	LAMP, INCAND, BULB T-1, 5V	71744	683
E1	0340-0511	1	INSULATOR, TRANSISTOR	13103	43-77-2
F1	2110-0007	1	FUSE 1A 250V SLO-BLO 1.25X.25 (115V OPERATION)	71400	MDL-1
F1	2110-0202		FUSE 0.5A 250V (230V OPERATION)	75915	313.500S
H1	2950-0072	3	NUT 1/4-32	28480	2950-0072
H2	0520-0164	2	SCREW 2-56 X 0.82	28480	0520-0164
H3	3050-0395	2	FLATWASHER .102-IN-ID .218-IN-OD	28480	3050-0395
H4	2190-0112	8	LOCKWASHER NO. 2 .088-IN-ID .175-IN-OD	28480	2190-0112
H5	0610-0001	4	NUT 2-56 X .062 IN.	28480	0610-0001
H6	0360-1632	6	LUG, SLDR 3/8 IN.	28480	0360-1632
H7	2950-0001	7	NUT, 3/8-32X.094	12697	20/4-13
H8	2200-0103	22	SCREW 4-40 PAN HD POZI REC SST-300	28480	2200-0103
H9	2200-0141	13	SCREW 4-40 PAN HD POZI REC SST-300	28480	2200-0141
H10	2190-0910	1	LOCKWASHER .12-IN-ID .275-IN-OD	28480	2190-0910
H11	2190-0119	2	LOCKWASHER .48-IN-ID .75-IN-OD	28480	2190-0119
H12	3050-0235	2	FLATWASHER NO. 4 .117-IN-ID .25-IN-OD	28480	3050-0235
H13	3050-0791	2	WASHER, SHLDR .116-IN-ID	28480	3050-0791
H14	2580-0004	4	NUT 8-32X.125 IN.	28480	2580-0004
H15	2190-0017	4	LOCKWASHER NO. 8 .168-IN-ID 0.31-IN-OD	28480	2190-0017
H16	3050-0071	4	FLATWASHER NO. 8 .169-IN-ID .438-IN-OD	28480	3050-0071
H17	2510-0135	4	SCREW 8-32 PAN HD POZI REC SST-300	28480	2510-0135
H18	3050-0194	4	FLATWASHER .088-IN-ID .188-IN-OD	28480	3050-0194
H19	0520-0129	4	SCREW 2-56 PAN HD POZI REC SST-300	28480	0520-0129
H20	0624-0279	8	SCREW 8-32 PAN	28480	0624-0279
H21	2360-0113	2	SCREW 6-32X0.25 IN. PAN HD POZI	28480	2360-0113
H22	2360-0117	4	SCREW 6-32 PAN HD POZI REC SST-300	28480	2360-0117
H23	3050-0010	4	FLATWASHER .147-IN-ID .312-IN-OD	76210	65
H24	2200-0762	8	SCREW 4-40 TR HD POZI REC SST-300	28480	2200-0762
J1	1250-0083	7	CONNECTOR-RF BNC FEM SGL HOLE FR	24931	28JR-130-1
J2	1250-0083		CONNECTOR-RF BNC FEM SGL HOLE FR	24931	28JR-130-1
J3	1250-0083		CONNECTOR-RF BNC FEM SGL HOLE FR	24931	28JR-130-1
J4	1250-0659	1	CONNECTOR-RF TPS FEM SGL HOLE-FR 50-OHM	24931	23JR-107-1
J5	1251-0085	1	CONNECTOR, 36-CONT, FEM, MICRO RIBBON	71785	57-40360-375
J6	1250-0083		CONNECTOR-RF BNC FEM SGL HOLE FR	24931	28JR-130-1
J7	1250-0083		CONNECTOR-RF BNC FEM SGL HOLE FR	24931	28JR-130-1
J8	1250-0083		CONNECTOR-RF BNC FEM SGL HOLE FR	24931	28JR-130-1
J9	1250-0083		CONNECTOR-RF BNC FEM SGL HOLE FR	24931	28JR-130-1
J10	1251-2357	1	CONNECTOR, AC POWER HP-9 MALE FLANGE	28480	1251-2357
MP1	01607-00202	1	PANEL, FRONT	28480	01607-00202
MP2	01607-00203	1	PANEL, SUB	28480	01607-00203
MP3	01607-00204	1	PANEL, REAR	28480	01607-00204
MP4	01607-04101	1	COVER, TOP	28480	01607-04101
MP5	01607-04102	1	COVER, BOTTOM	28480	01607-04102
MP6	01620-20501	2	FRAME, CASTING	28480	01620-20501
MP7	01607-23701	2	RAIL, SIDE	28480	01607-23701
MP8	01607-07201	1	TRIM, SIDE RAIL	28480	01607-07201
MP9	01607-07202	1	TRIM, SIDE RAIL	28480	01607-07202
MP10	01607-23201	1	EXTENSION, SWITCH	28480	01607-23201
MP11	0370-0603	1	PUSHBUTTON:SQUARE, MINT GRAY	28480	0370-0603
MP12	0370-0671	1	PUSHBUTTON,LEG BLU	28480	0370-0671
MP13	0370-0684	1	PUSHBUTTON, HARVEST GOLD	28480	0370-0684
MP14	0370-1005	2	KNOB; BASE; PRT; .375 IN; JGK; SGI	28480	0370-1005
MP15	0370-2626	15	BEZEL, PB GRAY	28480	0370-2626
MP16	0370-2630	6	PUSHBUTTON, WIL GRN	28480	0370-2630
MP17	0370-2790	1	PUSHBUTTON, YEL-ORN	28480	0370-2790
MP18	1400-0084	1	FUSEHOLDER-EXTR POST 15A 250V UL	28480	1400-0084
MP19	1440-0103	1	HANDLE; SPCL 12.5 L .12 THK	28480	1440-0103
MP20	1450-0404	1	LIGHT-IND LENS CAP CLR TL LENS	28480	1450-0404
MP21	5040-7042	2	CAP, PLASTIC	28480	5040-7042
MP22	00183-67701	1	BASE, PILOT LIGHT	28480	00183-67701
MP23	01607-01201	1	BRACKET, MOUNTING	28480	01607-01201
MP24	01607-24701	3	SPACER, POWER SUPPLY	28480	01607-24701
MP25	01720-20503	1	HEAT SINK	28480	01720-20503
MP26	01830-23201	1	COUPLER, SWITCH EXTENSION	28480	01830-23201
MP27	03580-24706	1	NUT	28480	03580-24706
MP28	1540-0292	1	CASE-ACCESS PVC 10.5-LG 1.5-WD 13.5-DP	28480	1540-0292
MP29	0370-2862	1	PUSHBUTTON, CORP WHT	28480	0370-2862
MP30	1490-0968	5	BUSHING: POT	28480	1490-0968
MP31	0590-0043	6	NUT; HEX, DBL CHAM	28480	0590-0043
MP32	5040-0562	1	COVER, FRONT PANEL	28480	5040-0562
MP33	7120-4184	1	LABEL, COVER	28480	7120-4184
MP34	1460-1451	1	TILT STAND	28480	1460-1451
Q1	1854-0433	1	TRANSISTOR NPS SI PD=90W FT=2MHZ	28480	1854-0433
R1	2100-2635	3	RESISTOR-VAR 50K 20% CC	01121	TYPE W
R2	2100-3460	1	RESISTOR-VAR 500K 10% CC	01121	WA1N040S504AZ
R3	2100-2062	2	RESISTOR-VAR 500 OHM 10% CC	12697	63M
R4	2100-2635		RESISTOR-VAR 50K 20% CC	01121	TYPE W
R5	2100-2062		RESISTOR-VAR 500 OHM 10% CC	12697	63M
R6	2100-2635		RESISTOR-VAR 50K 20% CC	01121	TYPE W
R7	2100-2492	2	RESISTOR-VAR 5K 20% CC	71450	SERIES 300
R8	2100-2492		RESISTOR-VAR 5K 20% CC	71450	SERIES 300
S1	3101-1720	1	SWITCH-PB 1-STA DPDT 4A 250VAC	31918	IXF(D003-01)NE1520-103EE
T1	9100-3468	1	TRANSFORMER POWER	28480	9100-3468
U1	1826-0147	1	IC LIN REGULATOR	07263	7812UC
U2	1826-0221	1	IC LIN MC 7912CP REGULATOR	04713	MC7912CP
W1	01607-61602	1	CABLE, DISPLAY TIME/LO	28480	01607-61602
W2	01607-61601	1	CABLE, V SIZE AND POSITION	28480	01607-61601
W3	01607-61604	1	CABLE, HORIZ/VERT OUT	28480	01607-61604
W4	01607-61609	1	CABLE, LV POWER INPUT	28480	01607-61609
W5	01607-61610	1	CABLE, INPUT/OUTPUT	28480	01607-61610
W6	01607-61611	1	CABLE, POWER INPUT	28480	01607-61611
W7	8120-1521	1	CABLE, UNSHLD 3-COND 18AWG	28480	8120-1521
W8	01607-61612	1	CABLE, VOLT REG A	28480	01607-61612
W9	01607-61613	1	CABLE, VOLT REG B	28480	01607-61613

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
W10	01607-61614	1	CABLE, VOLT REG C	28480	01607-61614
W11	01607-61603	1	CABLE, THRESHOLD	28480	01607-61603
A1	01600-66517	1	BOARD ASSY, DATA ACQUISITION	28480	01600-66517
A1C1	0140-0202	21	CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C2	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C3	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C4	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C5	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C6	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C7	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C8	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C9	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C10	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C11	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C12	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C13	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C14	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C15	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C16	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C17	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C18	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C19	0160-0174	5	CAPACITOR-FXD .47UF +80-20% 25WVDC CER	28480	0160-0174
A1C20	0160-0174		CAPACITOR-FXD .47UF +80-20% 25WVDC CER	28480	0160-0174
A1C21	0160-0174		CAPACITOR-FXD .47UF +80-20% 25WVDC CER	28480	0160-0174
A1C22	0160-3448	1	CAPACITOR-FXD 1000PF +-10% 1000WVDC CER	28480	0160-3448
A1C23	0160-3451	41	CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C24	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C25	0140-0190	2	CAPACITOR-FXD 39PF +-5% 300WVDC MICA	72136	DM15E390J0300WV1CR
A1C26	0160-2207	1	CAPACITOR-FXD 300PF +-5% 300WVDC MICA	28480	0160-2207
A1C27	0140-0196	1	CAPACITOR-FXD 150PF +-5% 300WVDC MICA	72136	DM15F151J0300WV1CR
A1C28	0160-2204	4	CAPACITOR-FXD 100PF +-5% 300WVDC MICA	28480	0160-2204
A1C29	0140-0202		CAPACITOR-FXD 15PF +-5% 500WVDC MICA	72136	DM15C150J0500WV1CR
A1C30	0140-0190		CAPACITOR-FXD 39PF +-5% 300WVDC MICA	72136	DM15E390J0300WV1CR
A1C31	0160-2204		CAPACITOR-FXD 100 PF +-5% 300WVDC MICA	28480	0160-2204
A1C32	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C33	0121-0046	3	CAPACITOR; VAR; TRMR; CER; 9/35PF	73899	DV11PS350
A1C34	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C35	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C36			NOT ASSIGNED		
A1C37	0121-0046		CAPACITOR; VAR; TRMR; CER; 9/35PF	73899	DV11PS350
A1C38	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C39	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C40	0160-2198	4	CAPACITOR-FXD 20PF +-5% 300WVDC MICA	28480	0160-2198
A1C41	0121-0046		CAPACITOR; VAR; TRMR; CER; 9/35PF	73899	DV11PS350
A1C42	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C43	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C44	0180-0197	5	CAPACITOR-FXD; 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A1C45	0180-0116	6	CAPACITOR-FXD; 6.8UF+-10% 35VDC TA	56289	150D685X9035B2
A1C46	0180-0116		CAPACITOR-FXD; 6.8UF+-10% 35VDC TA	56289	150D685X9035B2
A1C47	0180-0197		CAPACITOR-FXD; 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A1C48	0180-0116		CAPACITOR-FXD; 6.8UF+-10% 35VDC TA	56289	150D685X9035B2
A1C49	0180-0116		CAPACITOR-FXD; 6.8UF+-10% 35VDC TA	56289	150D685X9035B2
A1C50	0180-0116		CAPACITOR-FXD; 6.8UF+-10% 35VDC TA	56289	150D685X9035B2
A1C51	0180-0116		CAPACITOR-FXD; 6.8UF+-10% 35VDC TA	56289	150D685X9035B2
A1C52	0160-2198		CAPACITOR-FXD 20PF +-5% 300WVDC MICA	28480	0160-2198
A1C53	0160-3447		CAPACITOR-FXD 470 PF +-10% 1000WVDC	28480	0160-3447
A1C54	0160-0174		CAPACITOR-FXD .47UF +80-20% 25WVDC CER	28480	0160-0174
A1C55	0160-0174		CAPACITOR-FXD .47UF +80-20% 25WVDC CER	28480	0160-0174
A1C56	0180-0106	2	CAPACITOR-FXD; 60UF+-20% 6VDC TA-SOLID	56289	150D606X0006B2
A1C57	0180-0106		CAPACITOR-FXD; 60UF+-20% 6VDC TA-SOLID	56289	150D606X0006B2
A1C58	0180-0228	7	CAPACITOR-FXD; 22UF+-10% 15VDC TA-SOLID	56289	150D226X9015B2
A1C59	0180-0228		CAPACITOR-FXD; 22UF+-10% 15VDC TA-SOLID	56289	150D226X9015B2
A1C60	0160-2198		CAPACITOR-FXD 20PF +-5% 300WVDC MICA	28480	0160-2198
A1C61	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C62	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C63	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C64	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C65	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C66	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C67	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C68	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C69	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C70	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1C71	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C72	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C73	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C74	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C75	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C76	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C77	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1C78	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A1CR1	1901-0040	5	DIODE-SWITCHING 2NS 30V 50MA	28480	1901-0040
A1CR2	1901-0535	2	DIODE-SCHOTTKY	28480	1901-0535
A1CR3	1901-0535		DIODE-SCHOTTKY	28480	1901-0535
A1CR4	1901-0040		DIODE-SWITCHING 2NS 30V 50MA	28480	1901-0040
A1CR5	1901-0040		DIODE-SWITCHING 2NS 30V 50MA	28480	1901-0040
A1J1			CONSISTS OF: A1J1E1, A1J1MP1 AND A1J1MP2		
A1J1E1	1251-0699	4	CONNECTOR:MALE 17-PIN	4H713	280-50-00-002
A1J1MP1	5040-7478	4	HOUSING:TOP CONNECTOR	28480	5040-7478
A1J1MP2	5040-7479	4	HOUSING:BOTTOM CONNECTOR	28480	5040-7479
A1J2			CONSISTS OF: A1J1E1, A1J1MP1 AND A1J1MP2		
A1J3			CONSISTS OF: A1J1E1, A1J1MP1 AND A1J1MP2		
A1J4			CONSISTS OF: A1J1E1, A1J1MP1 AND A1J1MP2		
A1J5	1200-0548	5	SOCKET, IC 14-CONT DIP SLDR TERM	52072	CA-14S-105D
A1J6	1200-0548		SOCKET, IC 14-CONT DIP SLDR TERM	52072	CA-14S-105D
A1J7	1200-0548		SOCKET, IC 14-CONT DIP SLDR TERM	52072	CA-14S-105D
A1J8	1200-0548		SOCKET, IC 14-CONT DIP SLDR TERM	52072	CA-14S-105D
A1J9	1200-0548		SOCKET, IC 14-CONT DIP SLDR TERM	52072	CA-14S-105D
A1L1	9100-2259	20	COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L2	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L3	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L4	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L5	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L6	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L7	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L8	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L9	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L10	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L11	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L12	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L13	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L14	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L15	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L16	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L17	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L18	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L19	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1L20	9100-2255	2	COIL-FXD MOLDED RF CHOKE 470MH 10%	24226	10/470
A1L21	9100-2255		COIL-FXD MOLDED RF CHOKE 470MH 10%	24226	10/470
A1L22	9100-2259		COIL-FXD MOLDED RF CHOKE 1.5UH 10%	24226	10/151
A1MP1	1200-0547	5	LOCK-DIP IC FOR 14 PIN SOCKET	52072	CA-14-200-DL
A1R1	0757-0420	18	RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R2	0757-0420		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R3	0757-0420		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R4	0757-0420		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R5	0757-0420		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R6	0757-0420		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R7	0757-0420		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R8	0757-0420		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R9	0757-0420		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R10	0757-0420		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R11	0757-0420		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R12	0757-0420		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R13	0757-0420		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R14	0757-0420		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R15	0757-0420		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R16	0757-0420		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R17	0757-0420		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R18	0757-0420		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A1R19	0684-6821	4	RESISTOR 6.8K 10% .25W FC TC=-400/+700	01121	CB6821
A1R20	0698-0084	2	RESISTOR 2.15K 1% .125W F TC=0+-100	16299	C4-1/8-T0-2151-F
A1R21	0757-0438	2	RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5111-F
A1R22	0757-0472	2	RESISTOR 200K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2003-F
A1R23	0757-0465	2	RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A1R24	0757-0463	1	RESISTOR 82.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-8252-F
A1R25	0683-0275	1	RESISTOR 2.7 5% .25W FC TC=-400/+500	01121	CB2705
A1R26	0684-6821		RESISTOR 6.8K 10% .25W FC TC=-400/+700	01121	CB6821
A1R27	0684-6821		RESISTOR 6.8K 10% .25W FC TC=-400/+700	01121	CB6821
A1R28	0757-0407	4	RESISTOR 200 1% .125W F TC=0+-100	24546	C4-1/8-T0-201-F
A1R29	0757-0401	3	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A1R30	0684-3911	4	RESISTOR 390 10% .25W FC TC=-400/+600	01121	CB3911

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1R31	0684-3911		RESISTOR 390 10% .25W FC TC=-400/+600	01121	CB3911
A1R32	0684-3911		RESISTOR 390 10% .25W FC TC=-400/+600	01121	CB3911
A1R33	0757-0280	10	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A1R34	0757-0280		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A1R35	0684-3911		RESISTOR 390 10% .25W FC TC=-400/+600	01121	CB3911
A1R36	0757-0288	3	RESISTOR 9.09K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-9091-F
A1R37	0757-0288		RESISTOR 9.09K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-9091-F
A1R38	0757-0288		RESISTOR 9.09K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-9091-F
A1R39	0683-5105	1	RESISTOR 51 5% .25W FC TC=-400/+500	01121	CB5105
A1R40	0757-0280		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A1R41	0698-3447	1	RESISTOR 422 1% .125W F TC=0+-100	16299	C4-1/8-T0-4220-F
A1R42	0757-0418	1	RESISTOR 619 1% .125W F TC=0+-100	24546	C4-1/8-T0-6190-F
A1R43	0757-0416	3	RESISTOR 511 1% .125W F TC=0+-100	24546	C4-1/8-T0-5110-F
A1R44	0698-3150	1	RESISTOR 2.37K 1% .125W F TC=0+-100	16299	C4-1/8-T0-2371-F
A1R45	0698-3122	1	RESISTOR 412 1% .125W F TC=0+-100	03888	PME55-1/8-T0 4120 F
A1R46	0757-0416		RESISTOR 511 1% .125W F TC=0+-100	24546	C4-1/8-T0-5110-F
A1R47	0757-0442	3	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A1R48	0757-0416		RESISTOR 511 1% .125W F TC=0+-100	24546	C4-1/8-T0-5110-F
A1R49	2100-1788	1	RESISTOR-VAR TRMR 500 OHM 10% C TOP ADJ	84048	170-501
A1R50	0698-3444	2	RESISTOR 316 1% .125W F TC=0+-100	16299	C4-1/8-T0-3160-F
A1R51	0757-0280		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A1R52	0757-0442		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A1R53	0757-0280		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A1R54	0698-4130	1	RESISTOR 39 5% .125W CC TC=0+588	01121	BB3905
A1R55	0698-3444		RESISTOR 316 1% .125W F TC=0+-100	16299	C4-1/8-T0-3160-F
A1R56	0757-0280		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A1R57	0757-0442		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A1R58	0757-0280		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A1R59	0698-3379	1	RESISTOR 68 5% .125W CC TC=0+588	01121	BB6805
A1R60	0684-2201	2	RESISTOR 22 10% .25W FC TC=-400/+500	01121	CB2201
A1R61	0684-4721	1	RESISTOR 4.7K 10% .25W FC TC=-400/+700	01121	CB4721
A1R62	0757-0434	1	RESISTOR 3.65K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3651-F
A1R63	0757-0426	1	RESISTOR 1.3K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1301-F
A1R64	0757-0280		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A1R65		3	NOT ASSIGNED		
A1R66	0757-0457	7	RESISTOR 47.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4752-F
A1R67	0757-0457		RESISTOR 47.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4752-F
A1R68	0757-0457		RESISTOR 47.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4752-F
A1R69	0757-0457		RESISTOR 47.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4752-F
A1R70	0757-0457		RESISTOR 47.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4752-F
A1R71	0684-2201		RESISTOR 22 10% .25W FC TC=-400/+500	01121	CB2201
A1R72	0684-6821		RESISTOR 6.8K 10% .25W FC TC=-400/+700	01121	CB6821
A1R73	0757-0407		RESISTOR 200 1% .125W F TC=0+-100	24546	C4-1/8-T0-201-F
A1R74	0757-0401		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A1R75	0698-0084		RESISTOR 2.15K 1% .125W F TC=0+-100	16299	C4-1/8-T0-2151-F
A1R76	0698-3151	1	RESISTOR 2.87K 1% .125W F TC=0+-100	16299	C4-1/8-T0-2871-F
A1R77	0684-4711		RESISTOR 470 10% .25W CC	01121	CB4711
A1R78	0757-0457		RESISTOR 47.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4752-F
A1S1	3101-1946	1	SWITCH	28480	3101-1946
A1TP1	0360-0535	2	TERMINAL, TEST POINT	4G819	CBD
A1TP2	0360-0535		TERMINAL, TEST POINT	4G819	CBD
A1TP3	1251-2229	2	CONNECTOR; 1-CONT SKT .033 DIA	00779	1-331677-3
A1TP4	1251-2229		CONNECTOR; 1-CONT SKT .033 DIA	00779	1-331677-3
A1U1	1820-0693	9	IC SN74S 74 N	01295	SN74S74N
A1U2	1820-0693		IC SN74S 74 N	01295	SN74S74N
A1U3	1820-0693		IC SN74S 74 N	01295	SN74S74N
A1U4	1820-0693		IC SN74S 74 N	01295	SN74S74N
A1U5	1820-0693		IC SN74S 74 N	01295	SN74S74N
A1U6	1820-0693		IC SN74S 74 N	01295	SN74S74N
A1U7	1820-0693		IC SN74S 74 N	01295	SN74S74N
A1U8	1820-0693		IC SN74S 74 N	01295	SN74S74N
A1U9	1820-0693		IC SN74S 74 N	01295	SN74S74N
A1U10	1820-0692	8	IC SN74S 65 N	01295	SN74S65N
A1U11	1820-0692		IC SN74S 65 N	01295	SN74S65N
A1U12	1820-0692		IC SN74S 65 N	01295	SN74S65N
A1U13	1820-0692		IC SN74S65N	01295	SN74S65N
A1U14	1820-0692		IC SN74S 65 N	01295	SN74S65N
A1U15	1820-0692		IC SN74S 65 N	01295	SN74S65N
A1U16	1820-0692		IC SN74S 65 N	01295	SN74S65N
A1U17	1820-0692		IC SN74S 65 N	01295	SN74S65N
A1U18	1820-0692		IC SN74S 65 N	01295	SN74S65N
A1U19	1820-1146	7	IC CD4050AE	02735	CD4050AE
A1U20	1820-1146		IC CD4050AE	02735	CD4050AE
A1U21	1820-1146		IC CD4050AE	02735	CD4050AE
A1U22	1820-1146		IC CD4050AE	02735	CD4050AE
A1U23	1820-1146		IC CD4050AE	02735	CD4050AE
A1U24	1820-1146		IC CD4050AE	02735	CD4050AE
A1U25	1820-0687	1	IC SN74S 15 N	01295	SN74S15N

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1U26	1820-0691	11	IC SN74S 64 N	01295	SN74S64N
A1U27	1820-1201	1	IC SN74LS 08 N	01295	SN74LS08N
A1U28	1820-1106	4	IC MEMORY	34649	3101A
A1U29	1820-1139	3	IC:TTL, HEX INVERTER	28480	1820-1139
A1U30	1820-1106		IC MEMORY	34649	3101A
A1U31	1820-1139		IC:TTL, HEX INVERTER	28480	1820-1139
A1U32	1820-1106		IC MEMORY	34649	3101A
A1U33	1820-1139		IC:TTL, HEX INVERTER	28480	1820-1139
A1U34	1820-1106		IC MEMORY	34649	3101A
A1U35			NOT ASSIGNED		
A1U36			NOT ASSIGNED		
A1U37			NOT ASSIGNED		
A1U38			NOT ASSIGNED		
A1U39	1820-0640	1	IC SN74 150 N	01295	SN74150N
A1U40			NOT ASSIGNED		
A1U41	1820-0681	3	IC SN74S 00 N	01295	SN74S00N
A1U42	1820-1153	1	IC SN74S 51 N	01295	SN74S51N
A1U43	1820-0629	5	IC SN74S 112 N	01295	SN74S112N
A1U44	1821-0002	2	IC CA3045	02735	CA3045
A1U45	1821-0002		IC CA3045	02735	CA3045
A1U46	1820-0629		IC SN74S 112 N	01295	SN74S112N
A1U47	1820-0661	1	IC SN74 32 N	01295	SN7432N
A1U48	1820-0203	1	IC AMPLIFIER	28480	1820-0203
A1U49	1820-1144	1	IC SN74LS 02 N GATE	01295	SN74LS02N
A1U50	1810-0183	19	NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A1U51	1820-0515	5	IC MULTIVIBRATOR	07263	96020C
A1U52	1820-0515		IC MULTIVIBRATOR	07263	96020C
A1U53	1820-0515		IC MULTIVIBRATOR	07263	96020C
A1U54	1820-0691		IC SN74S 64 N	01295	SN74S64N
A1U55	1820-0691		IC SN74S 64 N	01295	SN74S64N
A1U56	1820-0691		IC SN74S 64 N	01295	SN74S64N
A1U57	1820-0691		IC SN74S 64 N	01295	SN74S64N
A1U58	1820-0910	3	IC SN74LS 83 N	01295	SN74LS83N
A1U59	1820-0910		IC SN74LS 83 N	01295	SN74LS83N
A1U60	1820-1475	2	IC COUNTER	07263	93S16DC
A1U61	1820-0515		IC MULTIVIBRATOR	07263	96020C
A1U62	1820-0697	2	IC SN74S 140 N	01295	SN74S140N
A1U63	1820-0681		IC SN74S 00 N	01295	SN74S00N
A1U64	1820-0691		IC SN74S 64 N	01295	SN74S64N
A1U65	1820-0691		IC SN74S 64 N	01295	SN74S64N
A1U66	1820-0688	1	IC DGTL GATE	01295	SN74S20N
A1U67	1820-1372	3	IC FLIP-FLOP	07263	9S109DC
A1U68	1820-0515		IC MULTIVIBRATOR	07263	96020C
A1U69	1820-0685	1	IC SN74S 10 N	01295	SN74S10N
A1U70	1820-1373	1	IC COUNTER	07263	93S10DC
A1U71	1820-1372		IC FLIP-FLOP	07263	9S109DC
A1U72	1820-0063	1	IC SN74 51 N	01295	SN7451N
A1U73	1820-0669	4	IC COUNTER	07263	93L10DC
A1U74	1820-0669		IC COUNTER	07263	93L10DC
A1U75	1820-0669		IC COUNTER	07263	93L10DC
A1U76	1820-0669		IC COUNTER	07263	93L10DC
A1U77	1820-0691		IC SN74S 64 N	01295	SN74S64N
A1U78	1820-0070	1	IC SN74 30 N	01295	SN7430N
A1U79	1820-0910		IC SN74LS 83 N	01295	SN74LS83N
A1U80	1820-1207	1	IC SN74LS 30 N GATE	01295	SN74LS30N
A1U81	1820-0382	2	IC SN74H 55 N	01295	SN74H55N
A1U82	1820-1204	1	IC SN74LS 20 N GATE	01295	SN74LS20N
A1U83	1820-1470	2	IC SN74LS 157 N	01295	SN74LS157N
A1U84	1820-1372		IC FLIP-FLOP	07263	9S109DC
A1U85	1820-1197	1	IC SN74LS 00 N GATE	01295	SN74LS00N
A1U86	1820-0904	2	IC COMPARATOR	07263	93L24DC
A1U87	1820-0382		IC SN74H 55 N	01295	SN74H55N
A1U88	1820-0681		IC SN74S 00 N	01295	SN74S00N
A1U89	1820-0629		IC SN74S 112 N	01295	SN74S112N
A1U90	1820-0697		IC SN74S 140 N	01295	SN74S140N
A1U91	1820-0691		IC SN74S 64 N	01295	SN74S64N
A1U92	1820-0691		IC SN74S 64 N	01295	SN74S64N
A1U93	1820-0629		IC SN74S 112 N	01295	SN74S112N
A1U94	1820-0629		IC SN74S 112 N	01295	SN74S112N
A1U95	1820-1475		IC COUNTER	07263	93S16DC
A1U96	1820-0686	1	IC SN74S 11 N	01295	SN74S11N
A1U97	1820-0904		IC COMPARATOR	07263	93L24DC
A1U98	1820-0683	1	IC SN74S 04 N	01295	SN74S04N
A1U99	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A1U100	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1U101	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A1U102	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A1U103	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A1U104	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A1U105	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A1U106	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A1U107	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A1U108	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A1U109	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A1U110	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A1XA5	1251-2035	4	CONNECTOR; PC EDGE; 15-CONT; DIP SOLDER	71785	252-15-30-300
A1XA6	1251-2035		CONNECTOR; PC EDGE; 15-CONT; DIP SOLDER	71785	252-15-30-300
A2	01607-66504	1	BOARD ASSY, DISPLAY	28480	01607-66504
A2C1	0180-0228		CAPACITOR-FXD; 22UF+-10% 15VDC TA-SOLID	56289	150D226X9015B2
A2C2	0180-0228		CAPACITOR-FXD; 22UF+-10% 15VDC TA-SOLID	56289	150D226X9015B2
A2C3	0180-0228		CAPACITOR-FXD; 22UF+-10% 15VDC TA-SOLID	56289	150D226X9015B2
A2C4	0160-0153	1	CAPACITOR-FXD 1000PF +-10% 200WVDC POLYE	56289	292P10232
A2C5	0160-0161	1	CAPACITOR-FXD .01UF +-10% 200WVDC POLYE	56289	292P10392
A2C6	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A2C7	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A2C8	0180-0228		CAPACITOR-FXD; 22UF+-10% 15VDC TA-SOLID	56289	150D226X9015B2
A2C9	0180-0229		CAPACITOR-FXD; 22UF+-10% 15VDC TA-SOLID	56289	150D226X9015B2
A2C10	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A2C11	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A2C12	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A2C13	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A2C14	0160-2204		CAPACITOR-FXD 100PF +-5% 300WVDC MICA	28480	0160-2204
A2C15	0160-2204		CAPACITOR-FXD 100PF +-5% 300WVDC MICA	28480	0160-2204
A2C16	0180-0197		CAPACITOR-FXD; 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A2C18	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A2C19	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A2C20	0160-2204		CAPACITOR-FXD 100PF +-5% 300WVDC MICA	28480	0160-2204
A2C22	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A2C23	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A2C24	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A2C25	0180-0309		CAPACITOR-FXD 4.7UF +-20% 10VDC TA	56289	150D475X00102A
A2C26	0180-0197		CAPACITOR-FXD; 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A2C27	0160-3448		CAPACITOR-FXD 1000PF +-10% 1000WVDC CER	28480	0160-3448
A2C28	0160-3448		CAPACITOR-FXD 1000PF +-10% 1000WVDC CER	28480	0160-3448
A2CR1	1901-0040		DIODE-SWITCHING 2NS 30V 50MA	28480	1901-0040
A2CR2	1901-0040		DIODE-SWITCHING 2NS 30V 50MA	28480	1901-0040
A2CR3	1910-0016		DIODE-SWITCHING 1US 60V 60MA	28480	1901-0016
A2L1	9100-2276	3	COIL-FXD MOLDED RF CHOKE 100UH 10%	24226	10/103
A2L2	9100-2276		COIL-FXD MOLDED RF CHOKE 100UH 10%	24226	10/103
A2L3	9100-2276		COIL-FXD MOLDED RF CHOKE 100UH 10%	24226	10/103
A2L4	9100-1663	1	COIL-FXD MOLDED RF CHOKE 2.7MH 5%	04560	22-1312-29J
A2P1	1251-0674	2	CONNECTOR; 10-CONT; MALE; POST TYPE	27264	09-66-1101
A2P2	1251-0674		CONNECTOR; 10-CONT; MALE; POST TYPE	27264	09-66-1101
A2P3	1251-3195	2	CONNECTOR 4-PIN M POST TYPE	27264	09-50-1041(2403-04A)
A2P4	1251-3197	1	CONNECTOR 12-PIN M POST TYPE	27264	09-50-1121(2403-12A)
A2Q1	1853-0036	3	TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A2Q2	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A2Q3	1854-0071	2	TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A2Q4	1854-0071		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A2Q5	1853-0036		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A2Q6	1854-0071		TRANSISTOR NPN SI PD = 300MW FT = 200MHZ	28480	1850-0071
A2R1	0684-1031	7	RESISTOR 10K 10% .25W FC TC=-400/+700	01121	CB1031
A2R2	0757-0407		RESISTOR 200 1% .125W F TC=0+-100	24546	C4-1/8-T0-201-F
A2R3	0757-0407		RESISTOR 200 1% .125W F TC=0+-100	24546	C4-1/8-T0-201-F
A2R4	0684-5621	9	RESISTOR 5.6K 10% .25W FC TC=-400/+700	01121	CB5621
A2R5	2100-1738	1	RESISTOR-VAR TRMR 10KOHM 10% C TOP ADJ	19701	ET50W103
A2R6	0757-0200	4	RESISTOR 5.62K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5621-F
A2R7	0698-3152	1	RESISTOR 3.48K 1% .125W F TC=0+-100	16299	C4-1/8-T0-3481-F
A2R8	0684-1031		RESISTOR 10K 10% .25W FC TC=-400/+700	01121	CB1031
A2R9	0684-5621		RESISTOR 5.6K 10% .25W FC TC=-400/+700	01121	CB5621
A2R10	0757-0443	2	RESISTOR 11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1102-F
A2R11	0757-0421	1	RESISTOR 825 1% .125W F TC=0+-100	24546	C4-1/8-T0-8253-F
A2R12	0757-0443		RESISTOR 11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1102-F
A2R13	0684-3311	1	RESISTOR 330 10% .25W FC TC=-400/+600	01121	CB3311
A2R14	0684-4731	1	RESISTOR 47K 10% .25W FC TC=-400/+800	01121	CB4731
A2R15	0684-2211	8	RESISTOR 220 10% .25W FC TC=-400/+600	01121	CB2211
A2R16	0684-2211		RESISTOR 220 10% .25W FC TC=-400/+600	01121	CB2211
A2R17	0684-2211		RESISTOR 220 10% .25W FC TC=-400/+600	01121	CB2211
A2R18	0684-2211		RESISTOR 220 10% .25W FC TC=-400/+600	01121	CB2211
A2R19	0684-2211		RESISTOR 220 10% .25W FC TC=-400/+600	01121	CB2211
A2R20	0684-2701	1	RESISTOR 27 10% .25W FC TC=-400/+500	01121	CB2701

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A2R21	0684-5621		RESISTOR 5.6K 10% .25W FC TC=-400/+700	01121	CB5621
A2R22	0757-0317	2	RESISTOR 1.33K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1331-F
A2R23	0757-0462	1	RESISTOR 75K 1% .125W F TC=0+-100	24546	C4-1/8-T0-7502-F
A2R24	0684-1031		RESISTOR 10K 10% .25W FC TC=-400/+700	01121	CB1031
A2R25	0684-5621		RESISTOR 5.6K 10% .25W FC TC=-400/+700	01121	CB5621
A2R26	0698-7096	2	RESISTOR 10 10% .125W CC TC=0+588 (NOT INSTALLED ON BOARD AT FACTORY)	01121	BB1001
A2R27	0684-1001	3	RESISTOR 10 10% .25W FC TC=-400/+500	01121	CB1001
A2R28	0684-1831	2	RESISTOR 18K 10% .25W FC TC=-400/+800	01121	CB1831
A2R29	0684-1831		RESISTOR 18K 10% .25W FC TC=-400/+800	01121	CB1831
A2R30	0698-7096		RESISTOR 10 10% .125W CC TC=0+588 (NOT INSTALLED ON BOARD AT FACTORY)	01121	BB1001
A2R31	0757-0280		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A2R32	0757-0273	4	RESISTOR 3.01K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3011-F
A2R33	0757-0273		RESISTOR 3.01K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3011-F
A2R34	0757-0290	2	RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-6191-F
A2R35	0757-0290		RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-6191-F
A2R36	0757-0273		RESISTOR 3.01K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3011-F
A2R37	0757-0415	2	RESISTOR 475 1% .125W F TC=0+-100	24546	C4-1/8-T0-475R-F
A2R38	0684-1031		RESISTOR 10K 10% .25W FC TC=-400/+700	01121	CB1031
A2R40	0757-0200		RESISTOR 5.62K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5621-F
A2R41	0684-2211		RESISTOR 220 10% .25W FC TC=-400/+600	01121	CB2211
A2R42	0757-0273		RESISTOR 3.01K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3011-F
A2R43	0757-0415		RESISTOR 475 1% .125W F TC=0+-100	24546	C4-1/8-T0-475R-F
A2R44	0684-1031		RESISTOR 10K 10% .25W FC TC=-400/+700	01121	CB1031
A2R46	0757-0200		RESISTOR 5.62K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5621-F
A2R47	0684-2211		RESISTOR 220 10% .25W FC TC=-400/+600	01121	CB2211
A2R48	0684-1021	4	RESISTOR 1K 10% .25W FC TC=-400/+600	01121	CB1021
A2R49	0684-1021		RESISTOR 1K 10% .25W FC TC=-400/+600	01121	CB1021
A2R50	0684-1021		RESISTOR 1K 10% .25W FC TC=-400/+600	01121	CB1021
A2R51	0684-1021		RESISTOR 1K 10% .25W FC TC=-400/+600	01121	CB1021
A2R52	0757-0450	1	RESISTOR 22.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2212-F
A2R53	0757-0457		RESISTOR 47.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4752-F
A2R54	0757-0465		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A2R55	0757-0472		RESISTOR 200K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2003-F
A2R56	0757-0452	1	RESISTOR 27.4K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2742-F
A2R57	0684-1031		RESISTOR 10K 10% .25W FC TC=-400/+700	01121	CB1031
A2R58	0757-0401		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A2R59	0757-0317		RESISTOR 1.33K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1331-F
A2R60	0757-0200		RESISTOR 5.62K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5621-F
A2R61	0757-0454	1	RESISTOR 33.2K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3322-F
A2R62	0684-4731		RESISTOR 47K 10% .25W CC TUBULAR	01121	CB4731
A2R63	0757-0442	1	RESISTOR 10K 1% .125W F TC=0+-100	03292	C4-1/8-T0-1002F
A2S1	3101-1947	1	SWITCH	28480	3101-1947
A2S2	3101-1942	1	SWITCH	28480	3101-1942
A2U1	1820-0946	2	IC CD4001AE	02735	CD4001AE
A2U2	1820-1330	1	IC MC14507CP	04713	MC14507CP
A2U3	1820-0730	2	IC MULTIVIBRATOR	34335	96L02DC
A2U4	1820-1197	1	IC SN74LS 00 N	01295	SN74LS00N
A2U5	1820-0730		IC MULTIVIBRATOR	34335	96L02DC
A2U6	1820-0949	2	IC CD4011AE	02735	CD4011AE
A2U7	1820-1356	1	IC MC14528CP	04713	MC14528CP
A2U8	1820-0944	1	IC CD4025AE	02735	CD4025AE
A2U9	1820-0691		IC SN74S 64 N	01295	SN74S64N
A2U10	1820-0071	1	IC SN74 40 N	01295	SN7440N
A2U11	1826-0119	1	IC NE 555T	18324	NE555T
A2U12	1820-0939	2	IC CD4013AE	02735	CD4013AE
A2U13	1820-1150	1	IC MC14520CP	04713	MC14520CP
A2U14	1820-0949		IC CD4011AE	02735	CD4011AE
A2U15	1820-0471	1	IC INV TTL HEX 1-INP	01295	SN19235
A2U16	1820-0321	2	IC COMPARATOR (ANALOG)	07263	710HC
A2U17	1820-0321		IC COMPARATOR (ANALOG)	07263	710HC
A2U18	1820-0939		IC CD4013AE	02735	CD4013AE
A2U19	1820-1145	1	IC CD4049AE	02735	CD4049AE
A2U20	1820-1194	2	IC SN74LS193N	01295	SN74LS193N
A2U21	1820-1470		IC SN74LS157N	01295	SN74LS157N
A2U22	1820-0946		IC CD4001AE	02735	CD4001AE
A2U23	1820-1146		IC CD4050AE	02735	CD4050AE
A2U24	1820-1339	1	IC MC14002CP	04713	MC14002CP
A2U25	1820-1194		IC SN74LS193N	01295	SN74LS193N
A2U26	1816-0352	1	IC MEMORY	28480	1816-0352
A2U27	1826-0188	2	IC MC 1408L-8	04713	MC1408L-8
A2U28	1820-0978	1	IC CD4007AE	02735	CD4007AE
A2U29	1826-0188		IC MC 1408L-8	04713	MC1408L-8
A2U30	1826-0254	2	IC MC 1741SCP1	04713	MC1741SCP1

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A2U31	1826-0254		IC MC 1741SCP1	04713	MC1741SCP1
A2U32	1820-0054	1	IC DIGITAL SN 74 00 N GATE	01295	SN7400N
A2U33	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A2U34	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A2U35	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A2U36	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A2U37	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A2U38	1810-0183		NETWORK-RES 9-PIN SIP .1-PIN-SPCG	28480	1810-0183
A2VR1	1902-0049	1	DIODE-ZNR 6.19V 5% DO-7 PD=.4W TC=+.022%	04713	SZ 10939-122
A2XA5	1251-2035		CONNECTOR; PC EDGE; 15-CONT; DIP SOLDER	71785	252-15-30-300
A2XA6	1251-2035		CONNECTOR; PC EDGE; 15-CONT; DIP SOLDER	71785	252-15-30-300
A3	01607-66502	1	BOARD ASSY, POWER SUPPLY	28480	01607-66502
A3C1	0180-0484	3	CAPACITOR-FXD; 4500UF+75-10% 25VDC AL (NOT SUPPLIED WITH A3, ORDER SEPARATELY)	56289	36D452G025AA-2B-DQB
A3C2	0180-0484	5	CAPACITOR-FXD; 4500UF+75-10% 25VDC AL (NOT SUPPLIED WITH A3, ORDER SEPARATELY)	56289	36D452G025AA-2B-DQB
A3C3	0180-0291		CAPACITOR-FXD; 1UF+-10% 35VDC TA-SOLID	56289	150D105X9035A2
A3C4	0180-0291		CAPACITOR-FXD; 1UF+-10% 35VDC TA-SOLID	56289	150D105X9035A2
A3C5	0180-0291		CAPACITOR-FXD; 1UF+-10% 35VDC TA-SOLID	56289	150D105X9035A2
A3C6	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A3C7	0160-3451		CAPACITOR-FXD .01UF +80-20% 100WVDC CER	28480	0160-3451
A3C8	0180-0291		CAPACITOR-FXD; 1UF+-10% 35VDC TA-SOLID	56289	150D105X9035A2
A3C9	0160-2204		CAPACITOR-FXD 100PF +-5% 300WVDC MICA	28480	0160-2204
A3C10	0180-0291		CAPACITOR-FXD; 1UF+-10% 35VDC TA-SOLID	56289	150D105X9035A2
A3C11	1820-1714		CAPACITOR-FXD: 330 UF +-10% 6 VDC TA	56289	337X900652-DYS
A3C12	0180-0484		CAPACITOR-FXD; 4500UF+75-10% 25VDC AL (NOT SUPPLIED WITH A3, ORDER SEPARATELY)	56289	36D452G025AA-2B-0QB
A3C13	0180-0137		CAPACITOR-FXD; 100UF+-20% 10VDC TA	56289	150D107X0010R2
A3C14	0180-0091	1	CAPACITOR-FXD; 10UF+50-10% 100VDC AL	56289	30D106F100DC2
A3CR1	1901-0028		DIODE-PWR RECT 400V MAX VRM 750MA	04713	SR1358-9
A3CR2	1884-0082	1	THYRISTOR-SCR JEDEC 2N4441	04713	2N4441
A3CR3	1901-0662	4	DIODE-PWR RECT 100V 6A	28480	1901-0662
A3CR4	1901-0662		DIODE-PWR RECT 100V 6A	28480	1901-0662
A3CR5	1901-0662		DIODE-PWR RECT 100V 6A	28480	1901-0662
A3CR6	1901-0662		DIODE-PWR RECT 100V 6A	28480	1901-0662
A3CR7	1901-0511	1	DIODE-PWR RECT 50V 12A (NOT SUPPLIED WITH A3 - ORDER SEPARATELY)	28480	1901-0511
A3F1	2110-0033	2	FUSE .75A 250V NORM-BLO 1.25X.25	75915	F02A250V3/4A
A3F2	2110-0001		FUSE; 1A 250V	71400	AGC-1
A3F3	2110-0003	1	FUSE 3A 250V	71400	AGC-3
A3F4	2110-0004	1	FUSE .25A 250V 1.25X.25 IEC	71400	AGC-1/4
A3L1	9100-3465	1	COIL-FXD RF CHOKE 1100UH	28480	9100-3465
A3L2	9100-3829	1	COIL-10H 10% .688 DX1.188 LG SRF=20MHZ	02415	1H5-10
A3MP1	2110-0269	8	FUSEHOLDER-CLIP TYPE .25FUSE	28480	2110-0269
A3P1	1251-3195		CONNECTOR 4-PIN M POST TYPE	27264	09-60-1041(2403-04A)
A3Q1	1853-0062	1	TRANSISTOR PNP SI PD=300MW FT=200MHZ	28480	1853-0062
A3R1	0684-1031		RESISTOR 10K 10% .25W FC TC=-400/+700	01121	CB1031
A3R2	0684-1031		RESISTOR 10K 10% .25W FC TC=-400/+700	01121	CB1031
A3R3	0684-6811	1	RESISTOR 680 10% .25W FC TC=-400/+600	01121	CB6811
A3R4	0684-3311		RESISTOR 330 10% .25W FC	01121	CB3311
A3R5	0684-2201	1	RESISTOR 22 10% .25W FC	01121	CB2201
A3R6	0757-0488	1	RESISTOR 909K 1% .125W F TC=0+-100	24546	NA4
A3R7	0757-0280		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A3R8	2100-3352	1	RESISTOR-VAR TRMR 1KOHM 10% C SIDE ADJ	73138	72XR1K
A3R9	0757-0428	1	RESISTOR 1.62K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1621F
A3R10	0757-0438		RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5111-F
A3R11	0684-5621		RESISTOR 5.6K 10% .25W FC TC=-400/+700	01121	CB5621
A3R12	0684-5601	2	RESISTOR 56 10% .25W FC TC=-400/+500	01121	CB5601
A3R13	0811-1758	2	RESISTOR .24 5% 2W PW TC=0+-800	75042	BWH2-24/100-J
A3R14	0811-1758		RESISTOR .24 5% 2W PW TC=0+-800	75042	BWH2-24/100-J
A3R15	0684-5601		RESISTOR 56 10% .25W FC TC=-400/+500	01121	CB5601
A3R16	0684-1001		RESISTOR 10 10% .25W FC TC=-400/+500	01121	CB1001
A3R17	0684-1031		RESISTOR 10K 10% .25W FC TC=-400/+700	01121	CB1031
A3R18	0684-1001		RESISTOR 10 10% .25W FC TC=-400/+500	01121	CB1001
A3R19	0811-1200		RESISTOR .1 10% 2W PW TC=0+-800	04672	BWH2-2-1/10-K
A3U1	1906-0023	1	DIODE-MULT FULL WAVE BRIDGE RECTIFIER	04713	MDA922-4
A3U2	1820-0196	1	IC:REGULATOR	07263	723HC
A3VR1	1902-3104	1	DIODE-ZNR 5.62V 5% DO-7 PD=.4W TC=+.016%	04713	SZ 10939-110
A4	01600-66506	1	BOARD ASSY, TRIGGER SWITCH	28480	01600-66506

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A4S0	3101-0576	18	SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4S1	3101-0576		SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4S2	3101-0576		SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4S3	3101-0576		SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4S4	3101-0576		SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4S5	3101-0576		SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4S6	3101-0576		SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4S7	3101-0576		SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4S8	3101-0576		SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4S9	3101-0576		SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4S10	3101-0576		SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4S11	3101-0576		SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4S12	3101-0576		SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4S13	3101-0576		SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4S14	3101-0576		SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4S15	3101-0576		SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4S16	3101-0576		SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4S17	3101-0576		SWITCH-TGL SUBMIN SPDT NS 2A 250VAC	28480	3101-0576
A4W1	8120-0621	5	CABLE CA ASSY 14-COND 26AWG	28480	8120-0621
A4W2	8120-0621		CABLE CA ASSY 14-COND 26AWG	28480	8120-0621
A4W3	8120-0621		CABLE CA ASSY 14-COND 26AWG	28480	8120-0621
A7	01600-66510	1	BOARD ASSY, DIGITAL SWITCH	28480	01600-66510
A7S1	3100-3238	1	SWITCH, ROTARY	28480	3100-3238
A7W1	8120-0621		CABLE CA ASSY 14-COND 26AWG	28480	8120-0621
A7W2	8120-0621		CABLE CA ASSY 14-COND 26AWG	28480	8120-0621

See introduction to this section for ordering information

Table 6-3. List of Manufacturers' Codes

Mfr No.	Manufacturer Name	Address	Zip Code
01121	ALLEN BRADLEY CO	MILWAUKEE WI	53212
01295	TEXAS INSTR INC SEMICOND CMPNT DIV	DALLAS TX	75231
02735	RCA CORP SOLID STATE DIV	SOMMERVILLE NJ	08876
03888	PYROFILM CORP	WHIPPANY NJ	07981
04713	MOTOROLA SEMICONDUCTOR PRODUCTS	PHOENIX AZ	85008
06560	AIRCO SPEER ELEK DIV AIR RDCN CO	NOGALES AZ	85621
06776	ROBINSON NUGENT INC	NEW ALBANY IN	47150
07263	FAIRCHILD SEMICONDUCTOR DIV	MOUNTAIN VIEW CA	94040
12697	CLAROSTAT MFG CO INC	DOVER NH	03820
12954	DICKSON ELECTRONICS CORP	SCOTTSDALE AZ	85252
13103	THERMALLOY CO	DALLAS TX	75247
16299	CORNING GL WK ELEC CMPNT DIV	RALEIGH NC	27604
18324	SIGNETICS CORP	SUNNYVALE CA	94086
19701	MEPCO/ELECTRA CORP	MINERAL WELLS TX	76067
24226	GOWANDA ELECTRONICS CORP	GOWANDA NY	14070
24546	CORNING GLASS WORKS (BRADFORD)	BRADFORD PA	16701
24931	SPECIALTY CONNECTOR CO INC	INDIANAPOLIS IN	46227
24995	ENVIRONMENTAL CONTAINER SYSTEMS INC	PALO ALTO CA	94304
27014	NATIONAL SEMICONDUCTOR CORP	SANTA CLARA CA	95051
27264	MOLEX PRODUCTS CO	DOWNERS GROVE IL	60515
28480	HEWLETT-PACKARD CO CORPORATE HQ	PALO ALTO CA	94304
34335	ADVANCED MICRO DEVICES INC	SUNNYVALE CA	94086
34649	INTEL CORP	MOUNTAIN VIEW CA	94040
4G819	OVERLAND PRODUCTS CO	FREMONT NE	68025
4H713	CINCH MFG CO	SHELBYVILLE IN	46176
56289	SPRAGUE ELECTRIC CO	NORTH ADAMS MA	01247
71400	BUSSMAN MFG DIV OF MCGRAW-EDISON CO	ST LOUIS MO	63017
71450	CTS CORP	ELKHART IN	46514
71744	CHICAGO MINIATURE LAMP WORKS	CHICAGO IL	60640
71785	TRW ELEK COMPONENTS CINCH DIV	ELK GROVE VILLAGE IL	60007
72136	ELECTRO MOTIVE MFG CO INC	WILLIMANTIC CT	06226
73138	BECKMAN INSTRUMENTS INC HELIPOT DIV	FULLERTON CA	92634
73899	J F D ELECTRONICS CORP	BROOKLYN NY	11219
75042	TRW INC PHILADELPHIA DIV	PHILADELPHIA PA	19108
75915	LITTLEFUSE INC	DES PLAINES IL	60016
76210	MARWEDEL CW	SAN FRANCISCO CA	94103
82389	SWITCHCRAFT INC	CHICAGO IL	60630
84048	TRW INC ST PETERSBURG DIV	ST PETERSBURG FL	33702

SECTION VII

MANUAL CHANGES

7-1. INTRODUCTION.

7-2. This section contains information required to backdate or update this manual for a specific instrument.

7-3. MANUAL CHANGES.

7-4. This manual applies directly to the instrument having the same serial prefix shown on the manual title page. If the serial prefix of the instrument is not the same as the one on the title page, find your serial prefix in table 7-1 and make the changes to the manual that are listed for that serial prefix. When making changes listed in table 7-1, make the change with the highest number first. Example: if backdating changes 1, 2, and 3 are required for your serial prefix, do change 3 first, then change 2, and finally change 1. If the serial prefix of the instrument is not listed either in the title page or in table 7-1, refer to an enclosed MANUAL CHANGES sheet for updating information. Also, if a MANUAL CHANGES sheet is supplied, make all indicated ERRATA corrections.

Table 7-1. Manual Changes

Serial Prefix	Make Changes
1510A	2 and 1
1530A	2
1629A with A1 assembly 01600-66517, revision A.	3

7-5. MANUAL CHANGES LISTING.

CHANGE 1

Table 6-2,
- A2: Change to HP Part No. 01607-66501; description unchanged.
- Q1: Change to HP Part No. 1854-0320; TRANSISTOR NPN SI PD=83.5W FT=4 MHz; Mfr Code 28480; Mfr Part No. 1854-0320.
- A2C14: Change to HP Part No. 0140-0202; CAPACITOR-FXD 15 PF +—5% 500WVDC MICA 0+; Mfr Code 72136; Mfr Part No. DM15C150J0500-WV1CR.
- A2C15: Change to HP Part No. 0140-0202; CAPACITOR-FXD, 15 PF +—5% 500WVDC MICA 0+; Mfr Code 72136; Mfr Part No. DM15C150J-0500WV1CR.
- Add: A2C17, HP Part No. 0160-3466, CAPACITOR-FXD 100PF +—10% 1000WVDC CER, Mfr Code 28480, Mfr Part No. 0160-3466.

Table 6-2 (Cont'd),
- Add: A2C21, HP Part No. 0160-3466, CAPACITOR-FXD 100PF +—10% 1000WVDC CER, Mfr Code 28480, Mfr Part No. 0160-3466.
- A2C25: Change to HP Part No. 0180-0197; CAPACITOR-FXD, 2.2 UF +—10% 20VDC TA; Mfr Code 56289; Mfr Part No. 150D225X9020A2.
- A2CR3: Delete.
- A2Q6: Delete.
- A2R38: Change to HP Part No. 0684-5621, RESISTOR 5.6K 10% .25W FC TC=—400/+700, Mfr Code 01121, Mfr Part No. CB5621.
- Add: A2R39, HP Part No. 0684-5621, RESISTOR 5.6K 10% .25W FC TC=—400/+700, Mfr Code 01121, Mfr Part No. CB5621.
- A2R44: Change to HP Part No. 0684-5621, RESISTOR 5.6K 10% .25W FC TC=—400/+700, Mfr Code 01121, Mfr Part No. CB5621.
- Add: A2R45, HP Part No. 0684-5621, RESISTOR 5.6K 10% .25W FC TC=—400/+700, Mfr Code 01121, Mfr Part No. CB5621.
- A2R62: Delete.
- A2U32: Change to HP Part No. 1820-0068; IC DGTL SN74 10 N GATE, Mfr Code 01295; Mfr Part No. SN7410N.

Figure 8-14,
- Replace A2 Component locator with figure 7-1.
- Replace schematic 10 with figure 7-2.

Figure 8-16,
- Replace schematic 12 with figure 7-3.

Figure 8-17 (Sheet 2 of 2),
- A2R38: Change value to 5600.
- Add: A2R39 (5600) between A2R38 and A2P2, pin 5.
- Add: A2C17 (100) between ground and junction of A2R38/A2R39.
- A2R44: Change value to 5600.
- Add: A2R45 (5600) between A2R44 and A2P2, pin 6.
- Add: A2C21 (100) between ground and junction of A2R44/A2R45.

Figure 8-18,
- Delete CR3 on schematic 14 per figure 7-4.

CHANGE 2

Table 6-2,
- A1: Change HP Part No. and Mfr Part No. to 01600-66511.
- A1U49: Change to HP Part No. 1820-0584, IC DM74L 02 N, Mfr Code 27014, Mfr Part No. DM74L02N.
- A1U80: Change to HP Part No. 1820-0589, IC DM74L 30N, Mfr Code 27014, Mfr Part No. DM74L30N.

CHANGE 2 (CONT'D)

Table 6-2 (Cont'd),

A1U82: Change to HP Part No. 1820-0588, IC DM74L 20N, Mfr Code 27014, Mfr Part No. DM74L20N.

A1U83: Change to HP Part No. 1820-0710, IC MULTIPLEXER, Mfr Code 07263, Mfr Part No. 93L22DC.

A1U85: Change to HP Part No. 1820-0583, IC DM74L 00N, Mfr Code 27014, Mfr Part No. DM74L00N.

Schematics 5 and 6,

Modify the circuitry according to figure 7-5.

CHANGE 3

Schematics 5 and 6,

Modify the circuitry according to figure 7-6 for instruments using A1 assembly HP Part No. 01600-66517, revision A.

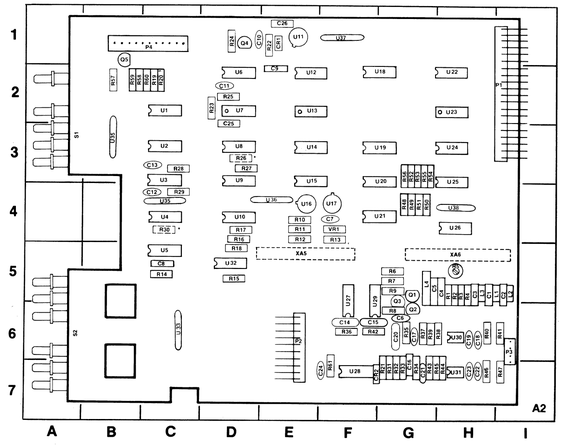

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	H-5	L2	I-5	R18	D-5	R47	I-7	U13	E-2
C2	I-5	L3	H-5	R19	C-2	R48	G-4	U14	E-3
C3	H-5	L4	G-5	R20	C-2	R49	G-4	U15	E-3
C4	H-5	P1	I-2	R21	G-7	R50	G-4	U16	E-4
C5	G-5	P2	E-6	R22	E-1	R51	G-4	U17	F-4
C6	G-6	P3	I-6	R23	D-2	R52	G-3	U18	G-2
C7	F-4	P4	C-1	R24	D-1	R53	G-3	U19	G-3
C8	C-5	Q1	G-5	R25	D-2	R54	G-3	U20	G-3
C9	E-2	Q2	G-5	R26*	D-3	R55	G-3	U21	G-4
C10	D-1	Q3	G-5	R27	D-3	R56	G-3	U22	H-2
C11	D-2	Q4	D-1	R28	C-3	R57	B-2	U23	H-2
C12	C-4	Q5	B-1	R29	C-4	R58	B-2	U24	H-3
C13	C-3	R1	H-5	R30*	C-4	R59	B-2	U25	H-3
C14	F-6	R2	H-5	R31	G-7	R60	C-2	U26	H-4
C15	F-6	R3	H-5	R32	G-7	R61	F-7	U27	F-5
C16	G-7	R4	H-5	R33	G-7	S1	A-3	U28	F-7
C17	G-6	R5	H-5	R34	G-7	S2	A-6	U29	F-5
C18	H-6	R6	G-5	R35	G-6	U1	C-2	U30	H-6
C19	H-6	R7	G-5	R36	F-6	U2	C-3	U31	H-7
C20	G-6	R8	G-6	R37	G-6	U3	C-3	U32	D-5
C21	G-7	R9	G-5	R38	H-6	U4	C-4	U33	C-6
C22	H-7	R10	E-4	R39	G-6	U5	C-5	U34	C-4
C23	H-7	R11	E-4	R40	H-6	U6	D-2	U35	B-3
C24	F-7	R12	E-4	R41	I-6	U7	D-2	U36	E-4
C25	D-3	R13	F-4	R42	F-6	U8	D-3	U37	F-1
C26	E-1	R14	C-5	R43	G-7	U9	D-3	U38	H-4
CR1	E-1	R15	D-5	R44	H-7	U10	D-4	VR1	F-4
CR2	F-7	R16	D-4	R45	G-7	U11	E-1	XA5	E-5
L1	H-5	R17	D-4	R46	H-7	U12	E-2	XA6	H-5

* NOT LOADED AT FACTORY

Figure 7-1. Figure 8-14 Replacement

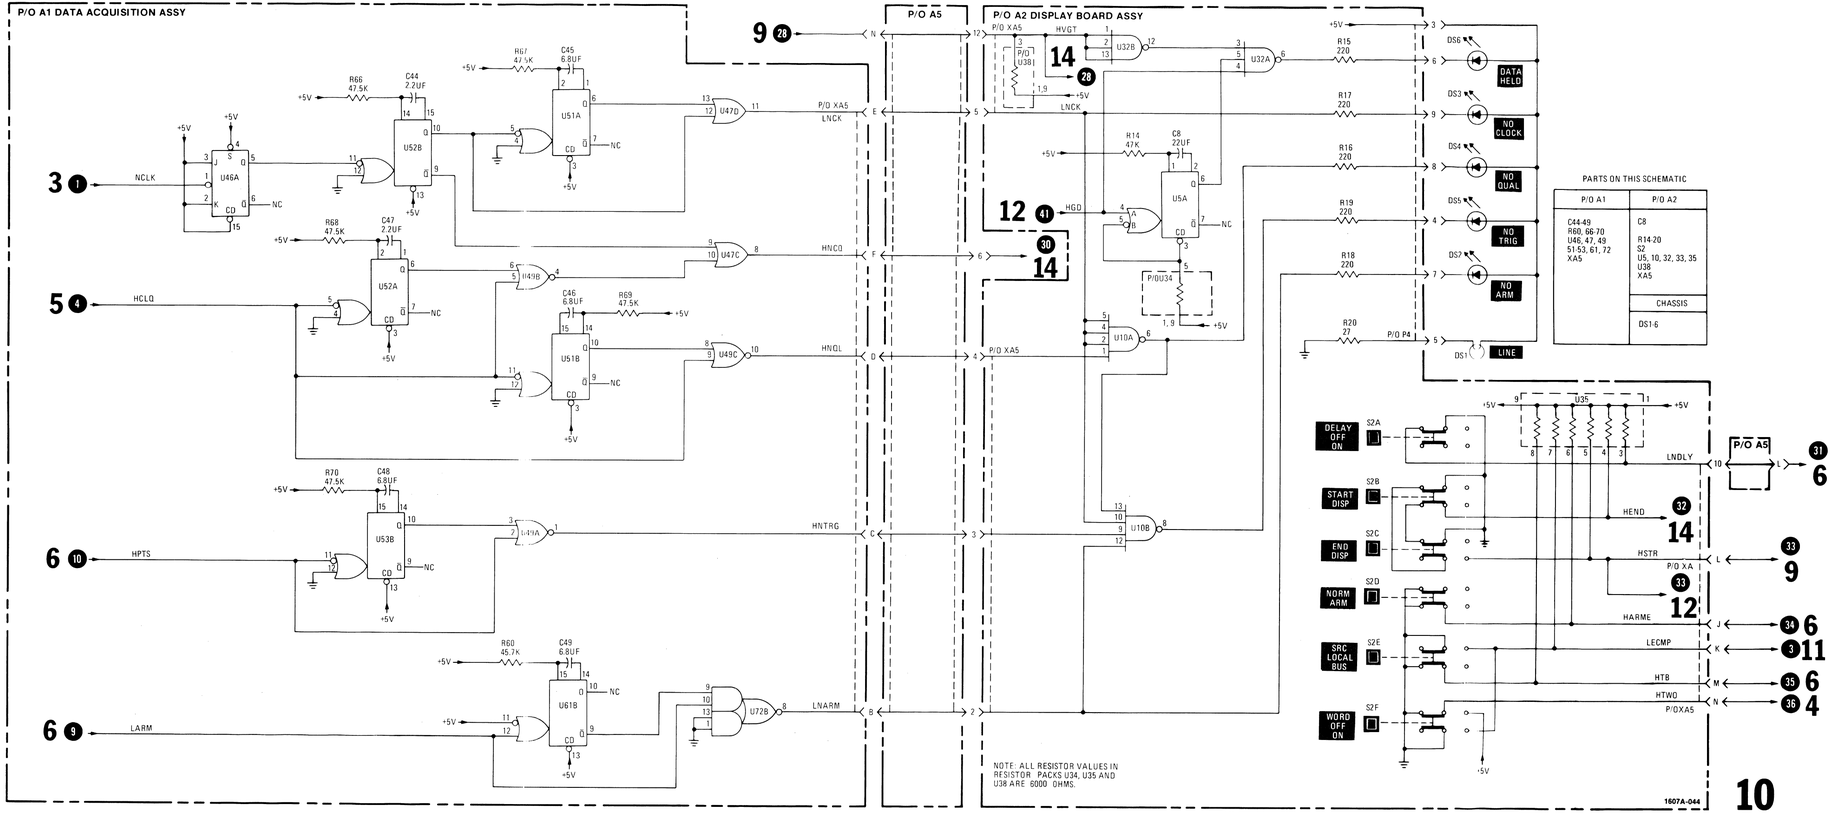

Figure 7-2. Schematic 10 Replacement

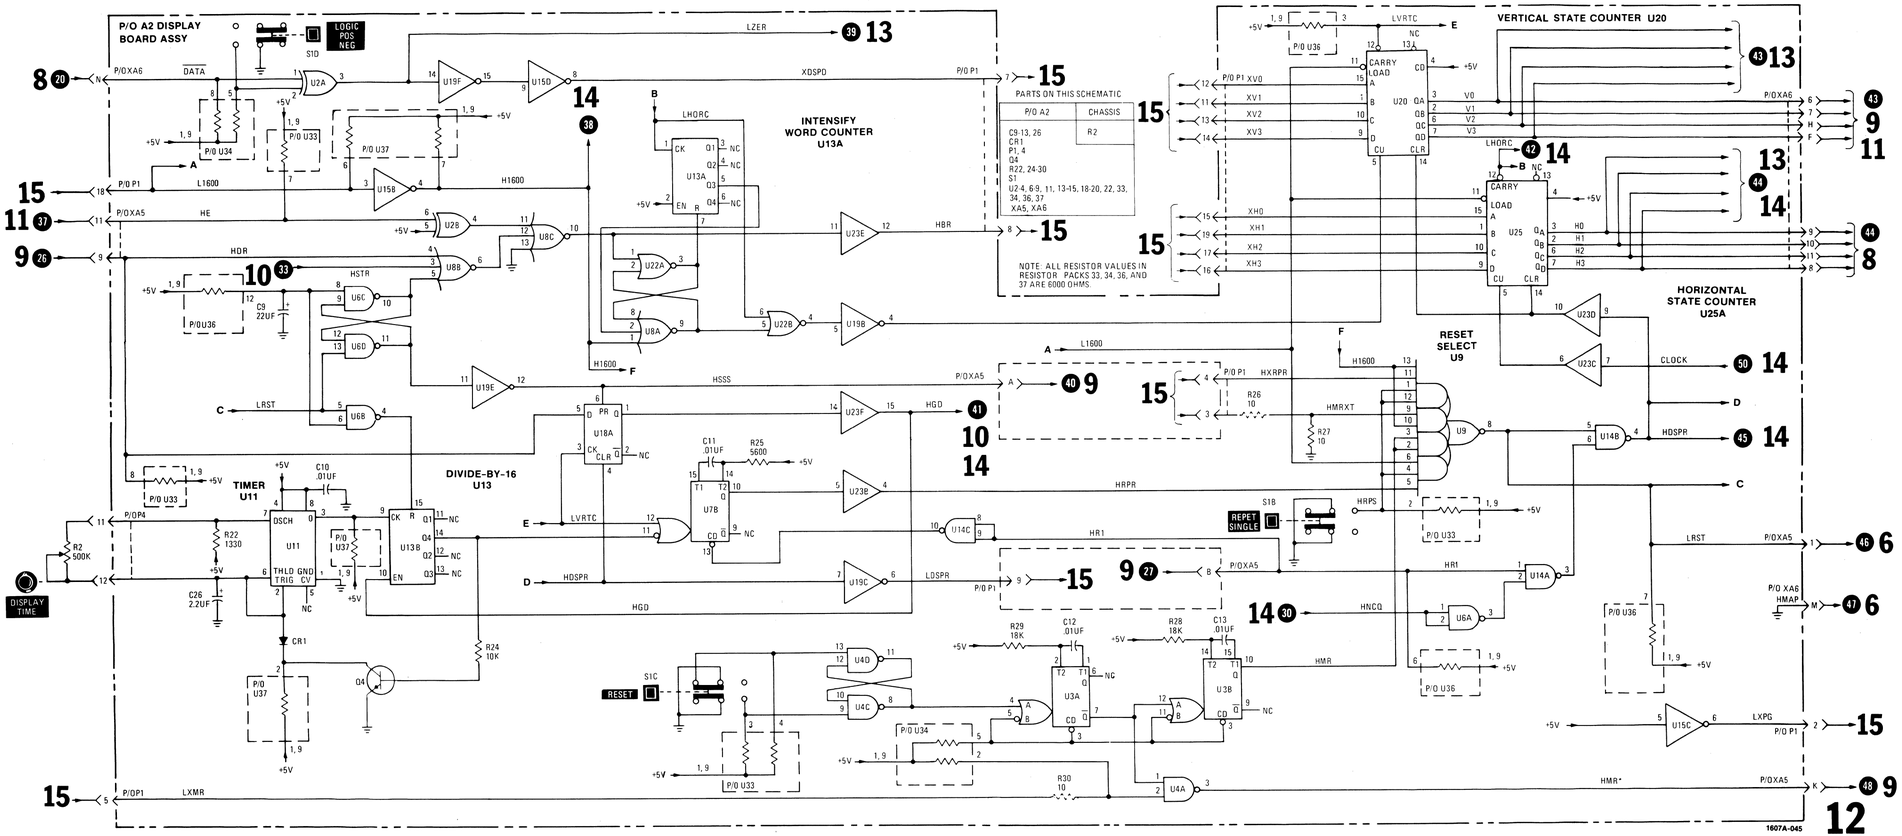

Figure 7-3. Schematic 12 Replacement

Figure 7-3. Schematic 12 Replacement Under Fold

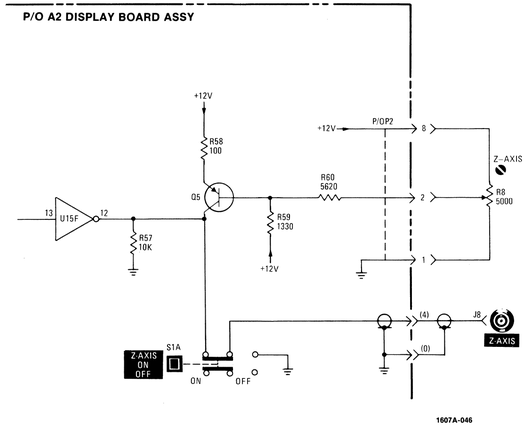

Figure 7-4. Schematic 14 Changes

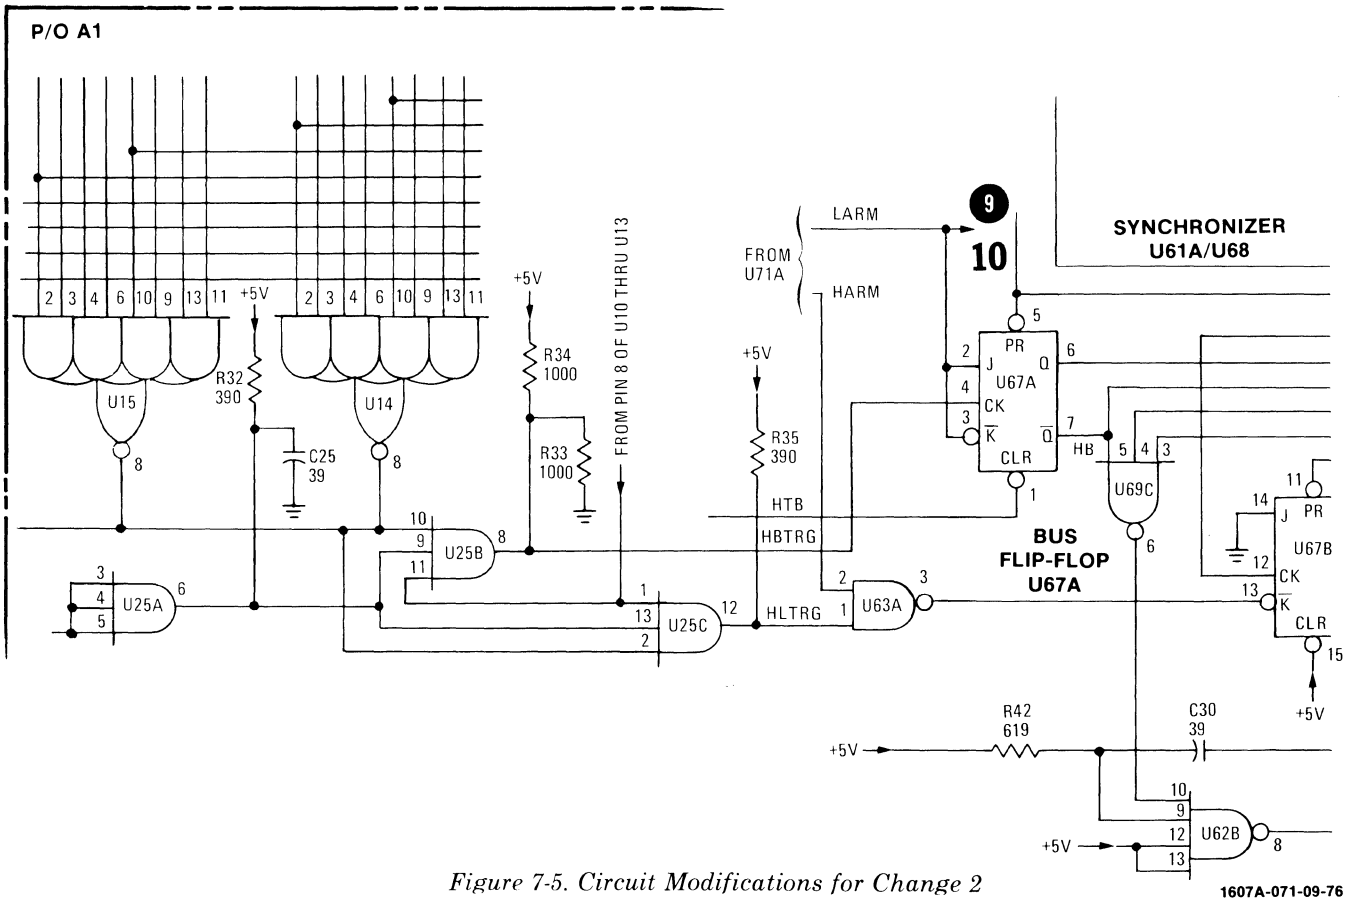

Figure 7-5. Circuit Modifications for Change 2

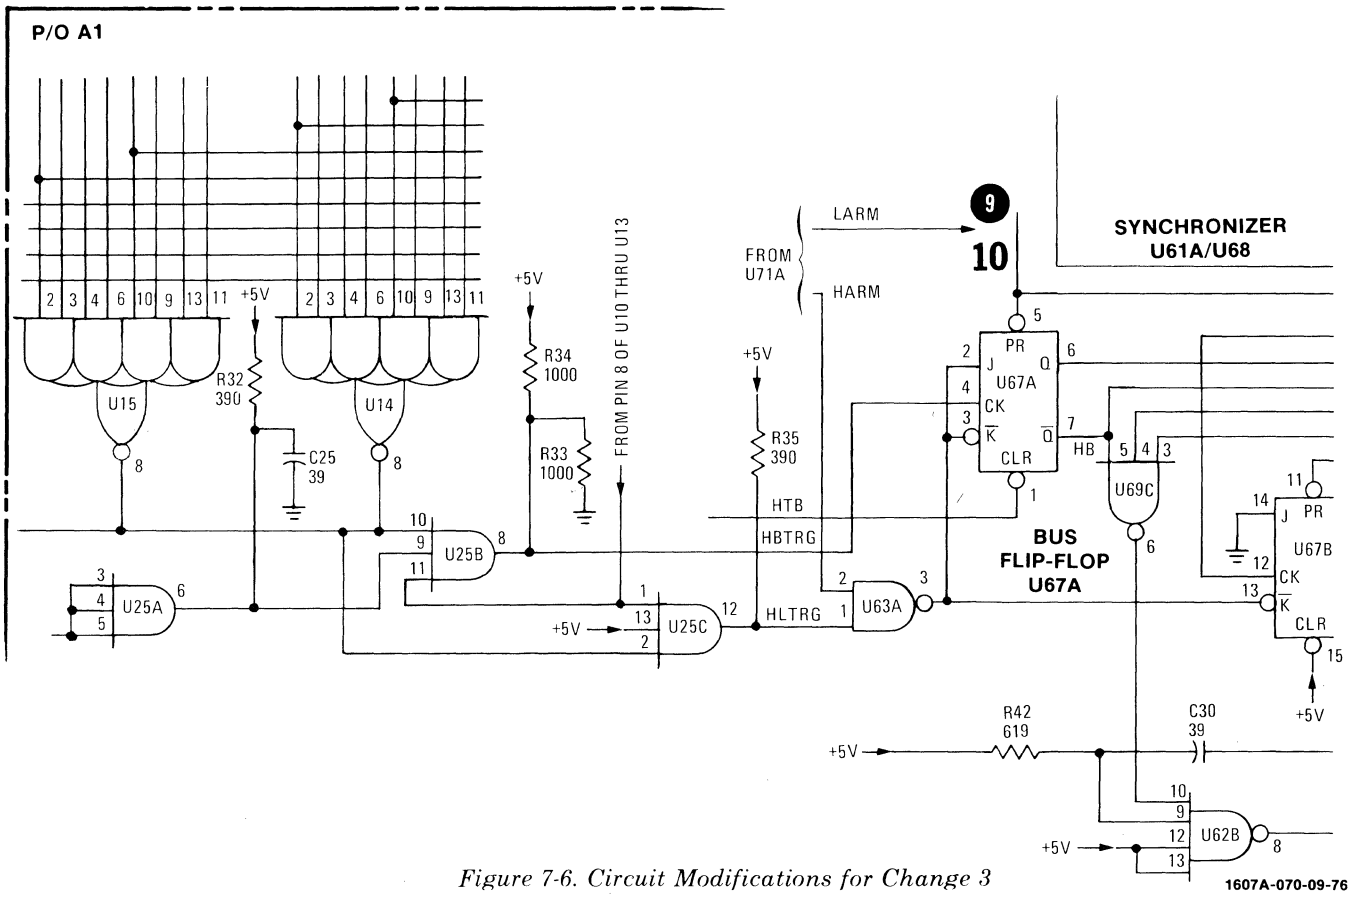

Figure 7-6. Circuit Modifications for Change 3

SECTION VIII

SCHEMATICS AND TROUBLESHOOTING

8-1. INTRODUCTION.

8-2. This section contains schematics, repair and replacement information, component-identification illustrations, waveforms, test conditions, troubleshooting charts, timing diagrams, and truth tables.

8-3. SCHEMATICS.

8-4. The schematics indicate electronic functions of the Model 1607A circuitry. Any one schematic may include all or part of several different physical assemblies. Tables 8-1 and 8-2 define symbols and conventions used in the schematics. Figure 8-1 provides terminal identification drawings for semiconductors used in the Model 1607A. Figure 8-20 provides power, ground, and logic connections for integrated circuits (IC's) used in the Model 1607A.

8-5. The schematics are numbered in sequence with a bold number at the lower right-hand corner of each page. At each circuit breaking point, a notation is made of the signal name and two numbers. The white number on a black background is the number assigned to that signal and is used to cross reference signal connections between schematics. The number in bold type is the number of the schematic which shows the source or destination of the signal. To find the source or destination of any point on a given schematic, turn to the schematic referred to by number and find the number and name of the signal in question. Refer to table 4-1 for a list of logic term definitions and origins. Letters are used to cross reference circuit breaking points when both the signal source and signal destination are contained on the same schematic.

8-6. Square-pin connections are identified by the color code of the connecting wire. Ribbon-connector pins and sockets are identified by a number (see figure 8-2).

8-7. A table on each schematic lists all components shown on the schematic by reference designation. Component reference designators which have been deleted from the schematic are listed below the table.

8-8. REFERENCE DESIGNATIONS.

8-9. The unit system of reference designations used in this manual is in accordance with the provisions of American National Standard Y32.16, Reference Designations for Electrical and Electronics Parts and Equipments. Minor variations from the standard, due to design and manufacturing practices, may be noted.

8-10. Each electrical component is assigned a class letter and a number. This letter-number combination is the basic reference designation. Components which are not part of an assembly have only the basic reference designation. Components which are part of an assembly have, in addition to the basic designation, a prefix designation indicating the assembly of which the component is a part (resistor R23 on assembly A1 is called A1R23).

8-11. Assemblies are numbered consecutively. If an assembly reference designation is assigned and later deleted, that number is not reused.

8-12. COMPONENT LOCATIONS.

8-13. Locations of components on assemblies and subassemblies are shown in illustrations adjacent to the schematics. Since the schematics indicate electronic function, portions of a particular assembly may appear on several different schematics. The component-location illustration is printed next to the schematic that shows most of the circuitry on the assembly. Exploded-view drawings showing mechanical (and some electrical) parts are located in Section VI.

8-14. REPAIR AND REPLACEMENT.

WARNING

Read the safety summary at the front of this manual before troubleshooting the instrument.

8-15. The following paragraphs provide procedures for removal and replacement of assemblies, subassemblies, and components in the Model 1607A. Special servicing instructions for circuit boards and integrated circuits are covered, and Section VI provides a detailed parts list for use in ordering replacement parts.

8-16. MECHANICAL DISASSEMBLY AND BOARD REMOVAL.

NOTE

See illustrations in Section VI for locations of mechanical parts (MP reference designations).

Table 8-1. Schematic Notes

REFER TO ANSI Y 32.2 AND Y32.14 FOR SCHEMATIC SYMBOLS NOT LISTED IN THIS TABLE.

ETCHED CIRCUIT BOARD


ASSEMBLY

ETCHED CIRCUIT BOARD ON ASSEMBLY

FRONT- AND REAR-PANEL MARKING

MAIN SIGNAL PATH

PRIMARY FEEDBACK PATH

SECONDARY FEEDBACK PATH


SINGLE-PIN CONNECTOR ON BOARD



PIN OF A PLUG-IN BOARD (WITH LETTER OR NUMBER)

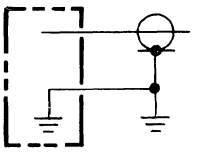
COAXIAL CABLE CONNECTED DIRECTLY TO BOARD

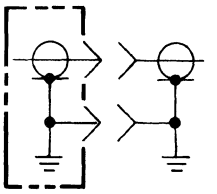
COAXIAL CABLE CONNECTED TO SNAP-ON JACK

FRONT-PANEL CONTROL

TEST POINT (TP WITH NUMBER)

SCREWDRIVER ADJUSTMENT

WAVEFORM TEST POINT (WITH NUMBER)

COMMON ELECTRICAL POINT (WITH LETTER); NOT NECESSARILY GROUND

SIGNAL REFERENCE

9 SCHEMATIC REFERENCE

BREAKDOWN DIODE (VOLTAGE REGULATOR)

LIGHT EMITTING DIODE (LED)

TUNNEL DIODE



FIELD-EFFECT TRANSISTOR (N-TYPE BASE)

CIRCUITS OR COMPONENTS DRAWN WITH DASHED LINES (PHANTOM) SHOW FUNCTION ONLY AND ARE NOT INTENDED TO BE COMPLETE. THE CIRCUIT OR COMPONENT IS SHOWN IN DETAIL ON ANOTHER SCHEMATIC.

(925) WIRE COLORS ARE GIVEN BY NUMBERS IN PARENTHESIS USING THE RESISTOR COLOR CODE

[(925) IS WHT-RED-GRN]

0 - BLACK	5 - GREEN
1 - BROWN	6 - BLUE
2 - RED	7 - VIOLET
3 - ORANGE	8 - GRAY
4 - YELLOW	9 - WHITE

* OPTIMUM VALUE SELECTED AT FACTORY, TYPICAL VALUE SHOWN; PART MAY HAVE BEEN OMITTED.

UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS, CAPACITANCE IN PICOFARADS AND INDUCTANCE IN MICROHENRIES

CW	CLOCKWISE END OF VARIABLE RESISTOR
NC	NO CONNECTION
P/O	PART OF

VF (A)

V - VOLTAGE
F - FILTERED
(A) - FILTER SOURCE

Table 8-2. Logic Symbols

Refer to American National Standard Y32.14 for Logic Symbols not listed in this table.

GENERAL ELEMENT SYMBOLS

BASIC SYMBOLS

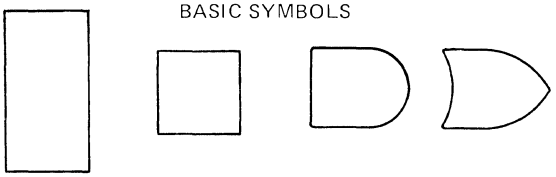

CONTIGUOUS BLOCK

INDICATOR SYMBOLS

NEGATION INDICATOR

DYNAMIC INDICATOR



COMBINATIONAL LOGIC SYMBOLS

AND FUNCTION

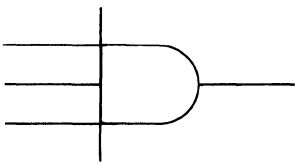

NOR FUNCTION

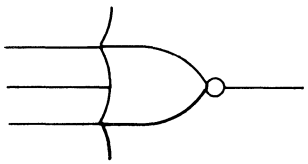

NAND FUNCTION

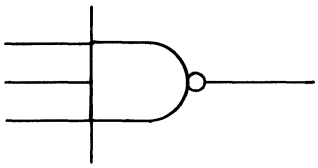

EXCLUSIVE OR FUNCTION



OR FUNCTION

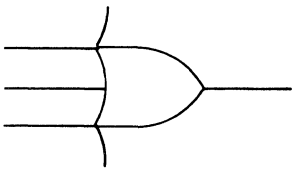

NON-INVERTING AMPLIFIER

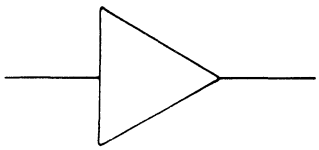

INVERTING AMPLIFIER

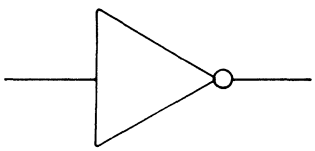

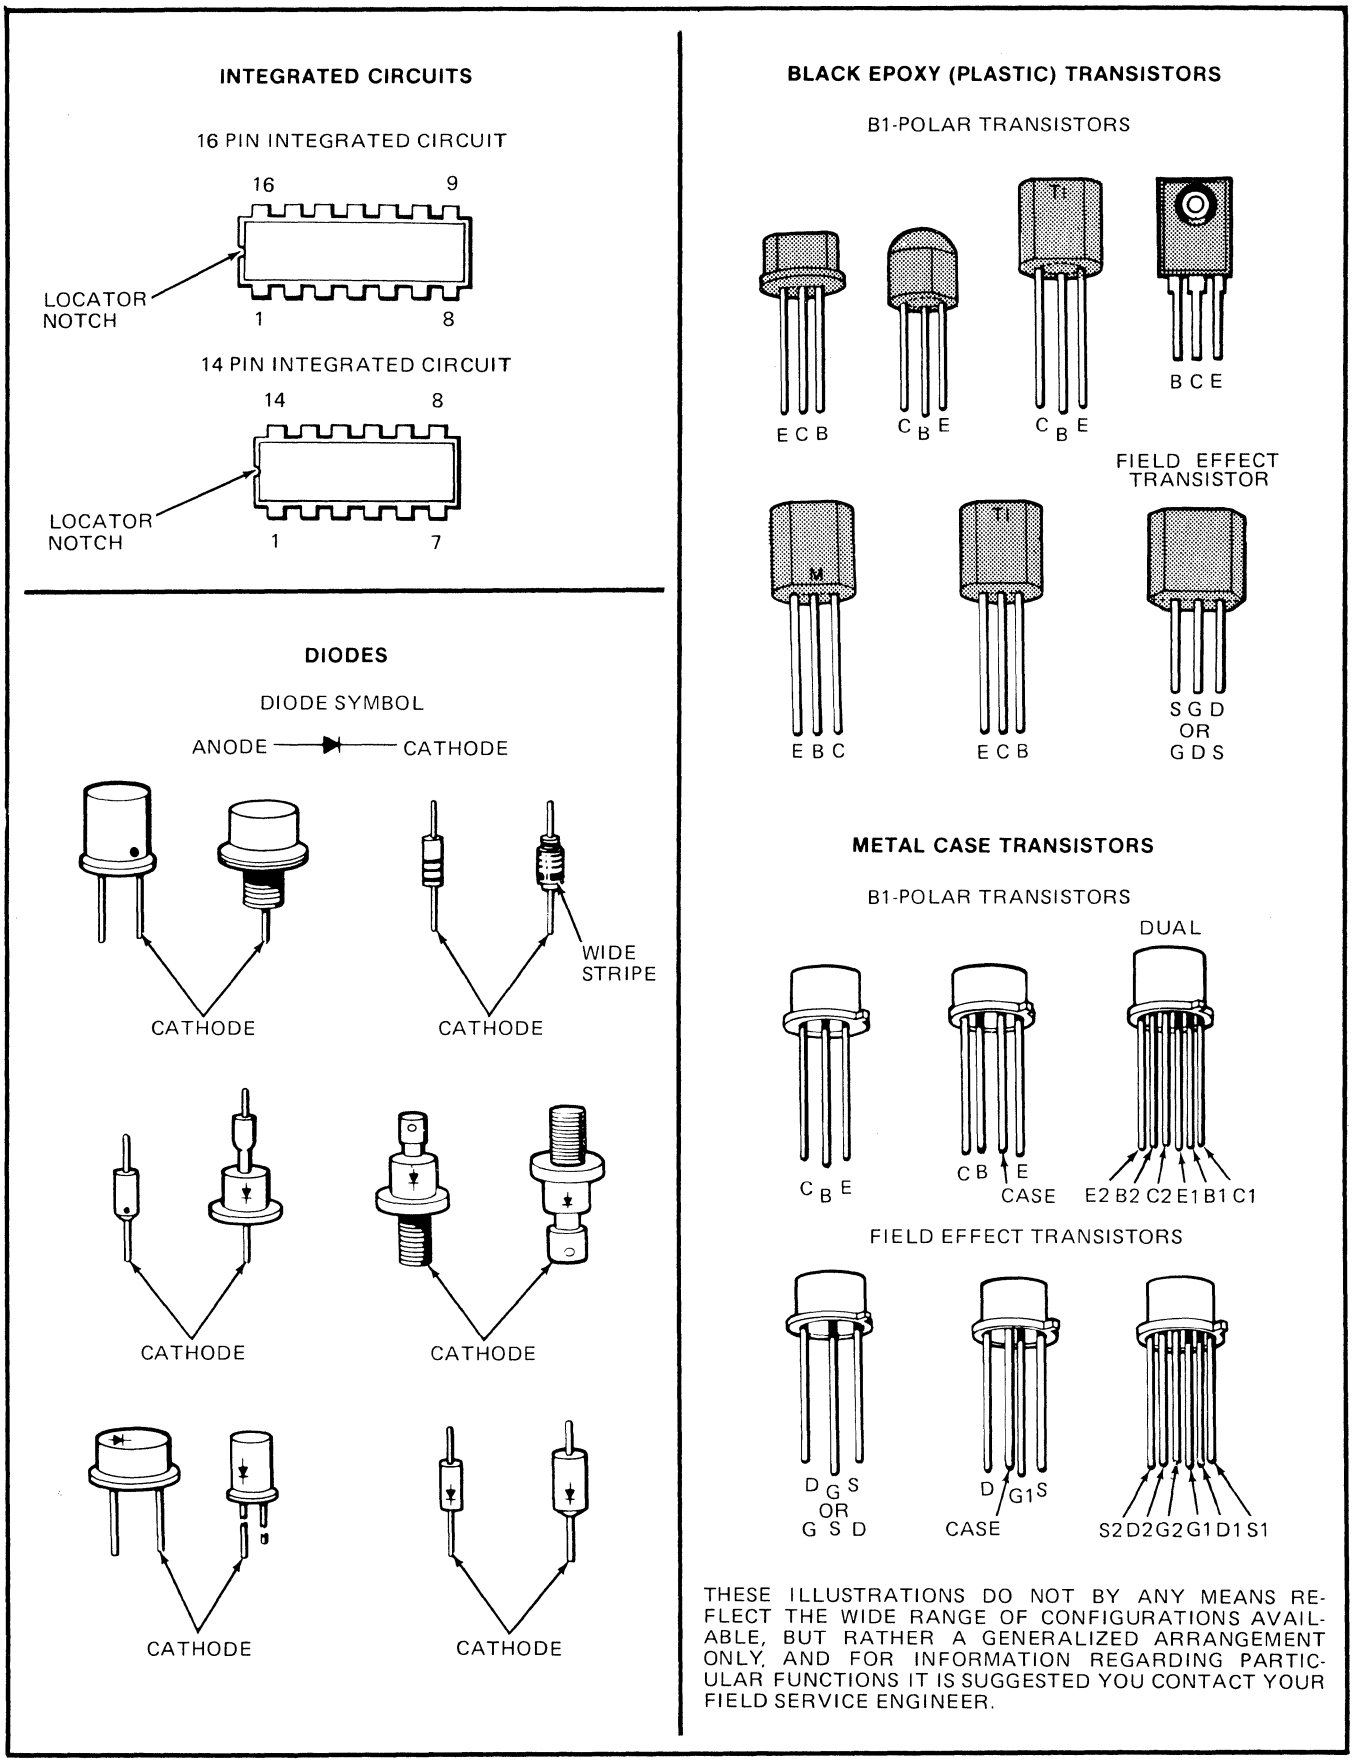

Figure 8-1. Semiconductor Terminal Identification

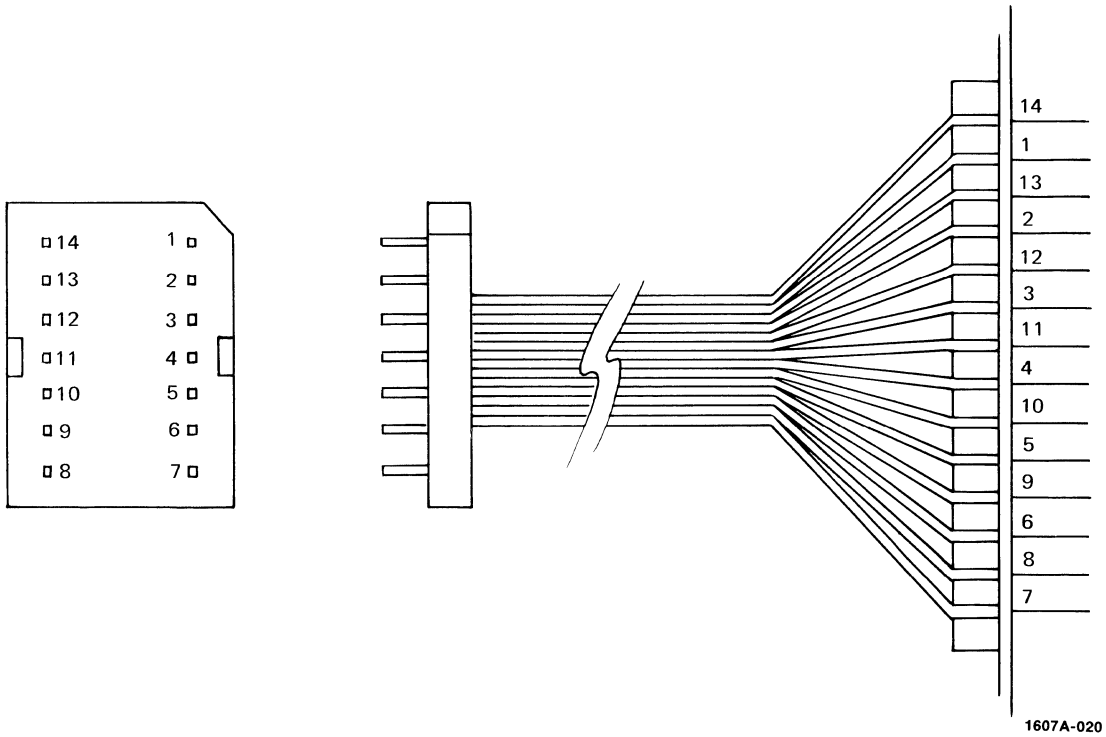

Figure 8-2. Ribbon Connector Pin Identification

8-17. Rear-panel Power Supply Assembly Removal.

a. Disconnect main power cable, and remove top and bottom covers (MP4 and MP5).

b. Disconnect all cable connectors and square-pin connectors between rear-panel assembly and display board A2.

c. Unscrew coupler MP26 on power switch extender MP10 from switch on power supply board A3.

d. Remove 4 corner screws holding rear panel MP3 to rear frame casting MP6.

e. Carefully pull rear-panel/power supply assembly to the rear, and remove it from the instrument.

8-18. Data Acquisition Board A1 Removal.

a. Disconnect main power cable, and remove top and bottom covers (MP4 and MP5).

b. Disconnect square-pin connections from circuit side of A1 board.

c. Remove four screws attaching A1 board to bracket MP2.

d. Lift back of A1 board, and disconnect A1XA5 and A1XA6 connectors from extender boards A5 and A6.

e. Slide A1 board back from front panel until switches and connectors are disengaged, then tilt rear of A1 board up.

f. Disconnect ribbon connectors J5 through J9 from circuit side of A1 board.

8-19. Display Board A2 Removal.

a. Disconnect main power cable, and remove top and bottom covers (MP4 and MP5).

b. Disconnect all cable and square-pin connectors from A2 board.

c. Disconnect cable connector W4J1 (soldered to A2 board) from power supply board A3.

d. Disconnect square-pin connectors from trigger output BNC's through A2 board to data acquisition board A1. Square pins are located on circuit side of A1 board.

e. Remove 4 screws securing A2 board to bracket MP23.

f. Lift back of A2 board until A2XA5 and A2XA6 are disconnected from extender boards A5 and A6.

g. Slide A2 board back from front panel until switches and connectors are disengaged, then left A2 board out of instrument.

8-20. Front-panel Assembly Removal.

a. Remove boards A1 and A2 as described in paragraphs 8-18 and 8-19.

b. Remove 4 corner screws holding front-panel assembly to frame casting MP6.

c. Pull front-panel assembly forward out of chassis.

8-21. Delay Board A7/Trigger Switch Board A4 Removal.

a. Remove front-panel assembly as described in paragraph 8-20.

b. Remove screws holding A4 and A7 boards to front-panel assembly.

8-22. SERVICING CIRCUIT BOARDS. This instrument uses circuit boards with plated-through component holes. This allows components to be removed or replaced by unsoldering or soldering from either side of the board. When removing large components, such as potentiometers, rotate the soldering iron tip from lead to lead while applying pressure to the part to lift it from the board. HP Service Note M-20E contains additional information on the repair of circuit boards.

8-23. SEMICONDUCTOR REPLACEMENT. Figure 8-1 is included to help identify the leads in the common shapes and sizes of semiconductor devices. When removing a semiconductor, use long-nosed pliers as a heat sink between the device and the soldering iron. When replacing a semiconductor, ensure sufficient lead length to dissipate the soldering heat by using the same length of exposed lead as was used for the original part.

8-24. INTEGRATED CIRCUIT HANDLING. Many of the integrated circuits in the Model 1607A are in the CMOS family of digital devices. CMOS devices can be damaged by static voltages in the service environment. To protect CMOS devices during handling, the following procedures are suggested:

a. Ground all test equipment.

b. Use grounded-tip soldering irons.

c. Disconnect all low-impedance test equipment (such as pulse generators) from device inputs before removing dc power supplies.

d. Store unused CMOS devices in conductive rails or conductive foam, or short all device leads together.

8-25. INTEGRATED CIRCUIT REPLACEMENT. Soldered IC units may be removed with soldering irons which simultaneously heat all connections (available from various manufacturers). Soldering irons with built-in desoldering tools facilitate quick removal.

CAUTION

Unless an IC has definitely failed, becareful to prevent damage when removing or replacing it.

8-26. To remove an IC with a standard soldering iron, proceed as follows:

a. Heat IC lead solder joint. Use soldering iron with small pencil tip (such as Weller No. PT-H7).

b. When solder is fluid, remove it with desoldering aid (such as Soldapullt manufactured by Edsyn Company of California).

c. Repeat steps a and b for each IC lead until all leads are free.

d. Grasp each lead with long-nosed pliers and check that it is mechanically free from circuit board.

e. When all leads are free, carefully remove IC. Dual in-line type may be removed by gently gripping top and bottom with long-nosed pliers and rolling IC out.

f. Use desoldering tool or toothpick to remove all remaining solder from circuit board holes.

CAUTION

Use care to prevent IC damage with heat from the soldering iron. Word quickly.

g. Insert replacement IC into circuit board and solder it in place.

8-27. When replacing an IC, note the mark or notch used for orientation. The component identification illustrations and the IC pin-location diagrams in figure 8-1 show IC orientation.

8-28. TROUBLESHOOTING.

8-29. The most important prerequisites for successful troubleshooting are an understanding of the instrument functional operation and the correct use of front-panel controls. Suspected malfunctions may be caused by improper control settings. Before performing the test and/or troubleshooting procedures, refer to Section III for an explanation of controls, connectors, and general operating considerations. Refer to Section IV for an explanation of circuit functional operation.

8-30. If trouble is suspected, visually inspect the instrument. Look for loose or burned components that might suggest a source of trouble. Check to see that all circuit board connections are making good contact and are not shorting to an adjacent circuit. If no obvious trouble is found, check the instrument supply voltages, and the external power sources.

8-31. DC VOLTAGES. On some schematics, dc voltages are indicated at certain points in the circuit. Test equipment and control setups for making voltage measurements are provided in Section V. Check these setup conditions before making any measurements.

8-32. WAVEFORMS. Waveforms are placed on the schematics along main signal paths. Test equipment and control setups for making these measurements are listed in Section V. Check these setup conditions before making any measurements.

8-33. TEST POINTS. Test points are shown on the schematics with this symbol (⚲). Test points usually correspond to pins protruding from circuit boards and do not necessarily correspond to waveform measurement points.

8-34. FAULT ISOLATION. Figure 8-3 provides a fault isolation procedure in flow-chart form. Malfunctions can be isolated to a specific circuit or component by following the step-by-step instructions. Refer to table 4-1 for a list of mnemonic definitions and origins. Refer to Section IV for flow charts, block diagrams, and simplified schematics showing the operation of circuits contained in the Model 1607A.

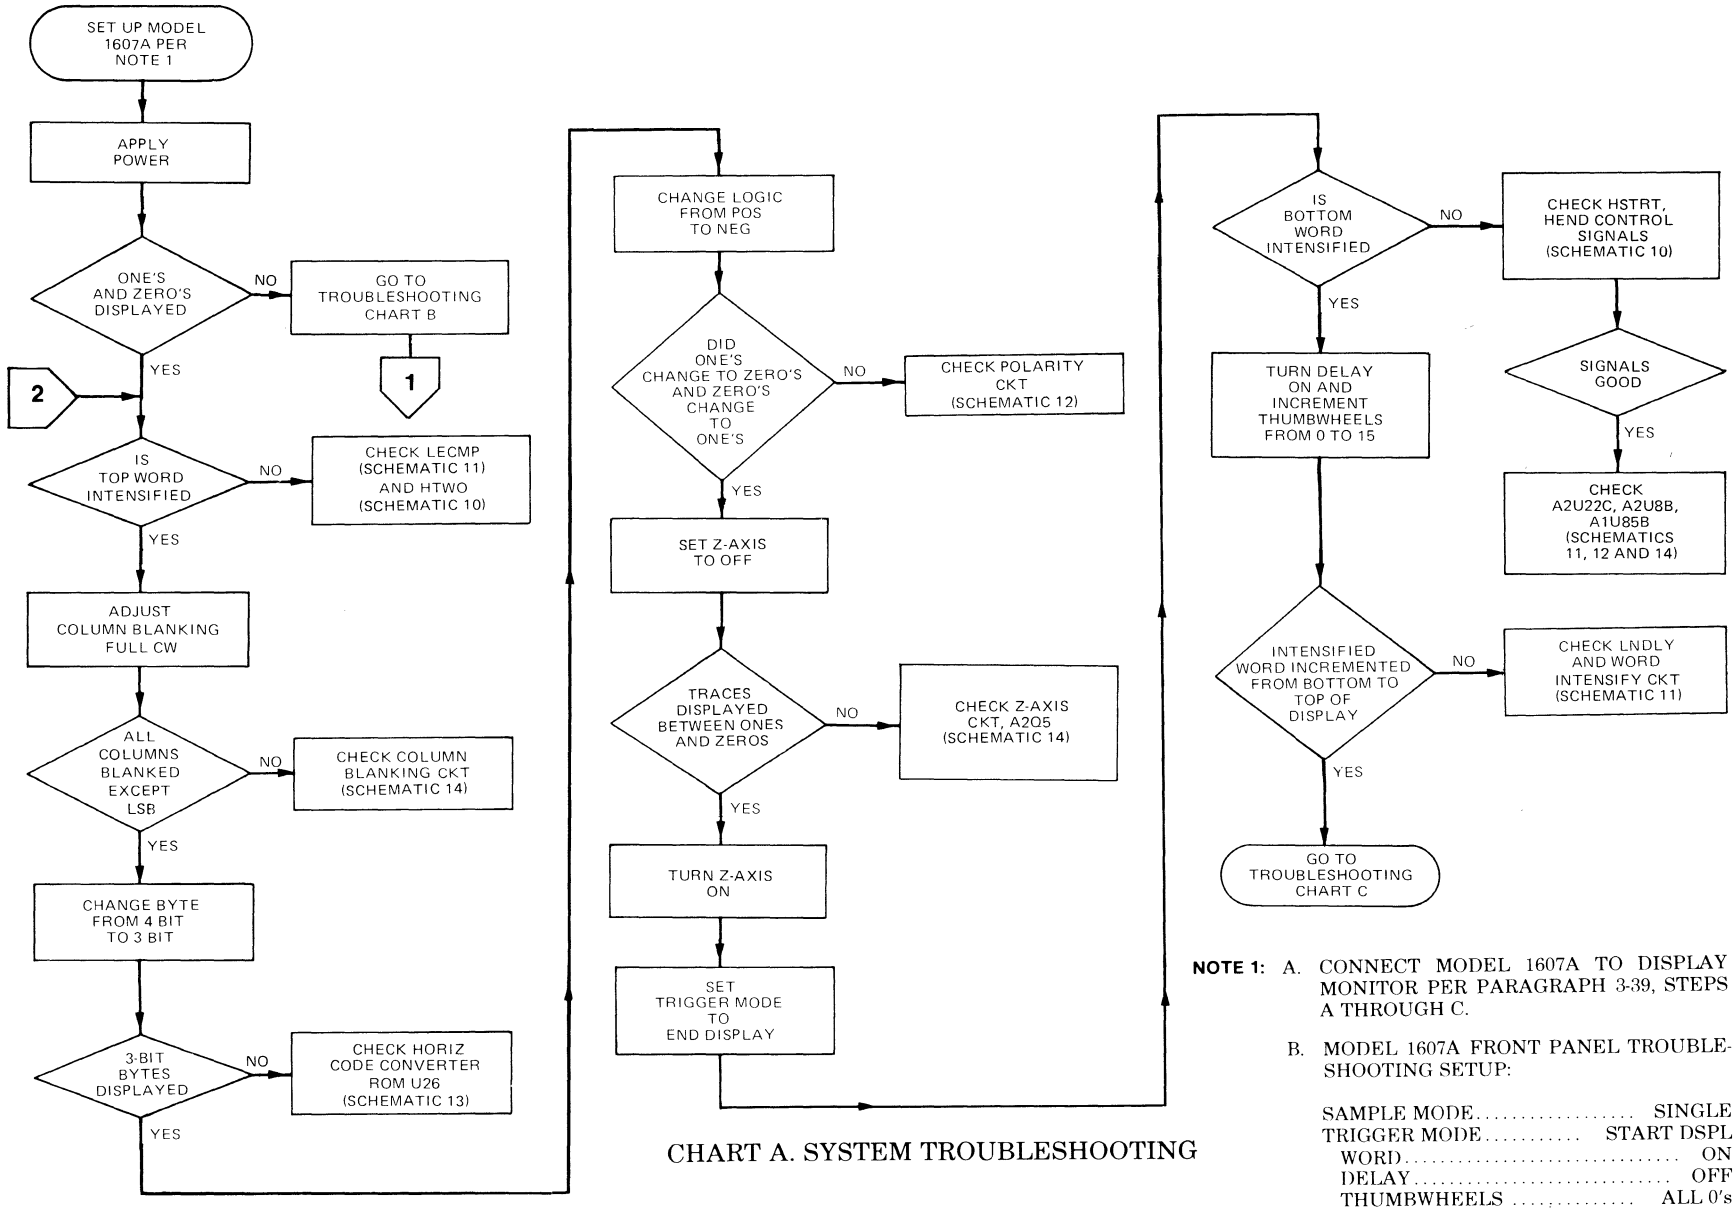

CHART A. SYSTEM TROUBLESHOOTING

NOTE 1: A. CONNECT MODEL 1607A TO DISPLAY MONITOR PER PARAGRAPH 3-39, STEPS A THROUGH C.

B. MODEL 1607A FRONT PANEL TROUBLESHOOTING SETUP:

SAMPLE MODE	SINGLE
TRIGGER MODE	START DSPL
WORD	ON
DELAY	OFF
THUMBWHEELS	ALL 0's
COLUMN BLANKING	FULL CCW
LOGIC	POS
BYTE	4 BIT

1607A-026

Figure 8-3. Troubleshooting Charts (Sheet 1 of 3)

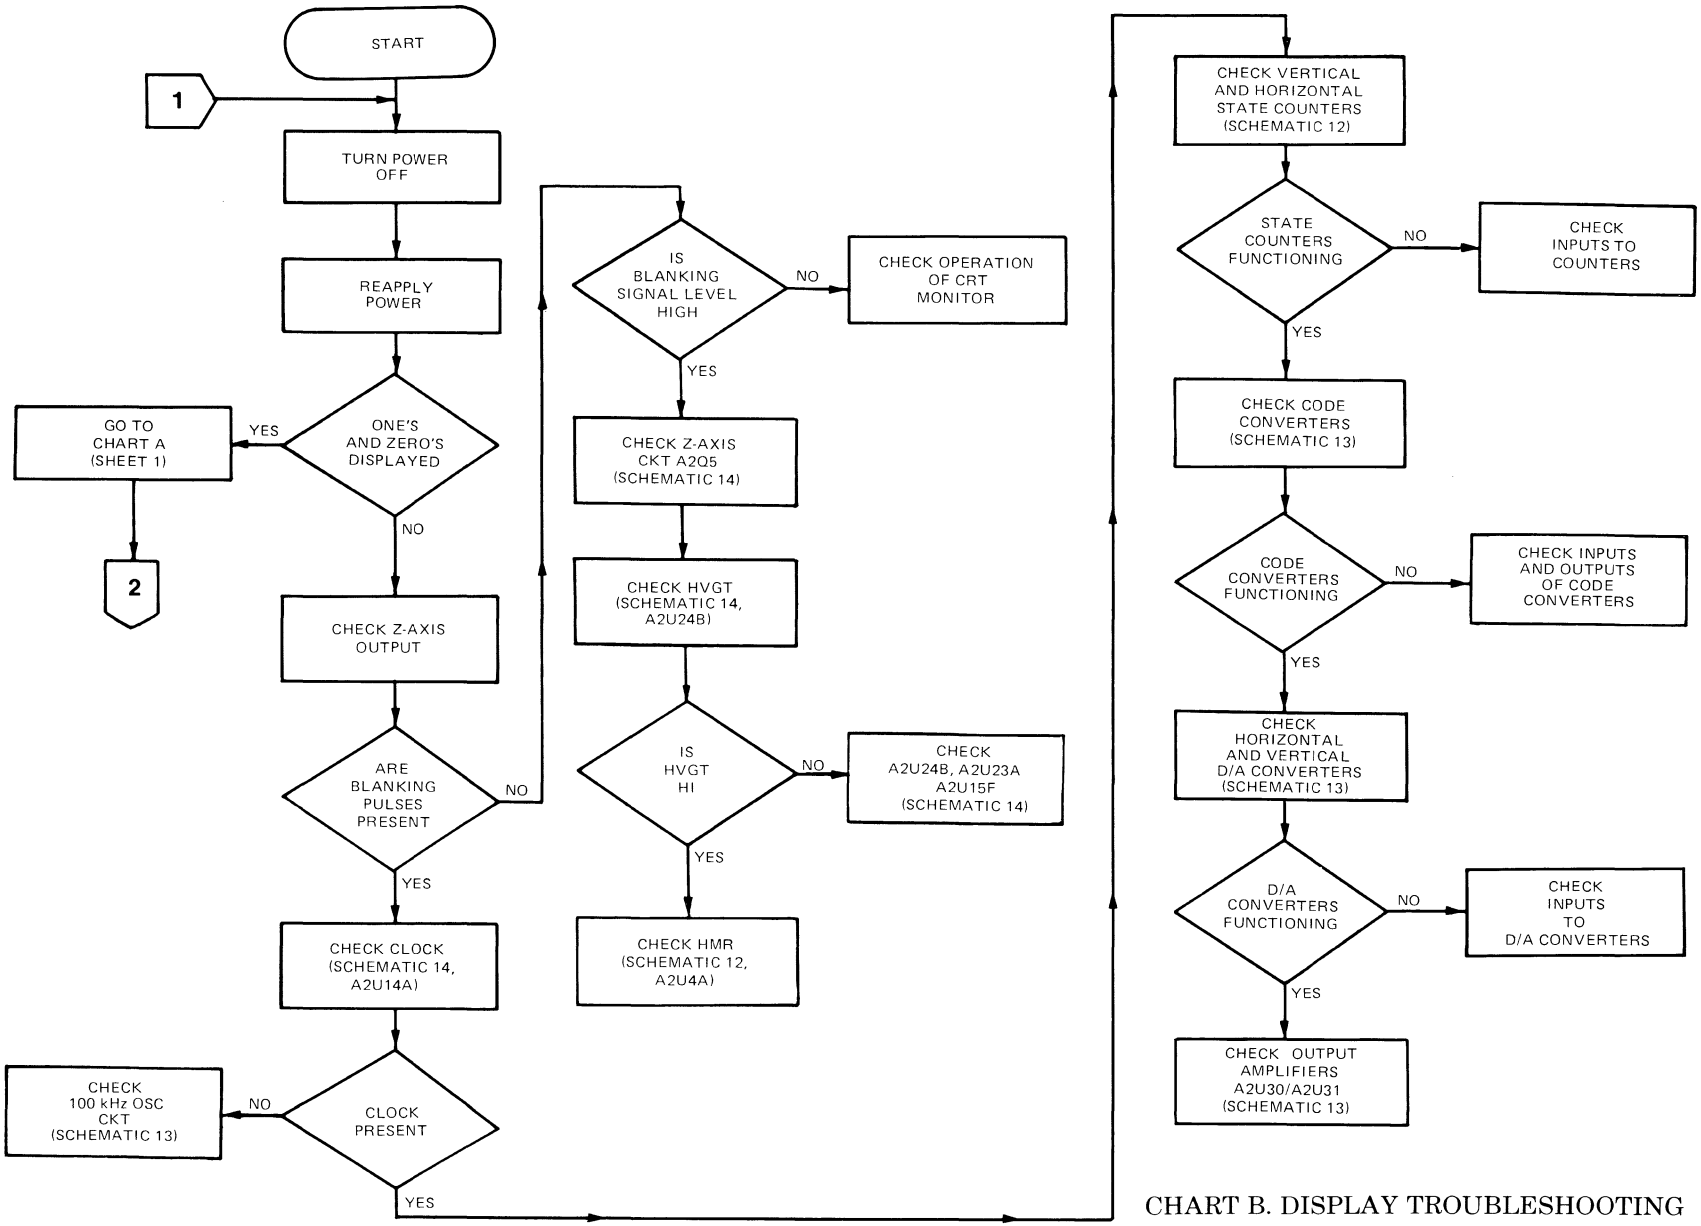

Figure 8-3. Troubleshooting Charts (Sheet 2 of 3)

NOTE 2: INSTRUMENT SETUP FOR CHART C.

A. CONNECT TEST EQUIPMENT AS SHOWN IN FIGURE 5-1.

B. SET MODEL 1607A CONTROLS AS FOLLOWS:

CLOCK	⌐¯
THLD	TTL
QUALIFIER	
Q0, Q1	HI
DSPL/TRIG	TRIG
SAMPLE MODE	REPET
TRIGGER MODE	
START DSPL	ON
NORM/ARM	NORM
LOCAL/BUS	LOCAL
WORD	ON
TRIGGER WORD	ALL HI

C. APPLY WAVEFORMS SHOWN IN FIGURE 5-2 to CLOCK AND DATA INPUTS.

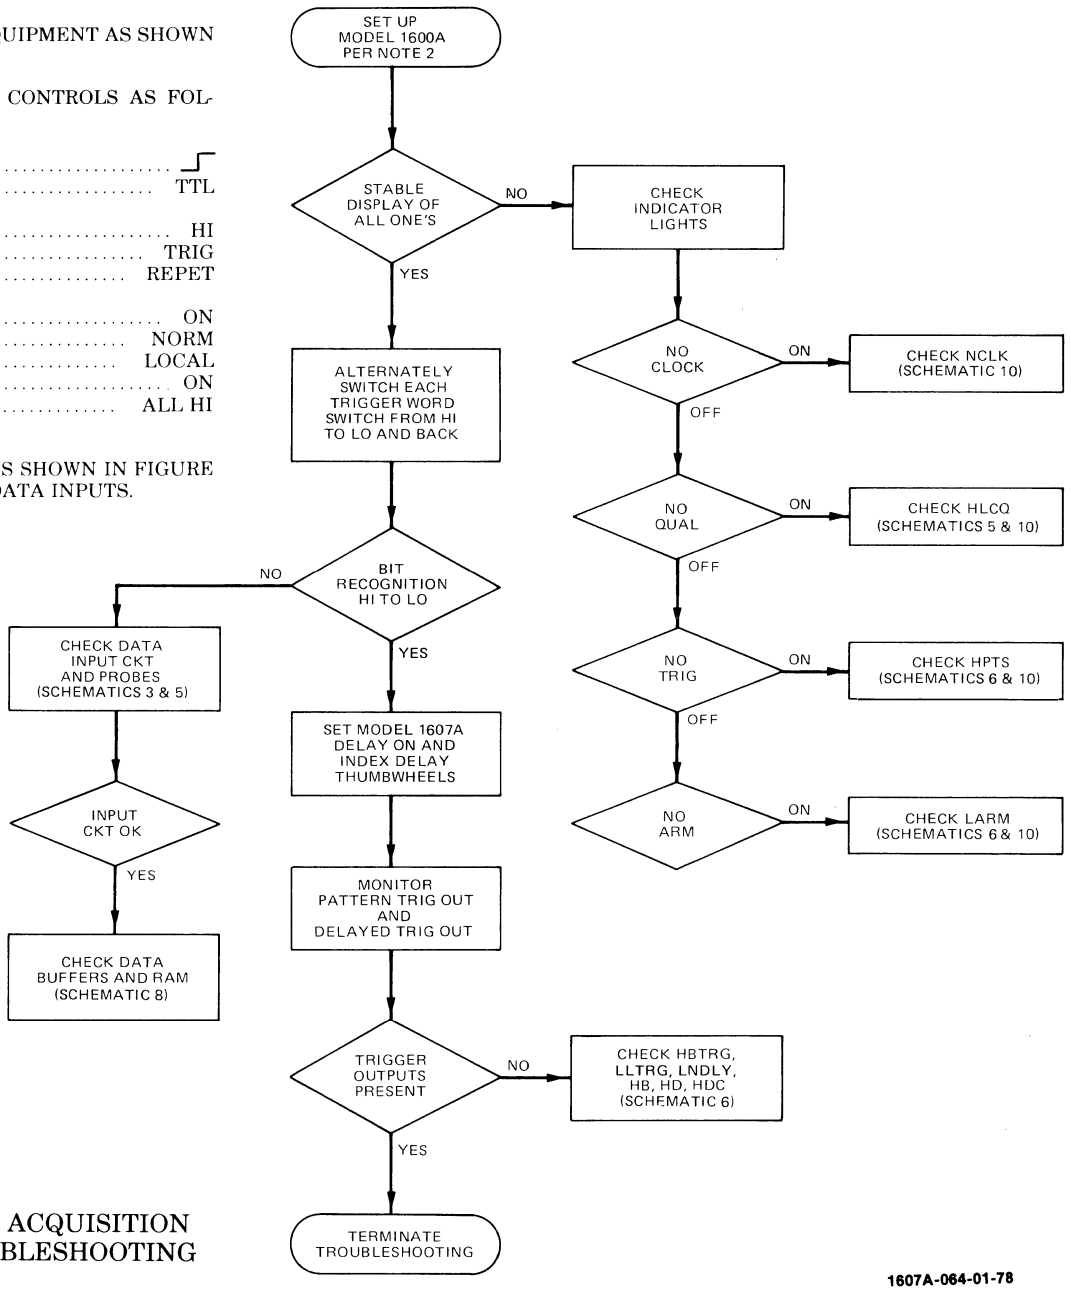

CHART C. DATA ACQUISITION TROUBLESHOOTING

Figure 8-3. Troubleshooting Charts (Sheet 3 of 3)

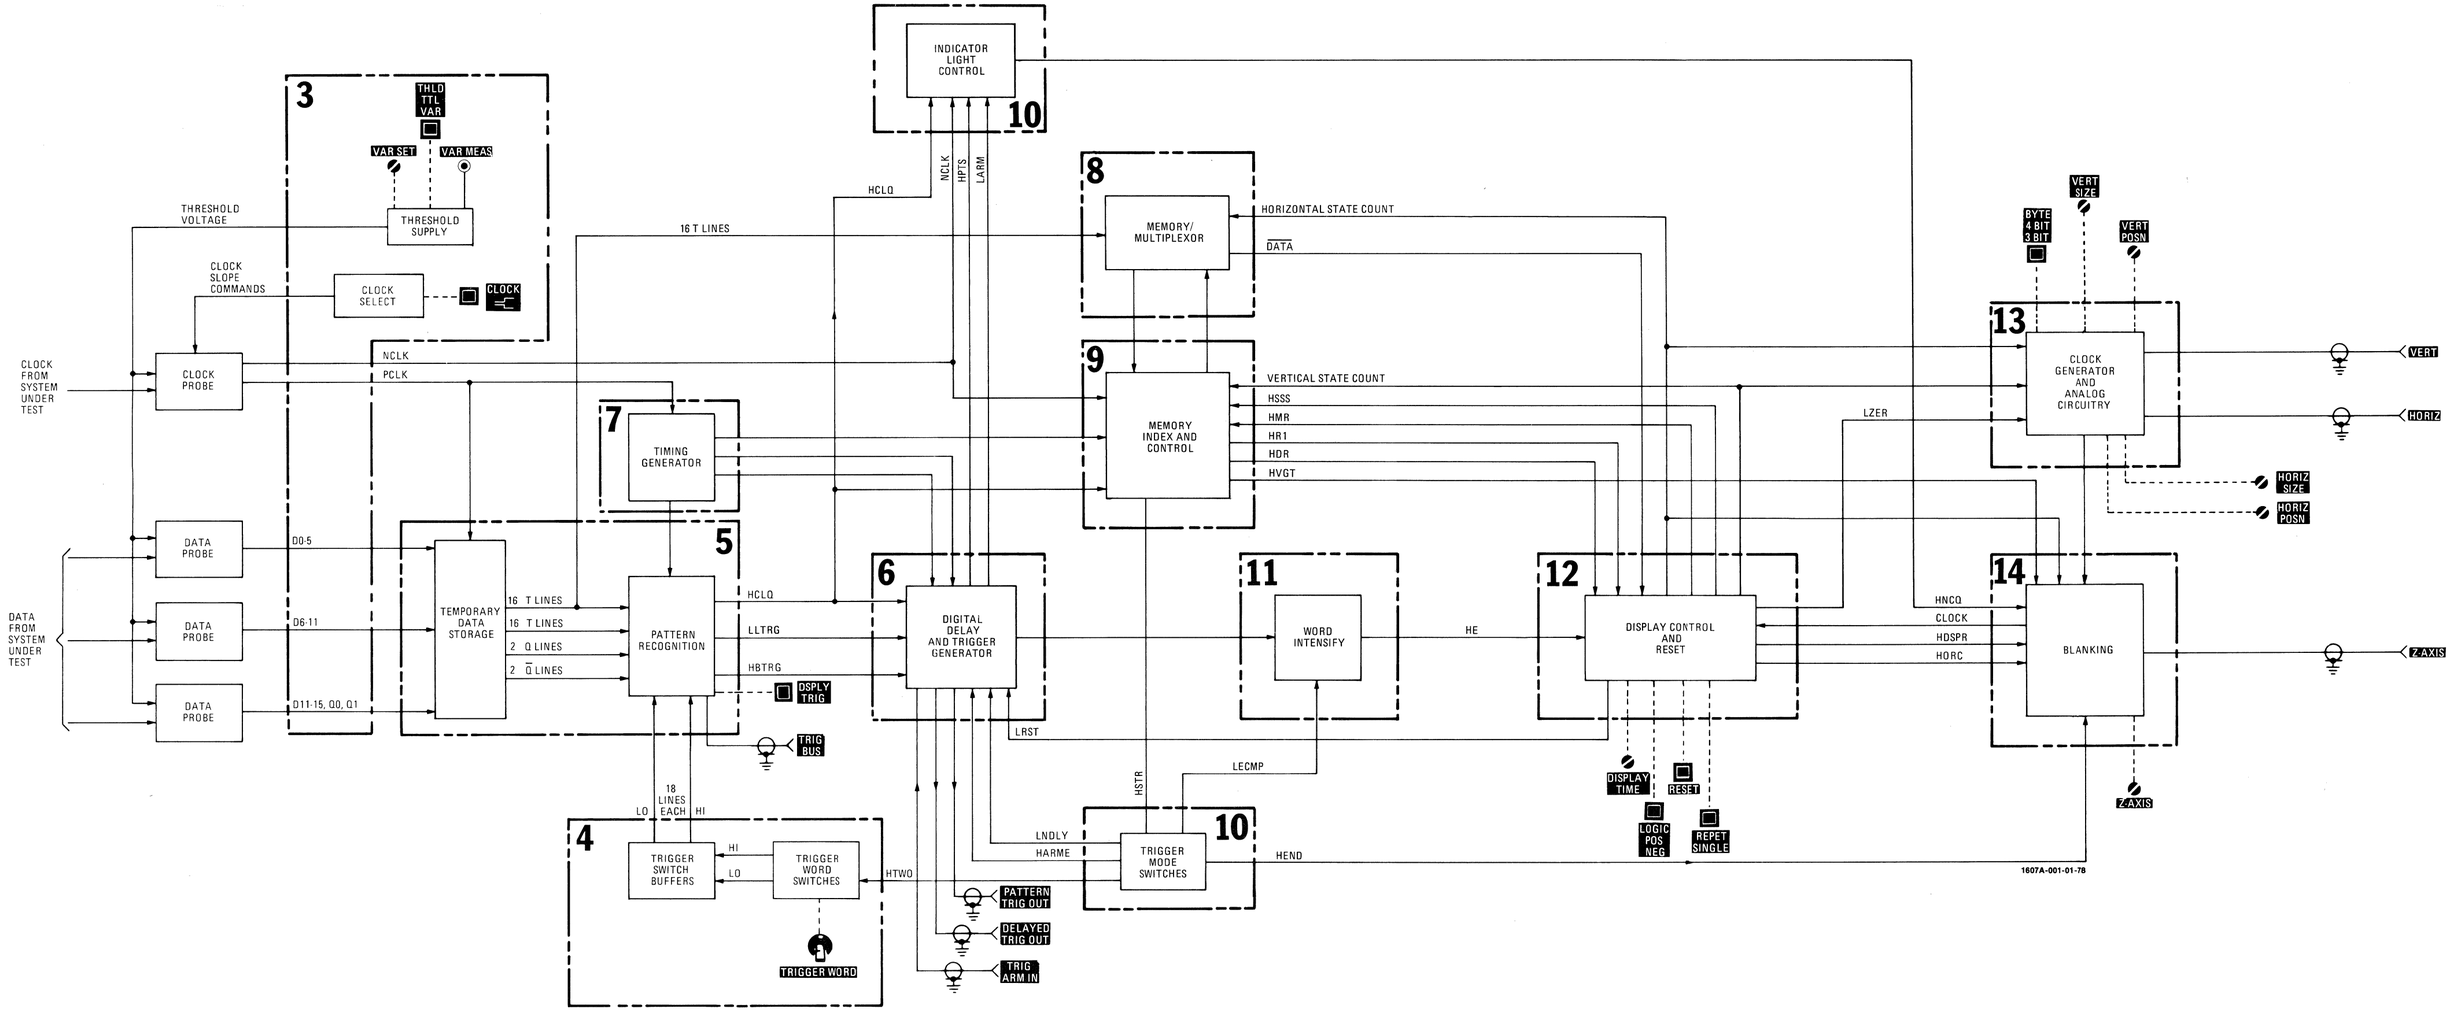

Figure 8-4.
Model 1607A Block Diagram
8-11/(8-12 blank)

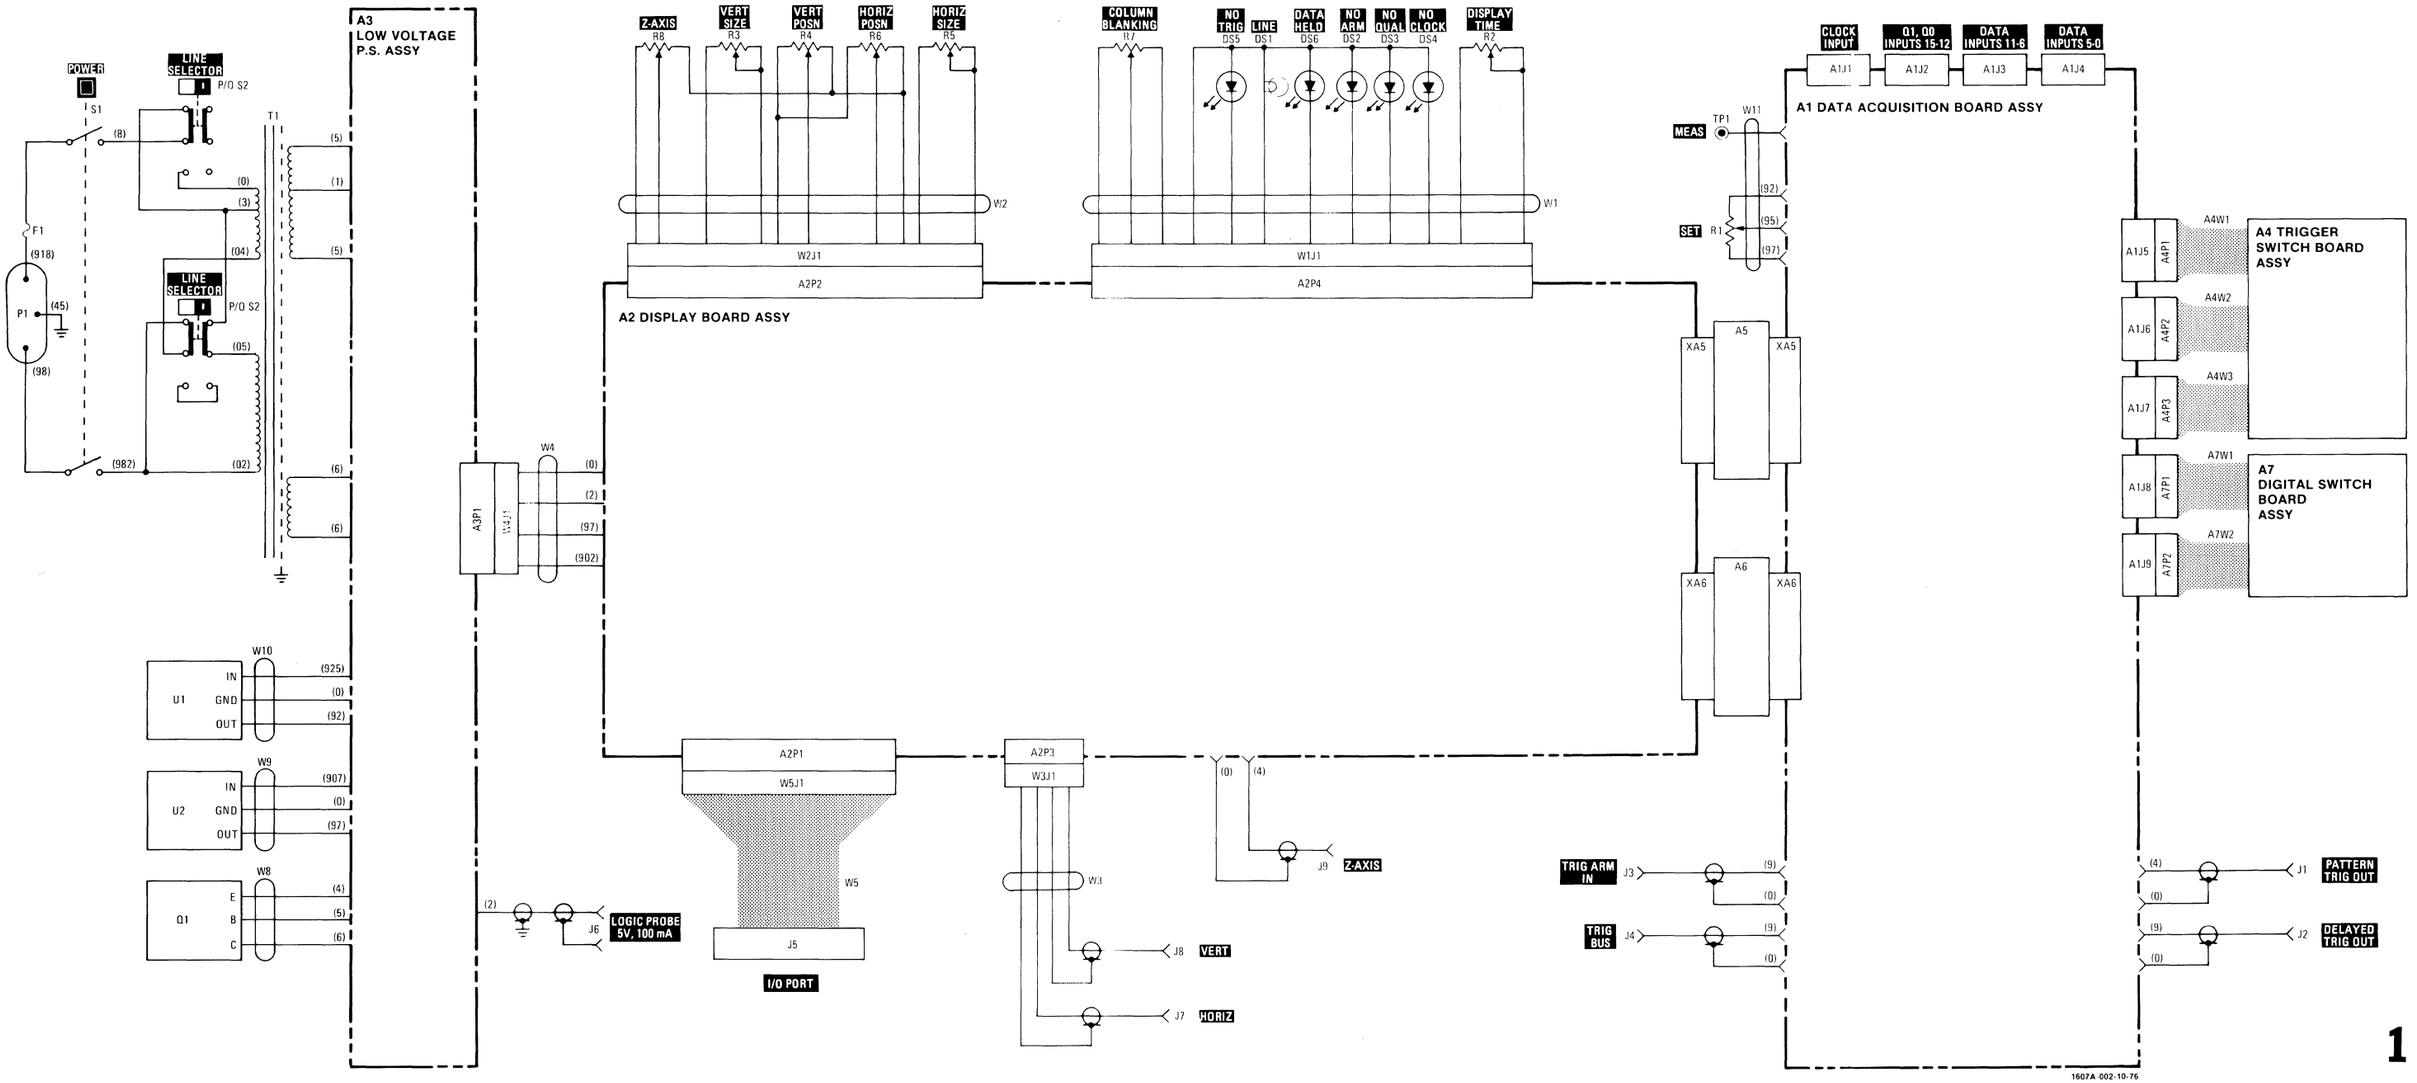

1

Figure 8-5.
Schematic 1, Model 1607A Interconnection Diagram

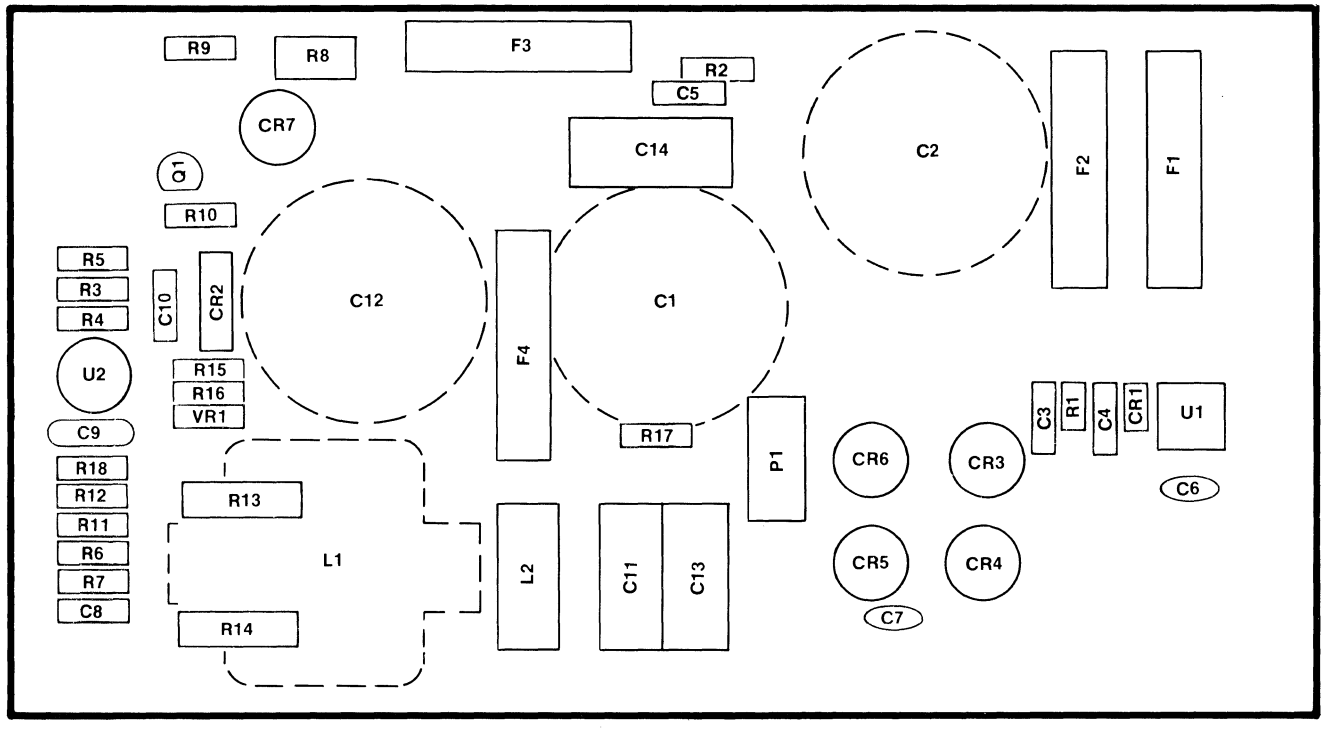

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	E-3	C11	D-4	CR7	C-2	R2	E-2	R12	B-4
C2	F-2	C12	C-3	F1	G-2	R3	B-3	R13	B-4
C3	G-3	C13	E-4	F2	G-2	R4	B-3	R14	B-4
C4	G-3	C14	E-2	F3	D-1	R5	B-2	R15	B-3
C5	E-2	CR1	G-3	F4	D-3	R6	B-4	R16	B-3
C6	G-4	CR2	B-3	L1	C-4	R7	B-4	R17	E-3
C7	F-4	CR3	F-4	L2	D-4	R8	C-1	R18	B-4
C8	B-4	CR4	F-4	P1	E-4	R9	B-1	U1	G-3
C9	B-3	CR5	F-4	Q1	B-2	R10	B-2	U2	B-3
C10	B-3	CR6	F-4	R1	G-3	R11	B-4	VR1	B-3

Figure 8-6. Schematic 2, Low Voltage Power Distribution, Assembly A3 (Sheet 1 of 3)

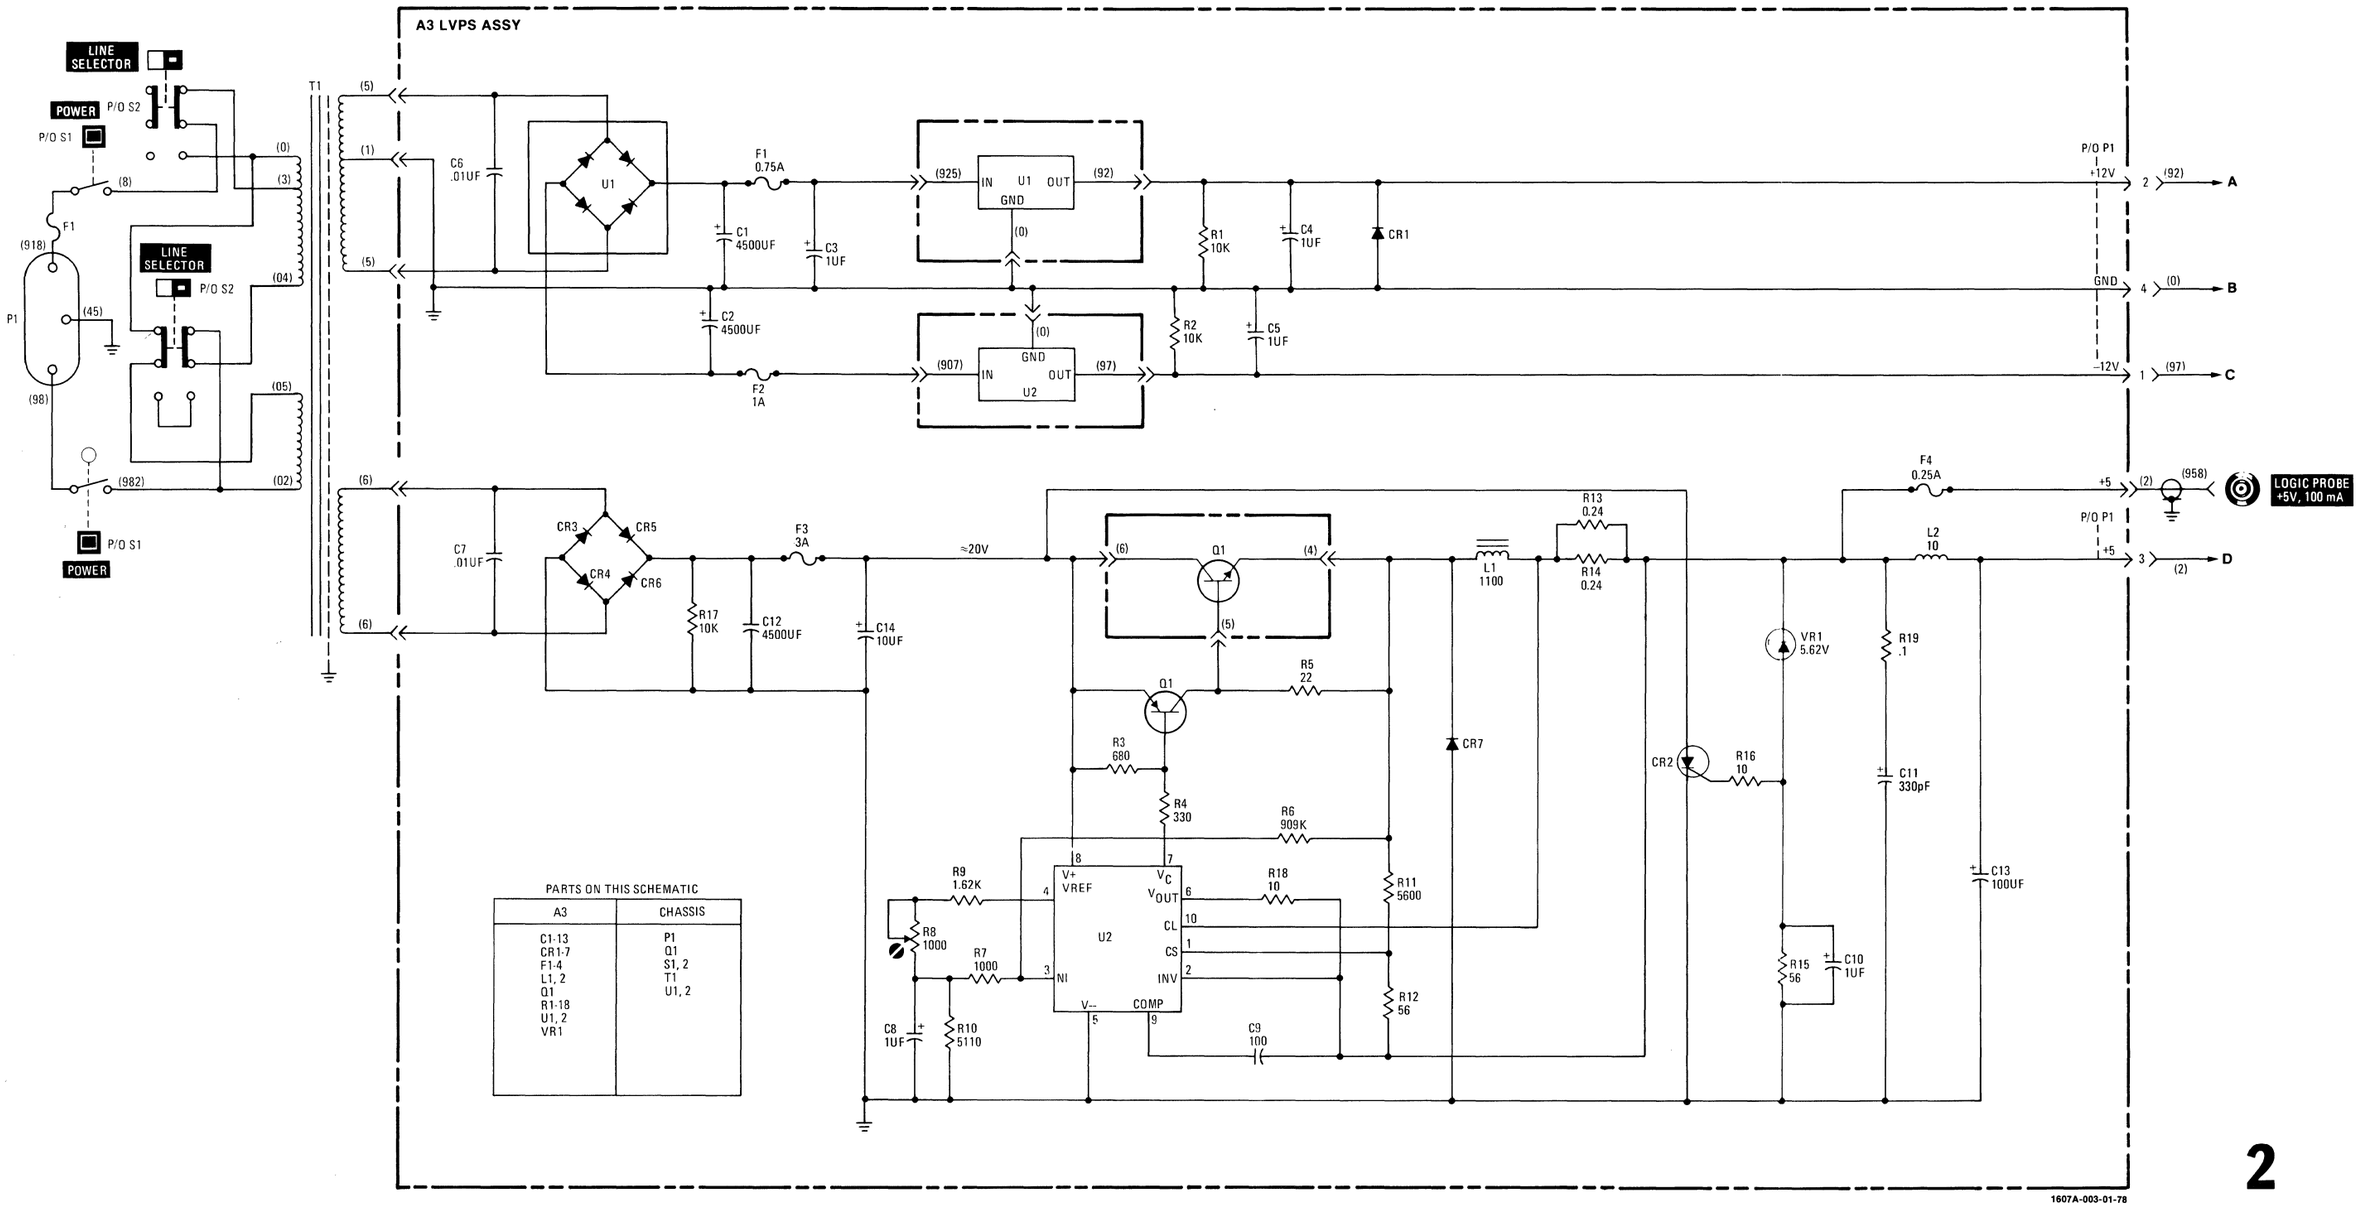

PARTS ON THIS SCHEMATIC

A3	CHASSIS
C1-13 CR1-7 F1-4 L1, 2 Q1 R1-18 U1, 2 VR1	P1 Q1 S1, 2 T1 U1, 2

2

Figure 8-6.
Schematic 2, Low-Voltage Power Distribution, Assembly A3 (Sheet 2 of 3)

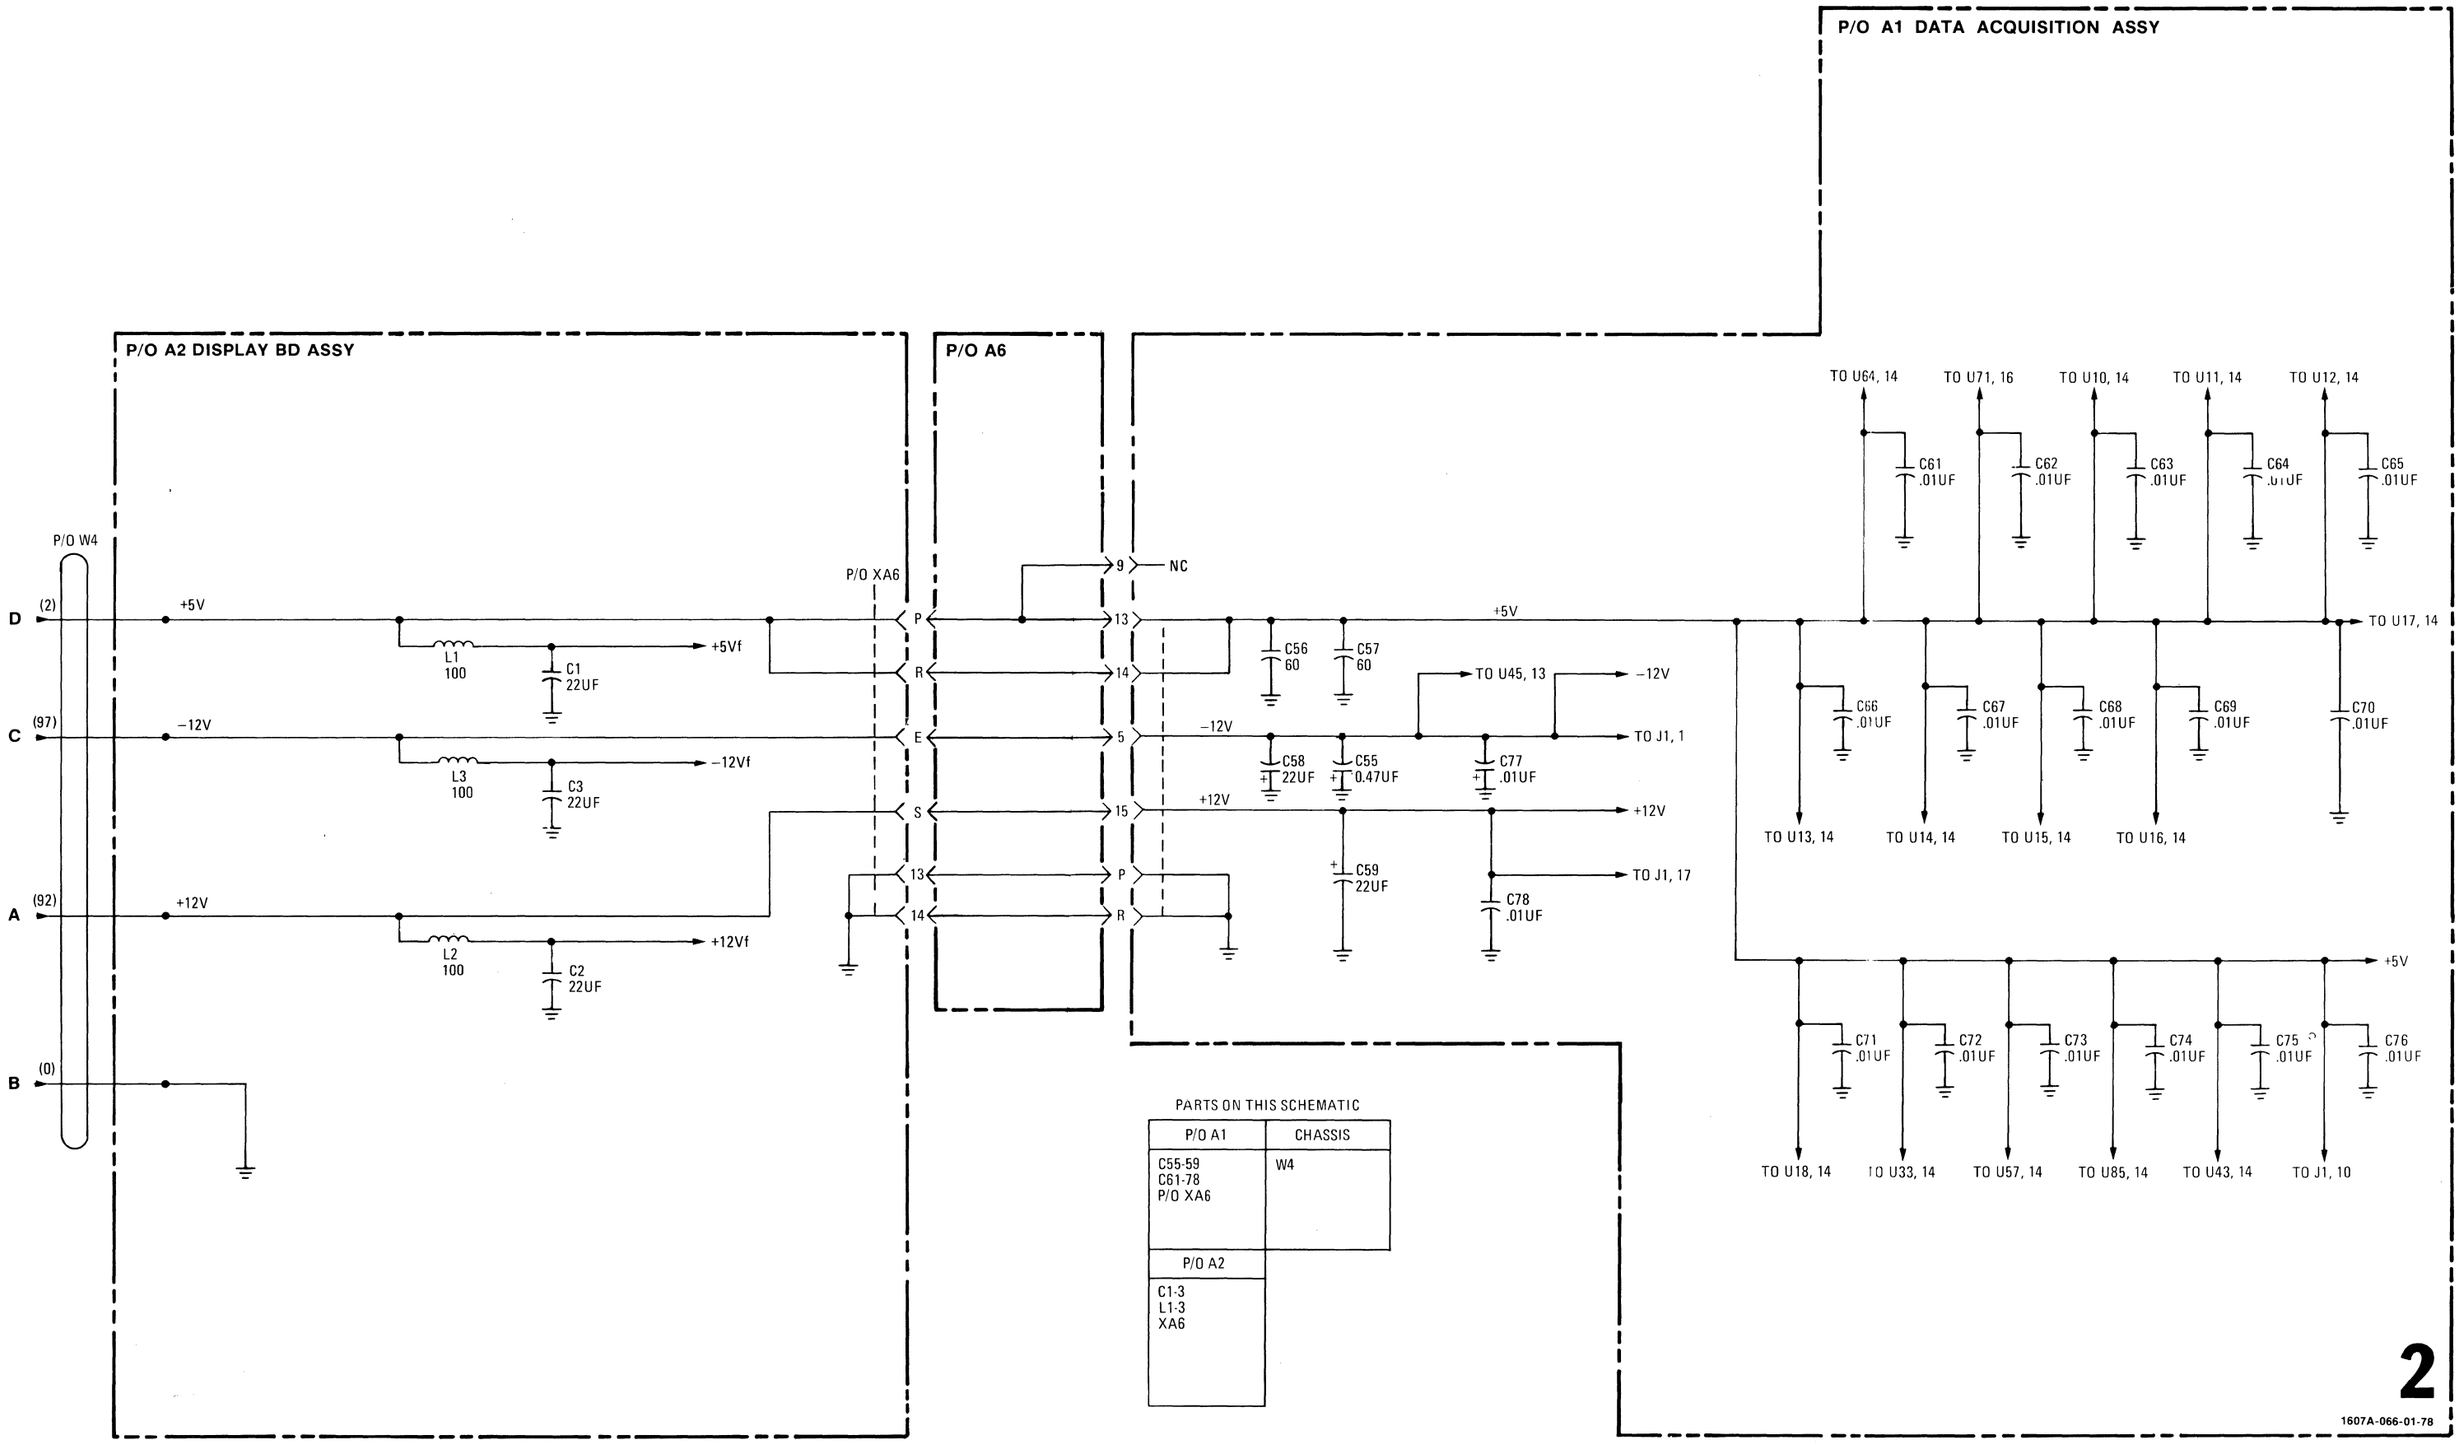

Figure 8-6.
Schematic 2, Low-Voltage Power Distribution, Assembly A3 (Sheet 3 of 3)

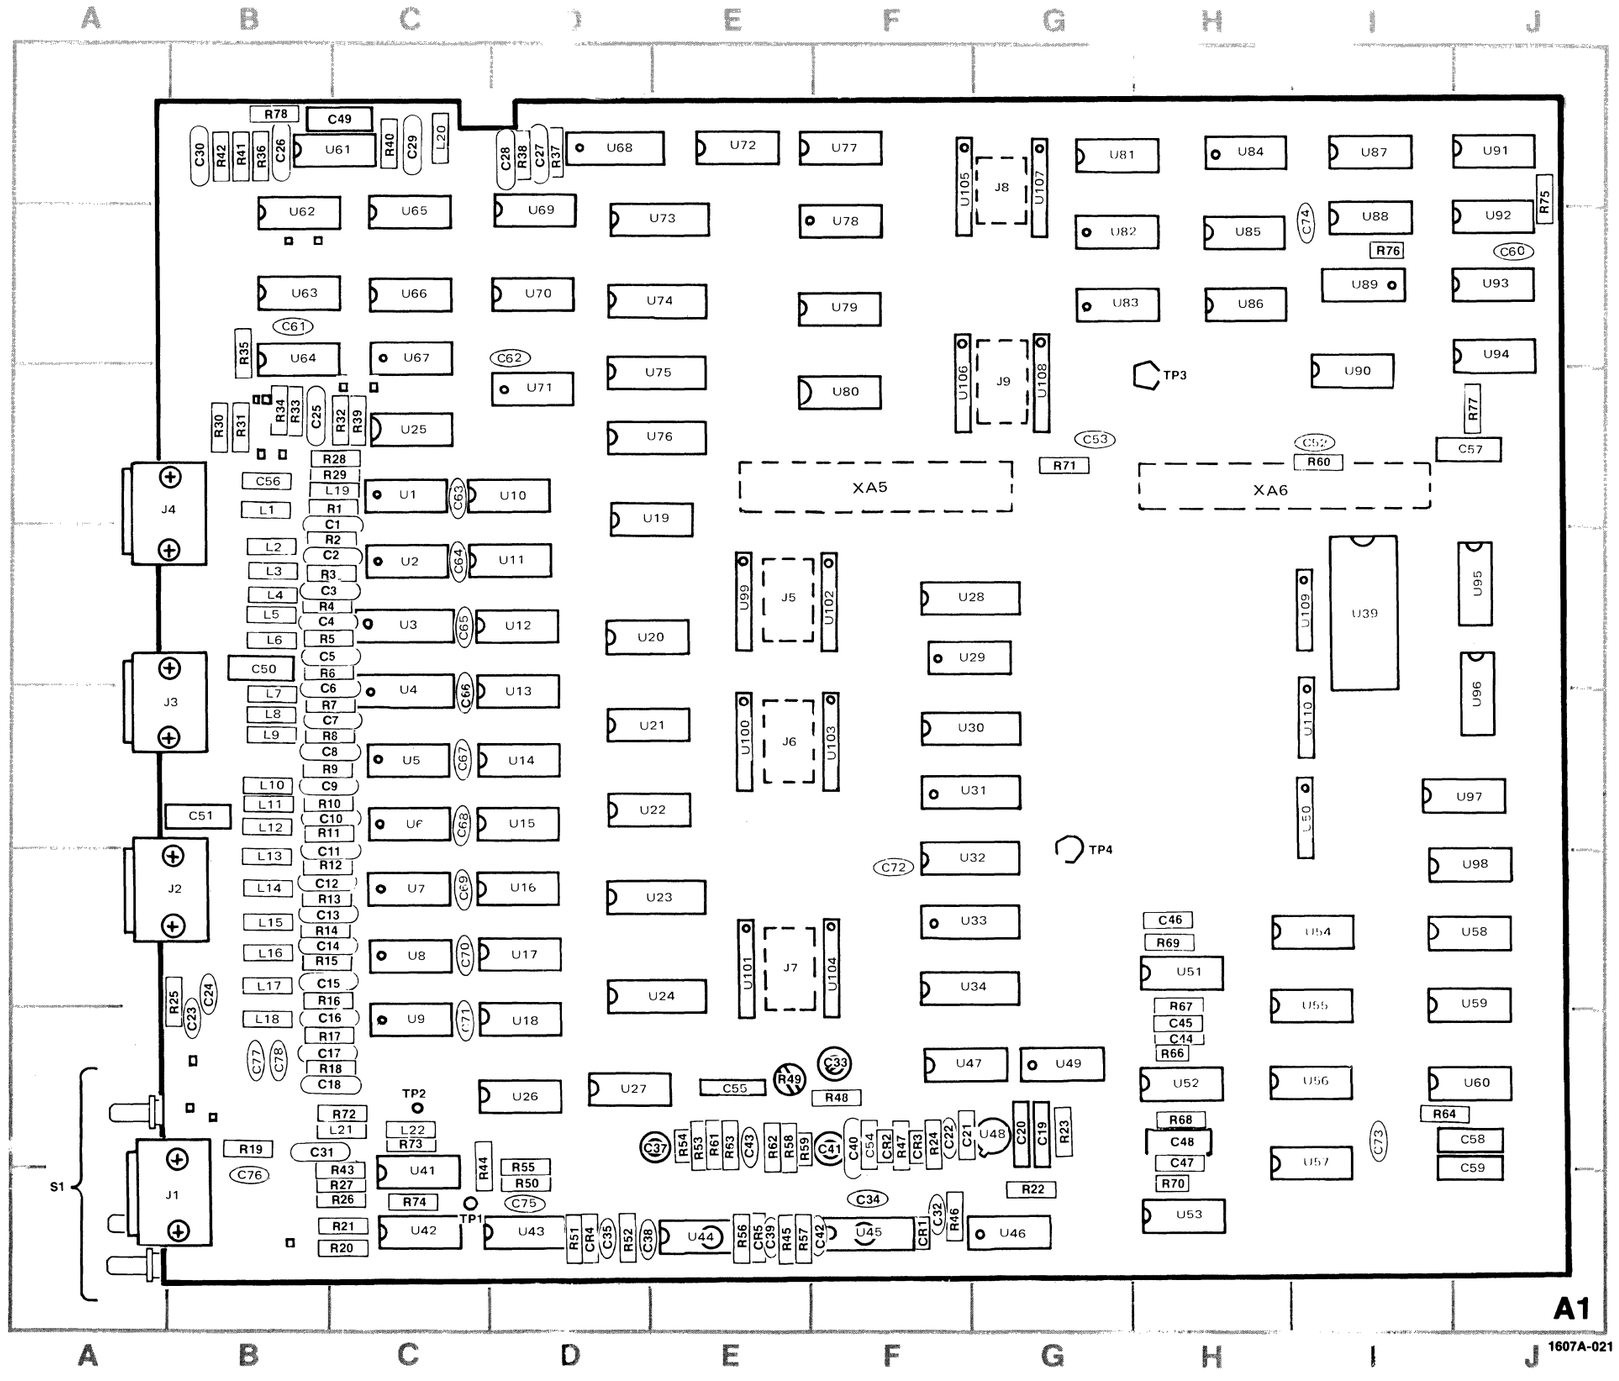

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	B-3	C63	C-3	R10	B-5	R72	C-7	U55	I-6
C2	B-4	C64	C-4	R11	B-5	R73	C-7	U56	I-7
C3	B-4	C65	C-4	R12	B-6	R74	C-8	U57	I-7
C4	B-4	C66	C-4	R13	B-6	R75	J-1	U58	J-6
C5	B-4	C67	C-5	R14	B-6	R76	I-2	U59	J-6
C6	B-4	C68	C-5	R15	B-6	R77	J-3	U60	J-7
C7	B-5	C69	C-6	R16	B-6	R78	B-1	U61	B-1
C8	B-5	C70	C-6	R17	B-7	S1	A-8	U62	B-1
C9	B-5	C71	C-6	R18	B-7	TP1	C-8	U63	B-2
C10	B-5	C72	F-6	R19	B-7	TP2	C-7	U64	B-2
C11	B-5	C73	I-7	R20	C-8	TP3	H-2	U65	C-1
C12	B-6	C74	I-1	R21	C-8	TP4	G-5	U66	C-2
C13	B-6	C75	D-8	R22	G-8	U1	C-3	U67	C-2
C14	B-6	C76	B-7	R23	G-7	U2	C-4	U68	D-1
C15	B-6	C77	B-7	R24	F-7	U3	C-4	U69	D-1
C16	B-6	C78	B-7	R25	A-6	U4	C-4	U70	D-2
C17	B-7	CR1	F-8	R26	C-8	U5	C-5	U71	D-3
C18	B-7	CR2	F-7	R27	C-8	U6	C-5	U72	E-1
C19	G-7	CR3	F-7	R28	B-3	U7	C-6	U73	E-1
C20	G-7	CR4	D-8	R29	B-3	U8	C-6	U74	E-2
C21	F-7	CR5	E-8	R30	B-3	U9	C-6	U75	E-2
C22	F-7	J1	A-8	R31	B-3	U10	D-3	U76	E-3
C23	B-6	J2	A-6	R32	C-3	U11	D-4	U77	F-1
C24	B-6	J3	A-5	R33	B-3	U12	D-4	U78	F-1
C25	B-3	J4	A-3	R34	B-3	U13	D-4	U79	F-2
C26	B-1	J5	E-4	R35	B-2	U14	D-5	U80	F-3
C27	D-1	J6	E-5	R36	B-1	U15	D-5	U81	G-1
C28	D-1	J7	E-6	R37	D-1	U16	D-6	U82	G-2
C29	C-1	J8	G-1	R38	D-1	U17	D-6	U83	G-2
C30	B-1	J9	G-3	R39	C-3	U18	D-7	U84	H-1
C31	B-7	L1	B-3	R40	C-1	U19	E-3	U85	H-2
C32	F-8	L2	B-4	R41	B-1	U20	E-4	U86	H-2
C33	F-7	L3	B-4	R42	B-1	U21	E-5	U87	I-1
C34	F-8	L4	B-4	R43	C-7	U22	E-5	U88	I-1
C35	D-8	L5	B-4	R44	C-7	U23	E-6	U89	I-2
C37	E-7	L6	B-4	R45	E-8	U24	E-6	U90	I-2
C38	D-8	L7	B-4	R46	F-8	U25	C-3	U91	J-1
C39	E-8	L8	B-5	R47	F-7	U26	D-7	U92	J-1
C40	F-7	L9	B-5	R48	F-7	U27	D-7	U93	J-2
C41	F-7	L10	B-5	R49	E-7	U28	G-4	U94	J-2
C42	F-8	L11	B-5	R50	D-8	U29	G-4	U95	J-4
C43	E-7	L12	B-5	R51	D-8	U30	G-5	U96	J-4
C44	H-7	L13	B-5	R52	D-8	U31	G-5	U97	J-5
C45	H-7	L14	B-6	R53	E-7	U32	G-6	U98	J-6
C46	H-6	L15	B-6	R54	E-7	U33	G-6	U99	E-4
C47	H-7	L16	B-6	R55	D-7	U34	G-6	U100	E-5
C48	H-7	L17	B-6	R56	E-8	U39	I-4	U101	E-6
C49	B-1	L18	B-6	R57	E-8	U41	C-7	U102	F-4
C50	B-4	L19	B-3	R58	E-7	U42	C-8	U103	F-5
C51	B-5	L20	C-1	R59	E-7	U43	D-8	U104	F-6
C52	I-3	L21	B-7	R60	I-3	U44	E-8	U105	F-1
C53	G-3	L22	C-7	R61	E-7	U45	F-8	U106	F-3
C54	F-7	R1	B-3	R62	E-7	U46	G-8	U107	G-1
C55	E-7	R2	B-4	R63	E-7	U47	F-7	U108	G-3
C56	B-3	R3	B-4	R64	J-7	U48	G-7	U109	I-4
C57	J-3	R4	B-4	R66	H-7	U49	G-7	U110	I-5
C58	J-7	R5	B-4	R67	H-6	U50	I-5	XA5	F-3
C59	J-7	R6	B-4	R68	H-7	U51	H-6	XA6	H-3
C60	J-2	R7	B-5	R69	H-6	U52	H-7		
C61	B-2	R8	B-5	R70	H-8	U53	H-8		
C62	D-2	R9	B-5	R71	G-3	U54	I-6		

Figure 8-7. Schematic 3, Data Input and Threshold, P/O Assembly A1 (Sheet 1 of 2)

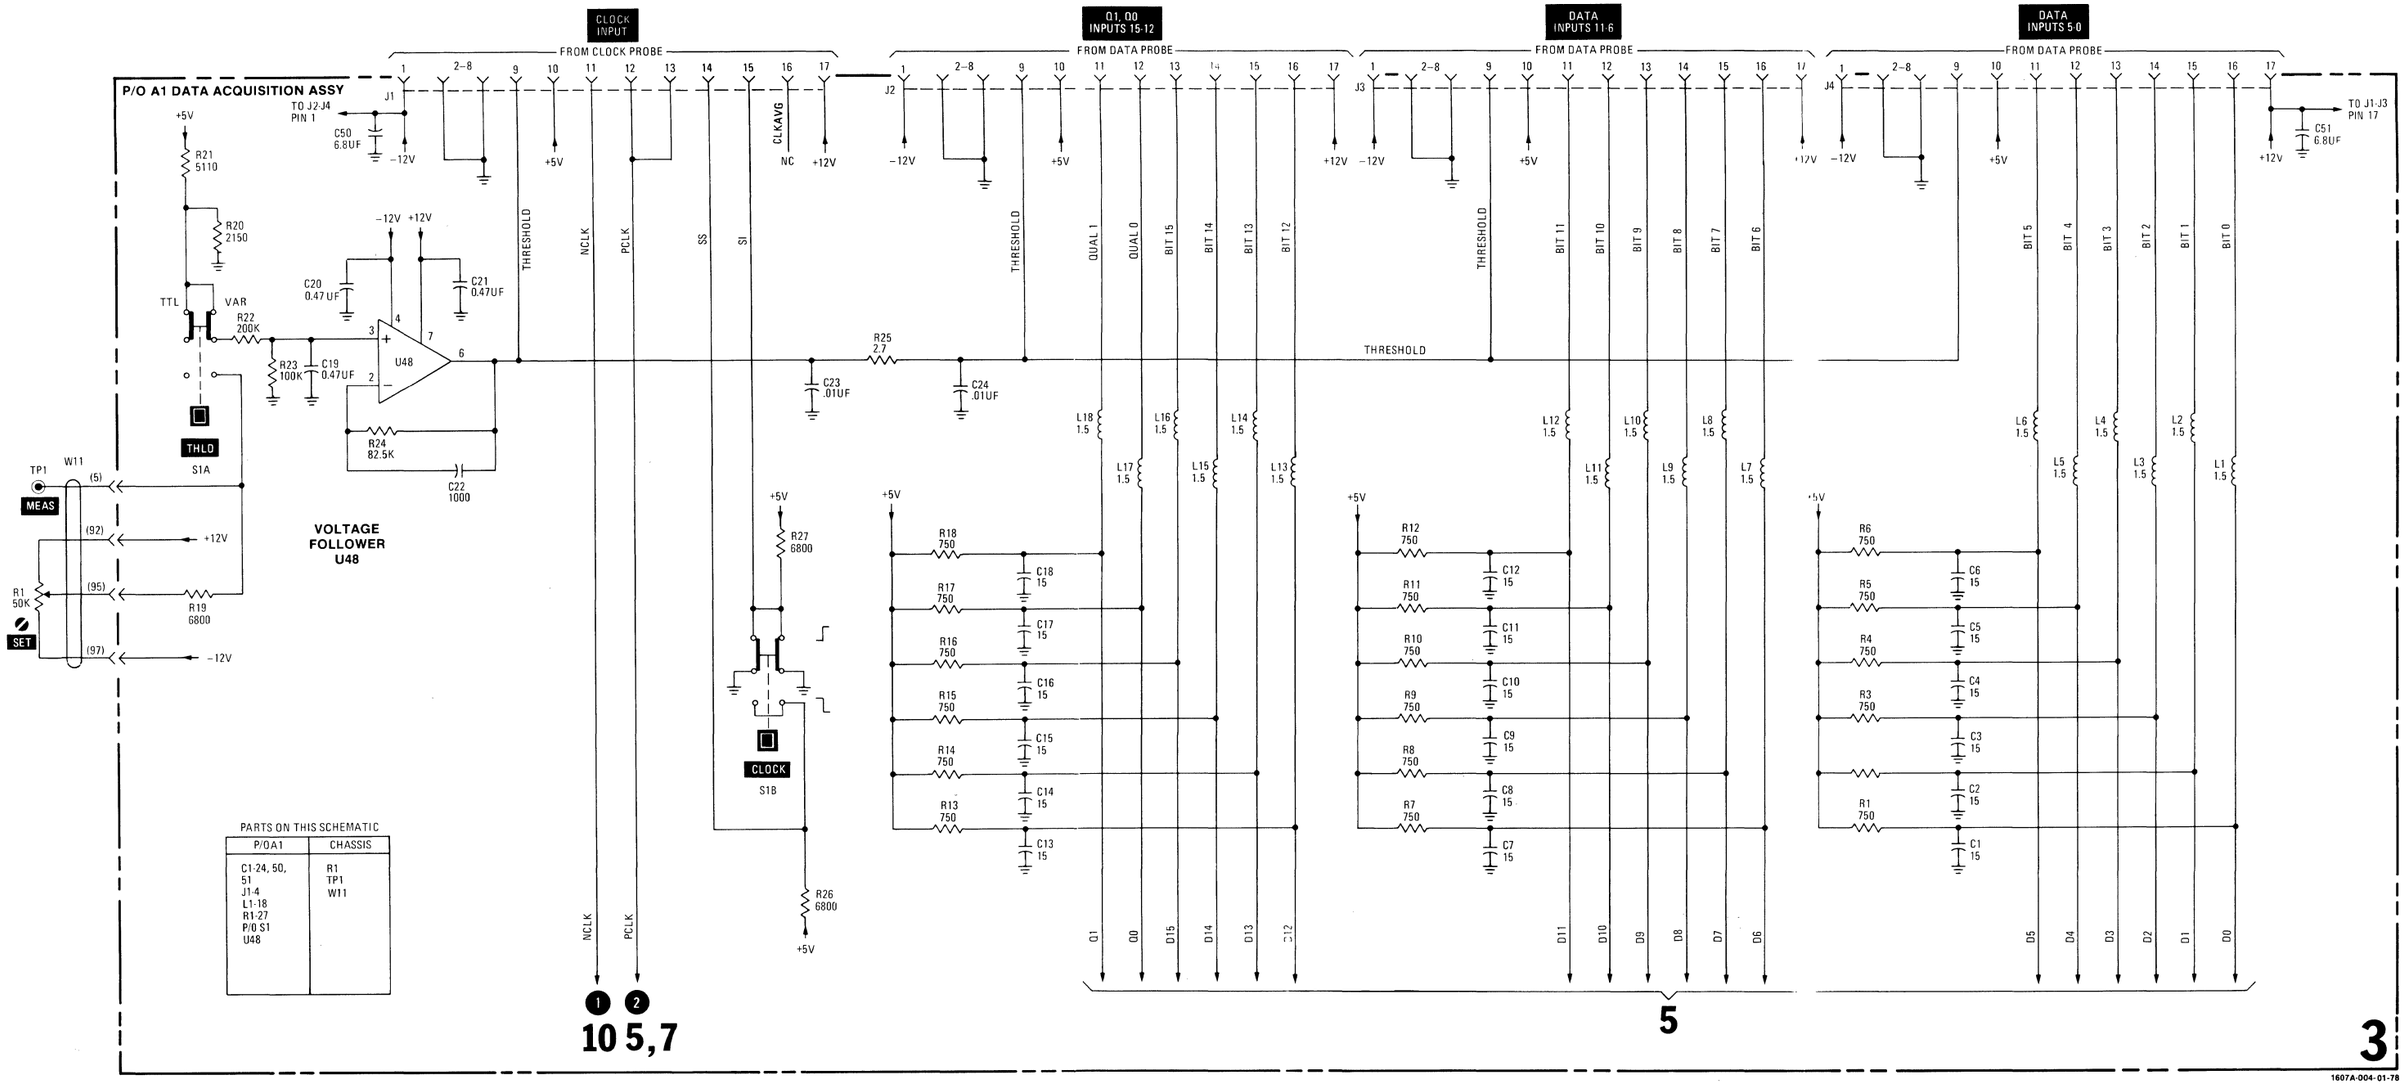

PARTS ON THIS SCHEMATIC

P/O A1	CHASSIS
C1-24, 50, 51 J1-4 L1-18 R1-27 P/O S1 U48	R1 TP1 W11

Figure 8-7.
Schematic 3, Data Input and Threshold, P/O Assembly A1 (Sheet 2 of 2)

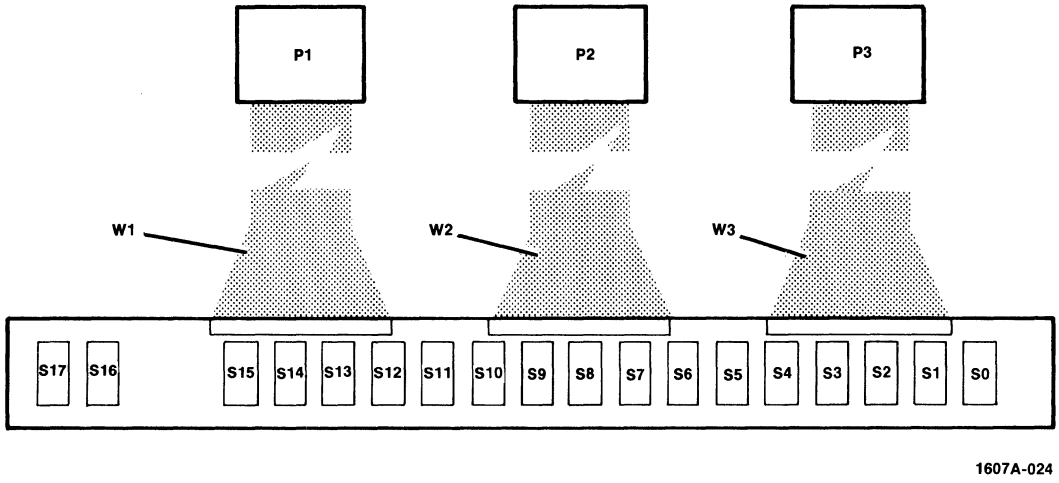

NOTE

See figure 8-7 (Sheet 1 of 2) for Assembly A1 Component Identification.

CAUTION

A1U19 through A1U24 are CMOS devices which can be easily damaged if contacted by static voltage.

Figure 8-8. Schematic 4, Trigger Word Select, P/O Assembly A1 and Assembly A4 (Sheet 1 of 2)

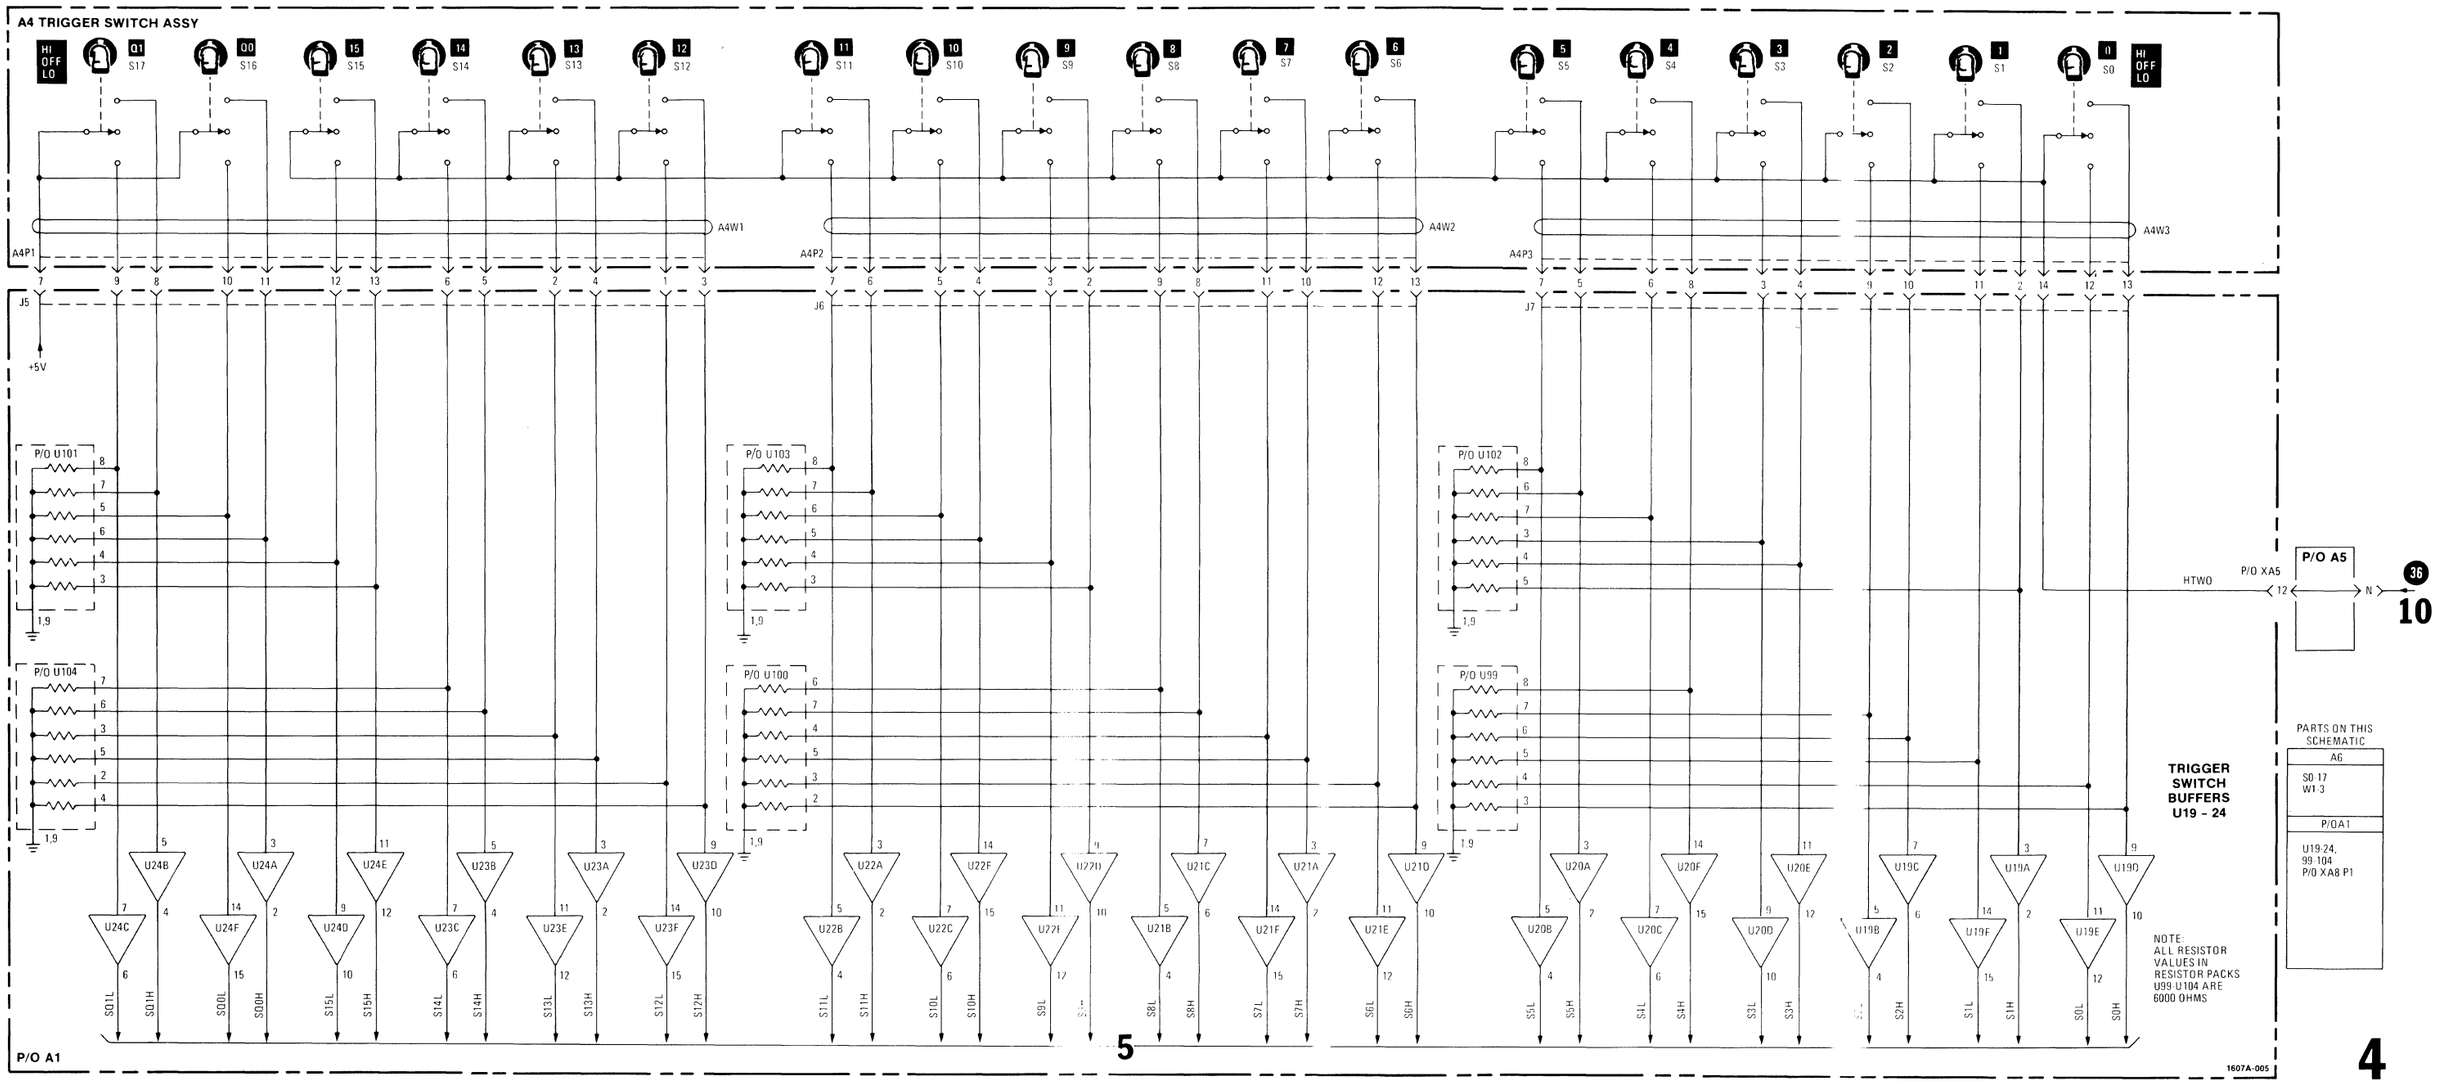

Figure 8-8.
Schematic 4, Trigger Word Select,
P/O Assembly A1 and Assembly A4 (Sheet 2 of 2)

NOTE

See figure 8-7 (Sheet 1 of 2) for Assembly A1 Component Identification.

Figure 8-9. Schematic 5, Temporary Storage and Pattern Recognition, P/O Assembly A1 (Sheet 1 of 2)

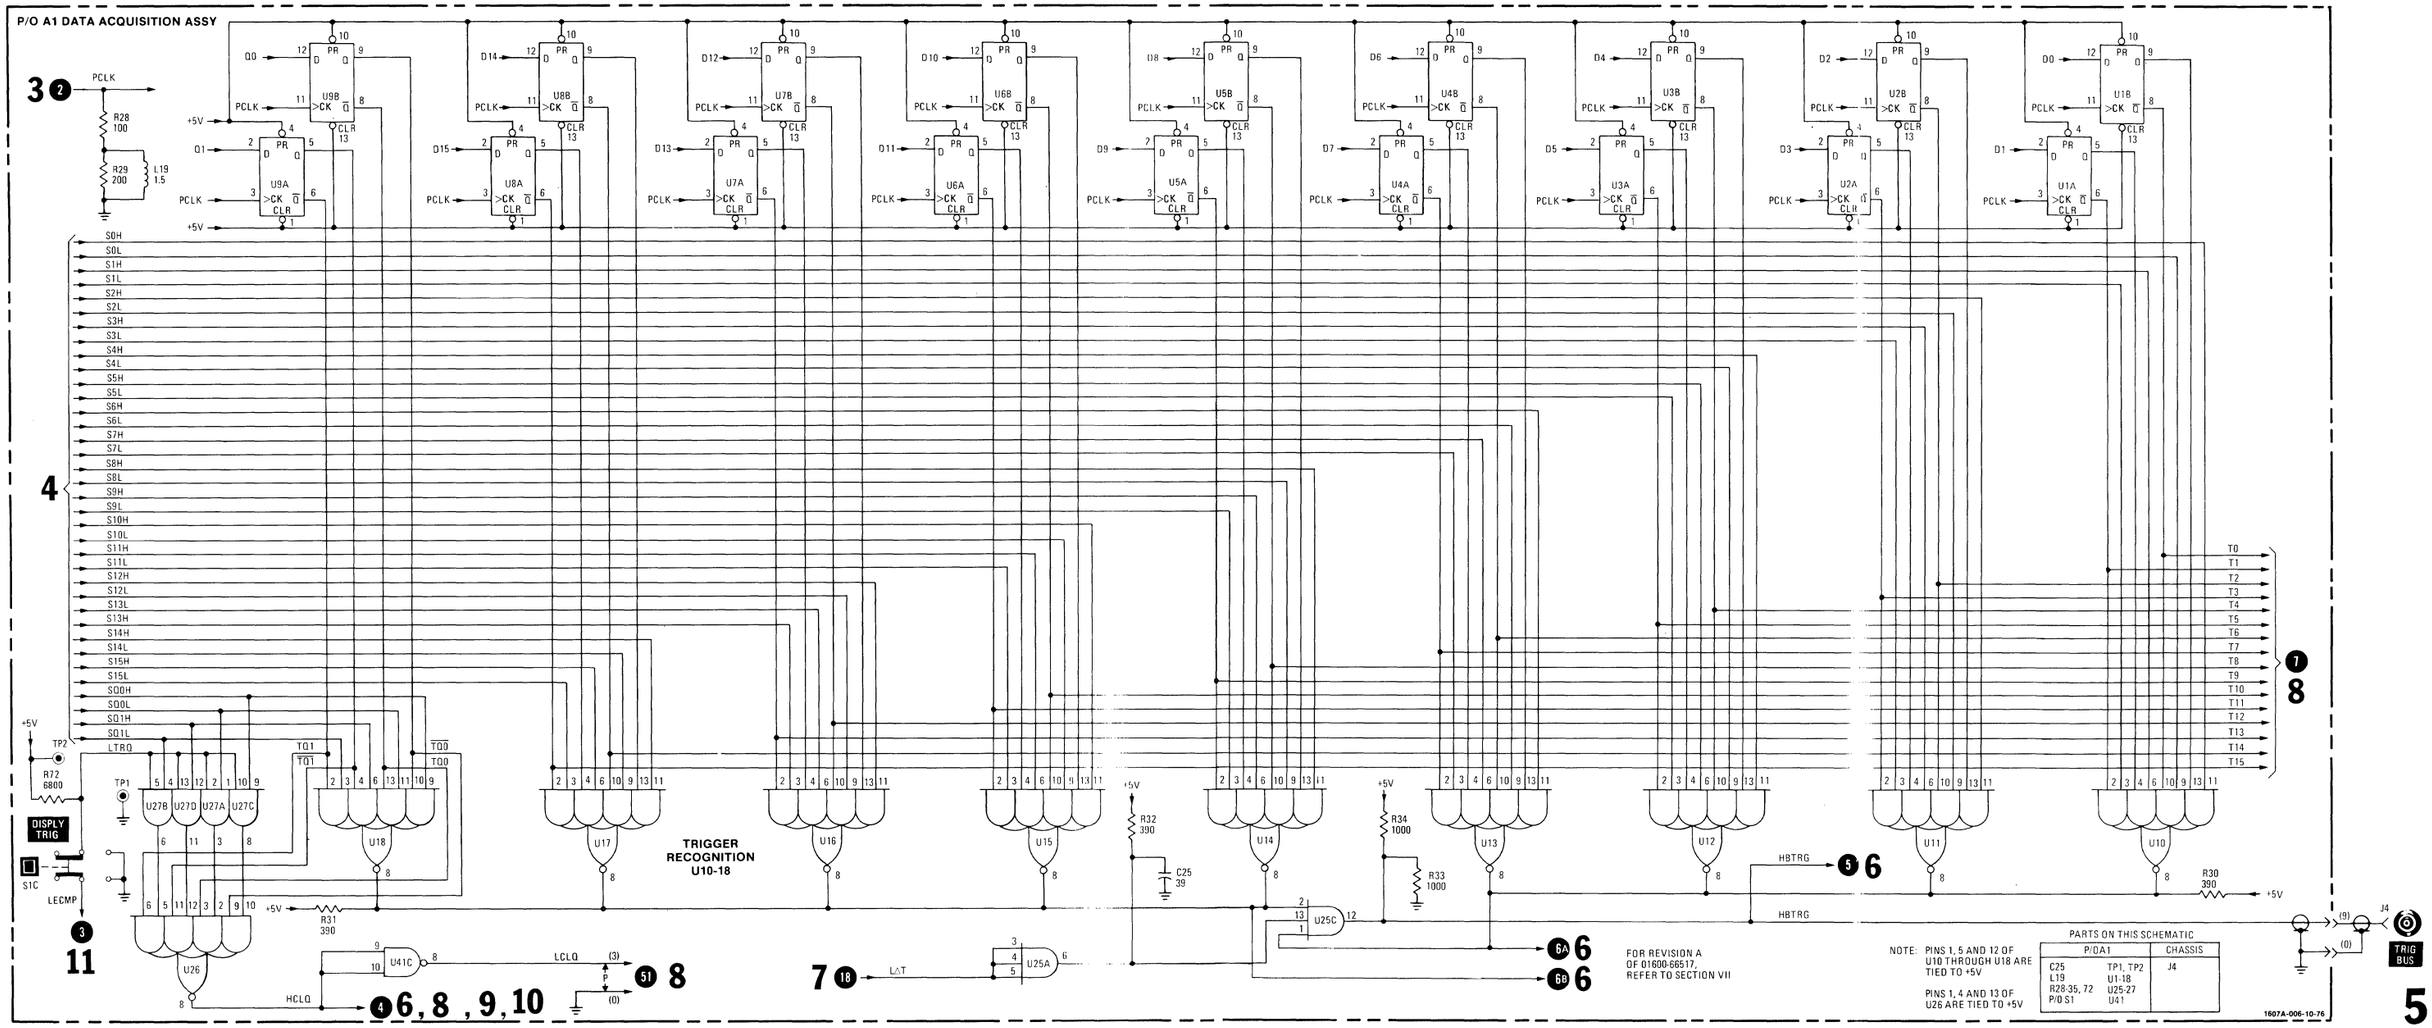

Figure 8-9.
Schematic 5, Tempory Storage and Pattern Recognition, P/O Assembly A1 (Sheet 2 of 2)

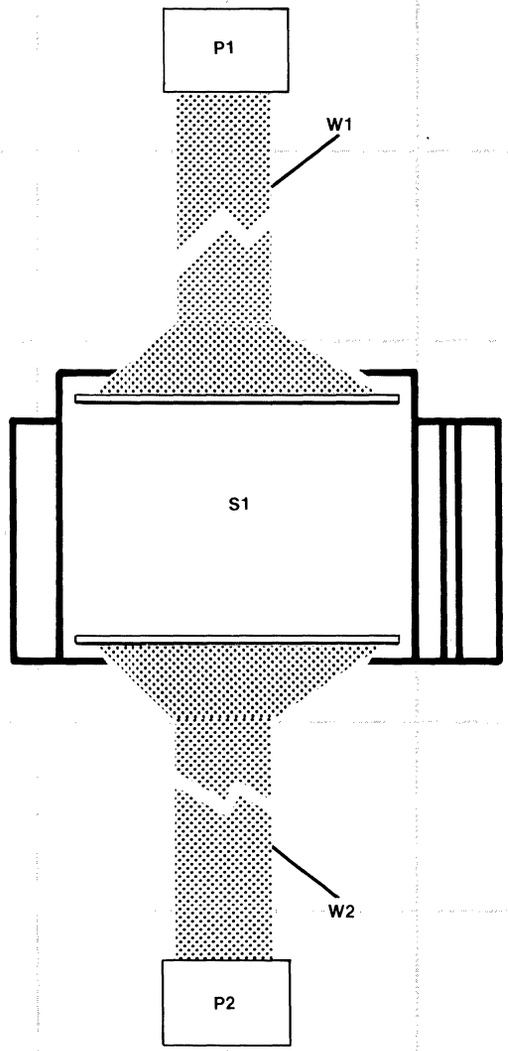

A7

1607A-025

NOTE

See figure 8-7 (Sheet 1 of 2) for Assembly A1 Component Identification.

DIGITAL DELAY TIMING DIAGRAM
SCHEMATIC 6

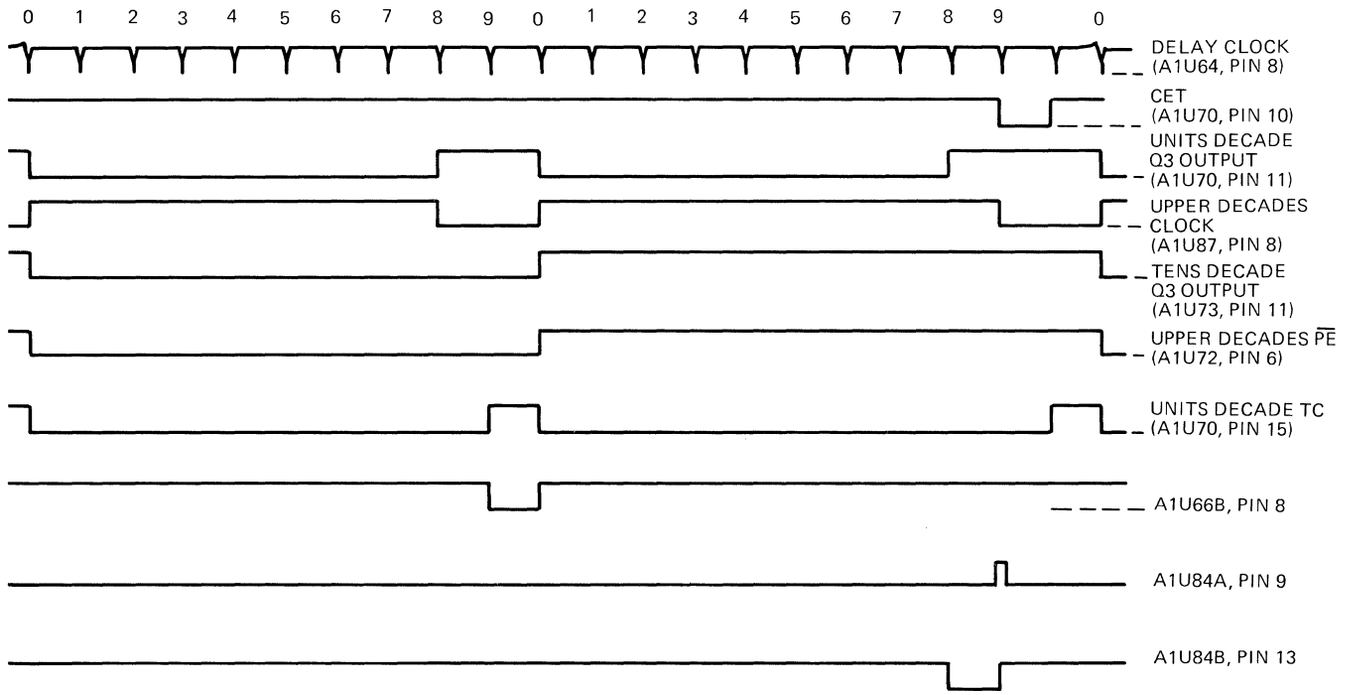
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9 0
DELAY CLOCK (A1U64, PIN 8)
CET (A1U70, PIN 10)
UNITS DECADE Q3 OUTPUT (A1U70, PIN 11)
UPPER DECADES CLOCK (A1U87, PIN 8)
TENS DECADE Q3 OUTPUT (A1U73, PIN 11)
UPPER DECADES PE (A1U72, PIN 6)
UNITS DECADE TC (A1U70, PIN 15)
A1U66B, PIN 8
A1U84A, PIN 9
A1U84B, PIN 13

1. Connect test equipment as shown for Operational Check Test Setup in Section V.

2. Set Model 1607A controls as follows:

CLOCK	⌐
THLD	TTL
QUALIFIER Q1, Q0	OFF
SAMPLE MODE	REPET
START DSPL	ON
TRIGGER MODE	
NORM/ARM	NORM
LOCAL/BUS	LOCAL
WORD	ON
TRIGGER WORD	All Switches HI
DELAY ON/OFF	ON
DELAY Thumbwheels	00020

3. Apply waveforms shown below to clock and data inputs.

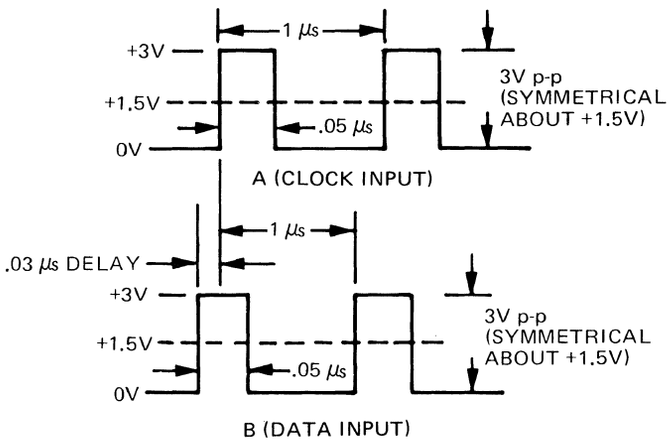

NOTE

1. Unused logic not shown for A1U64, U65, U77, U81, and U87.

U67B/U84A and B* TRUTH TABLE

J	$\overline{K}$	Q	$\overline{Q}$
L	H	NO	CHANGE
L	L	L	H
H	L	H	L

* U67A and U71A/B are wired D Flip-Flops

Figure 8-10. Schematic 6, Digital Delay and Trigger Generator, P/O Assembly A1 and Assembly A7 (Sheet 1 of 2)

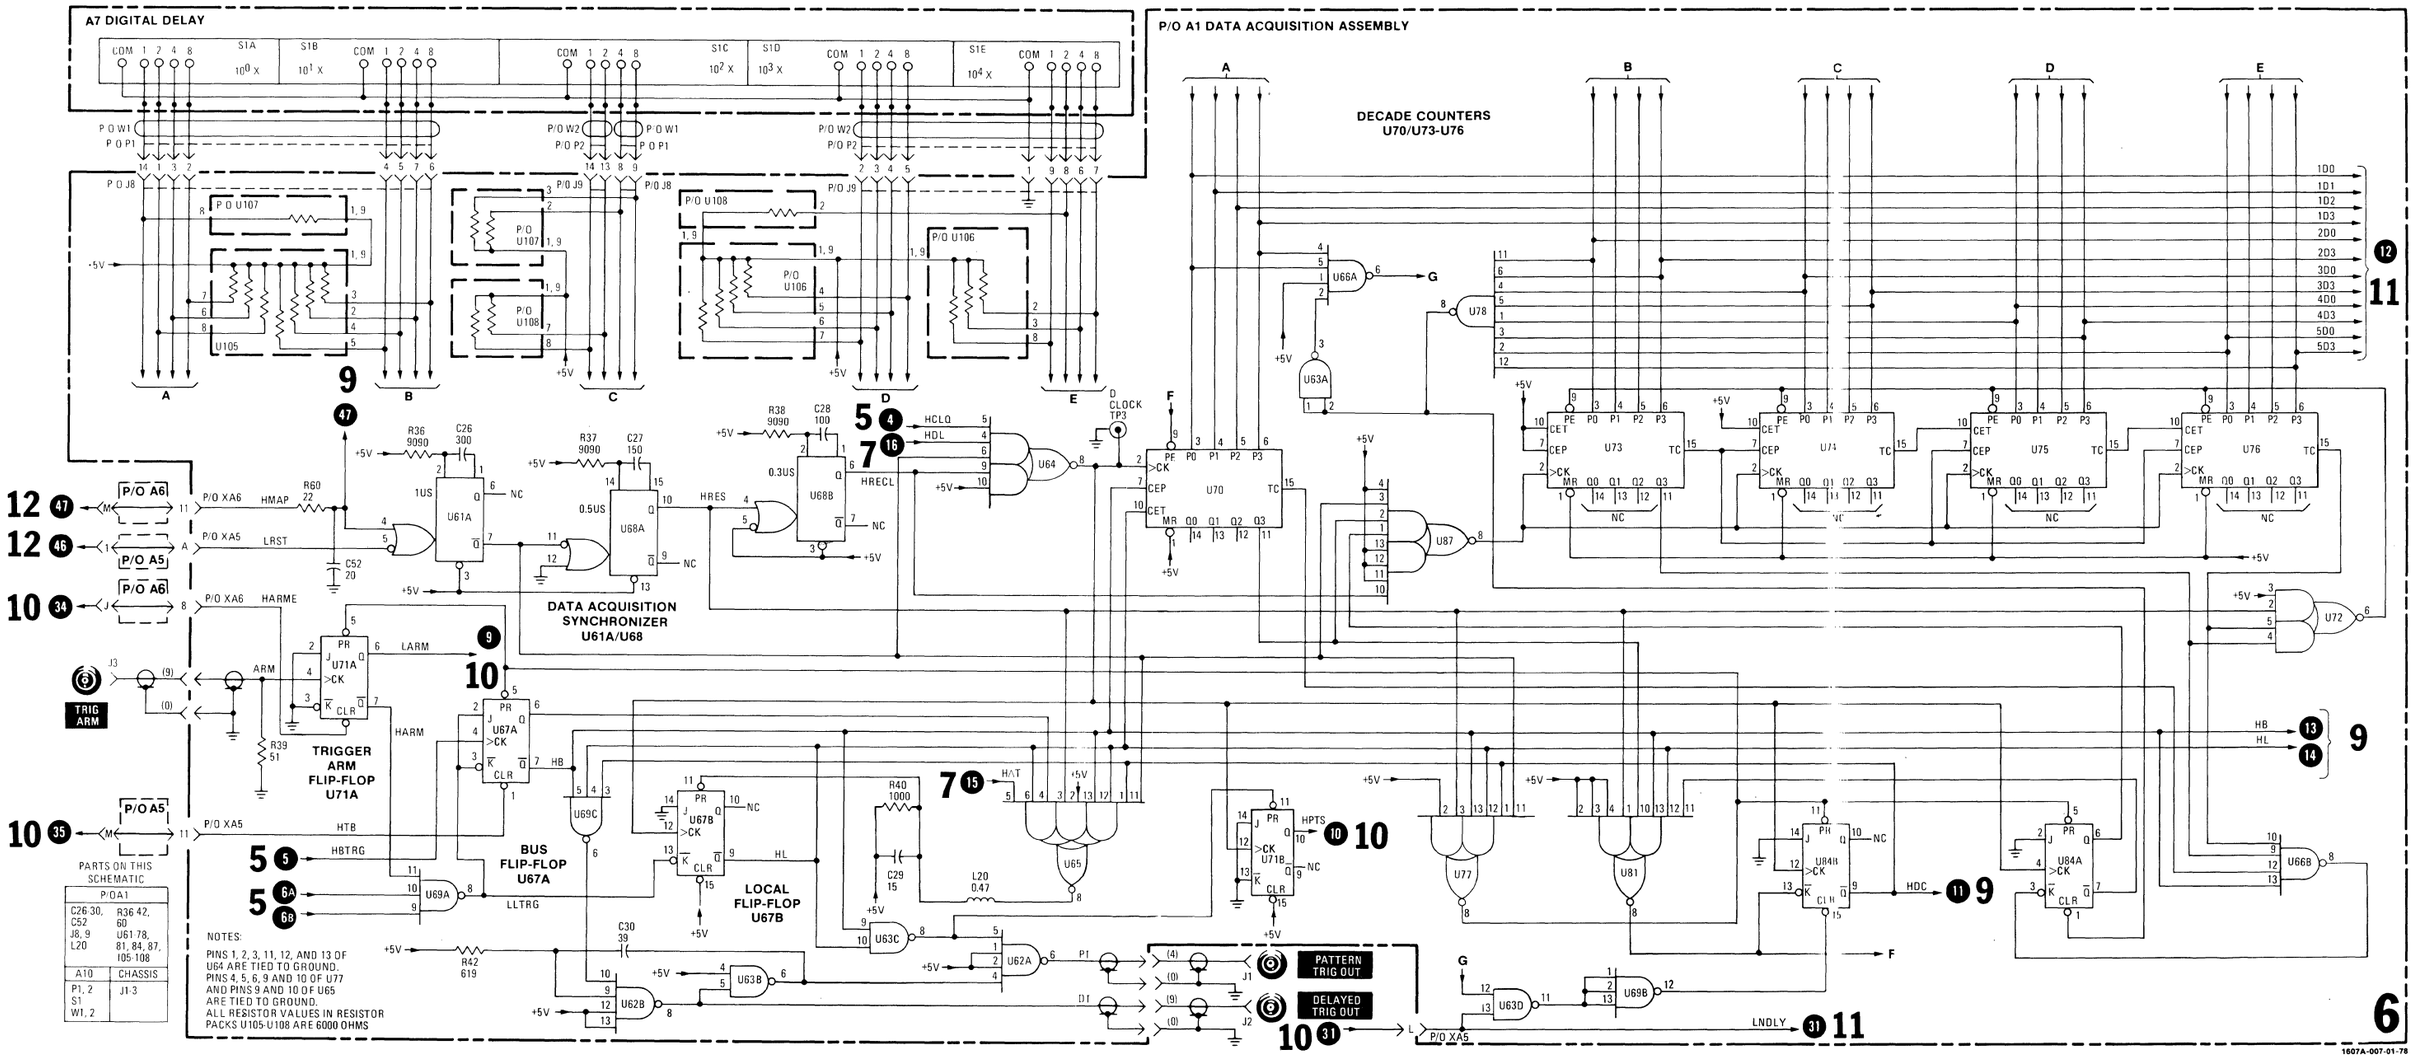

Figure 8-10.
Schematic 6, Digital Delay and Trigger Generator, P/O Assembly A1 and Assembly A7 (Sheet 2 of 2)
8-25

TIMING GENERATOR TIMING DIAGRAM
SCHEMATIC 7

1. Set Model 1607A controls as follows.

CLOCK	⌐¬
THLD	TTL
START DSPL	ON
WORD	ON
QUALIFIER	
DSPLY/TRIG	TRIG
Q1, Q0	OFF
TRIGGER WORD	Bits 0-15 OFF

2. Connect HP Model 8013B Pulse Generator OUTPUT (+) connector to CLOCK probe and apply waveform below.

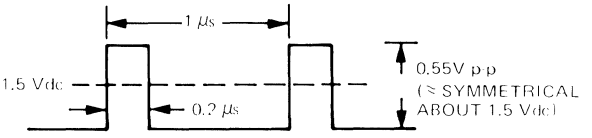

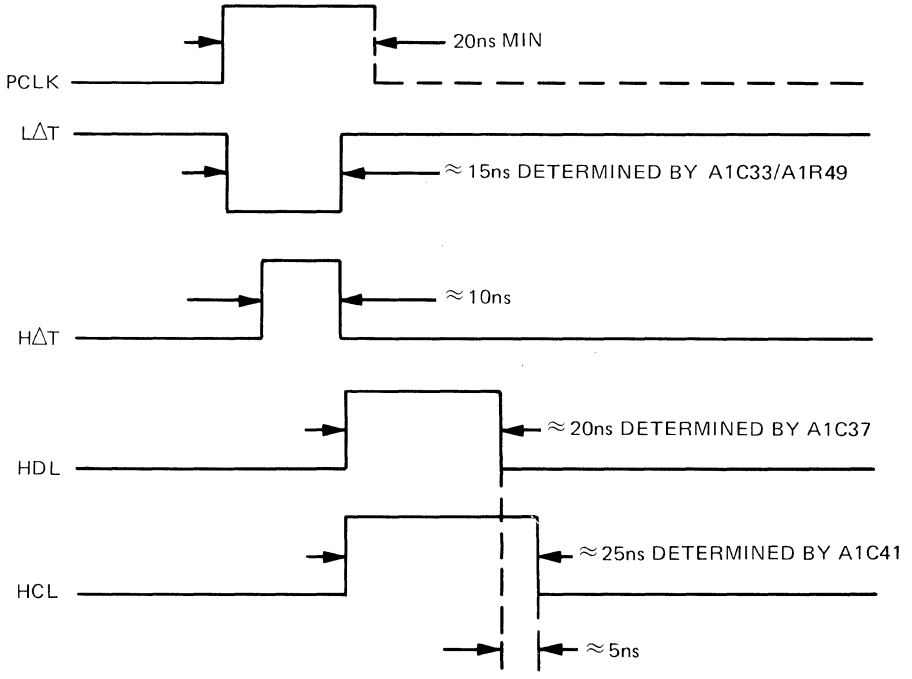

NOTE

See figure 8-7 (Sheet 1 of 2) for Assembly A1 Component Identification.

Figure 8-11. Schematic 7, Timing Generator, P/O Assembly A1 (Sheet 1 of 2)

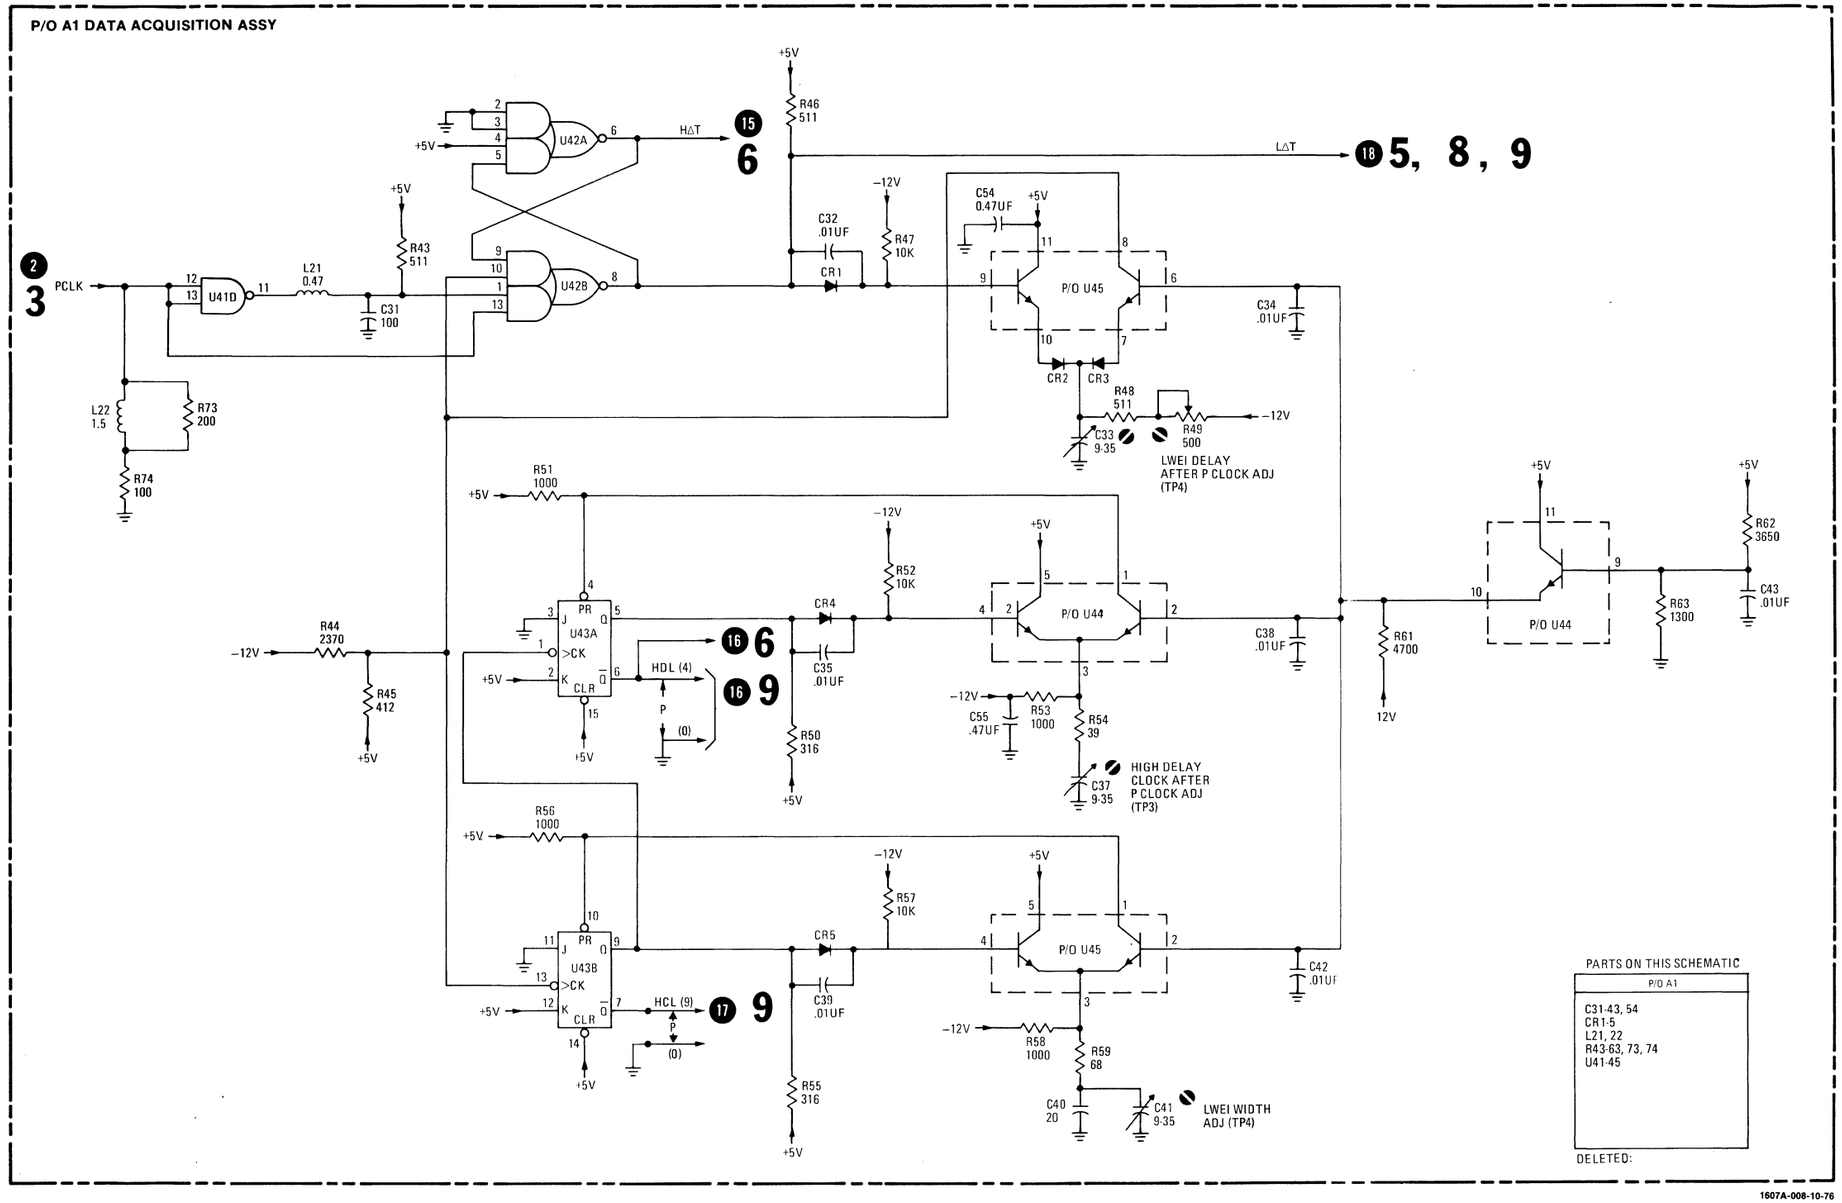

Figure 8-11.
Schematic 7, Timing Generator, P/O Assembly A1 (Sheet 2 of 2)

MEMORY WRITE TIMING DIAGRAM
SCHEMATIC 8

Set up Model 1607A as follows:

1. Connect Test Equipment as shown for Operational Check Test Setup in Section V.

2. Set Model 1607A controls as follows.

CLOCK	⌐¬
THLD	TTL
QUALIFIER	
Q0/Q1	HI
DSPLY/TRIG	TRIG
SAMPLE MODE	REPET
TRIGGER MODE	
START DSPL	ON
NORM/ARM	NORM
LOCAL/BUS	LOCAL
WORD	ON
TRIGGER WORD	All Switches HI

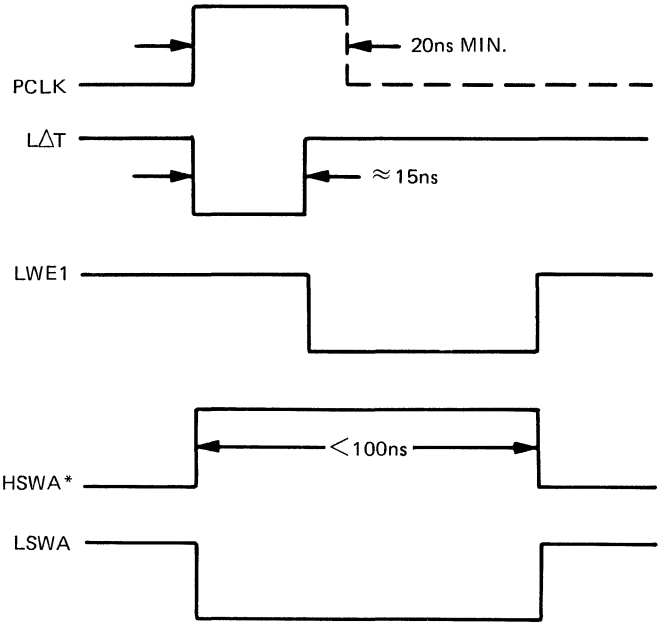

NOTE

1. Unused logic not shown for A1U54-A1U57.

CAUTION

A1U28 through A1U34, and A1U39 are CMOS devices which are easily damaged if contacted by static voltages.

NOTE

See figure 8-7 (Sheet 1 of 2) for Assembly A1 Component Identification.

Figure 8-12. Schematic 8, Memory/Multiplier, P/O Assembly A1 (Sheet 1 of 2)

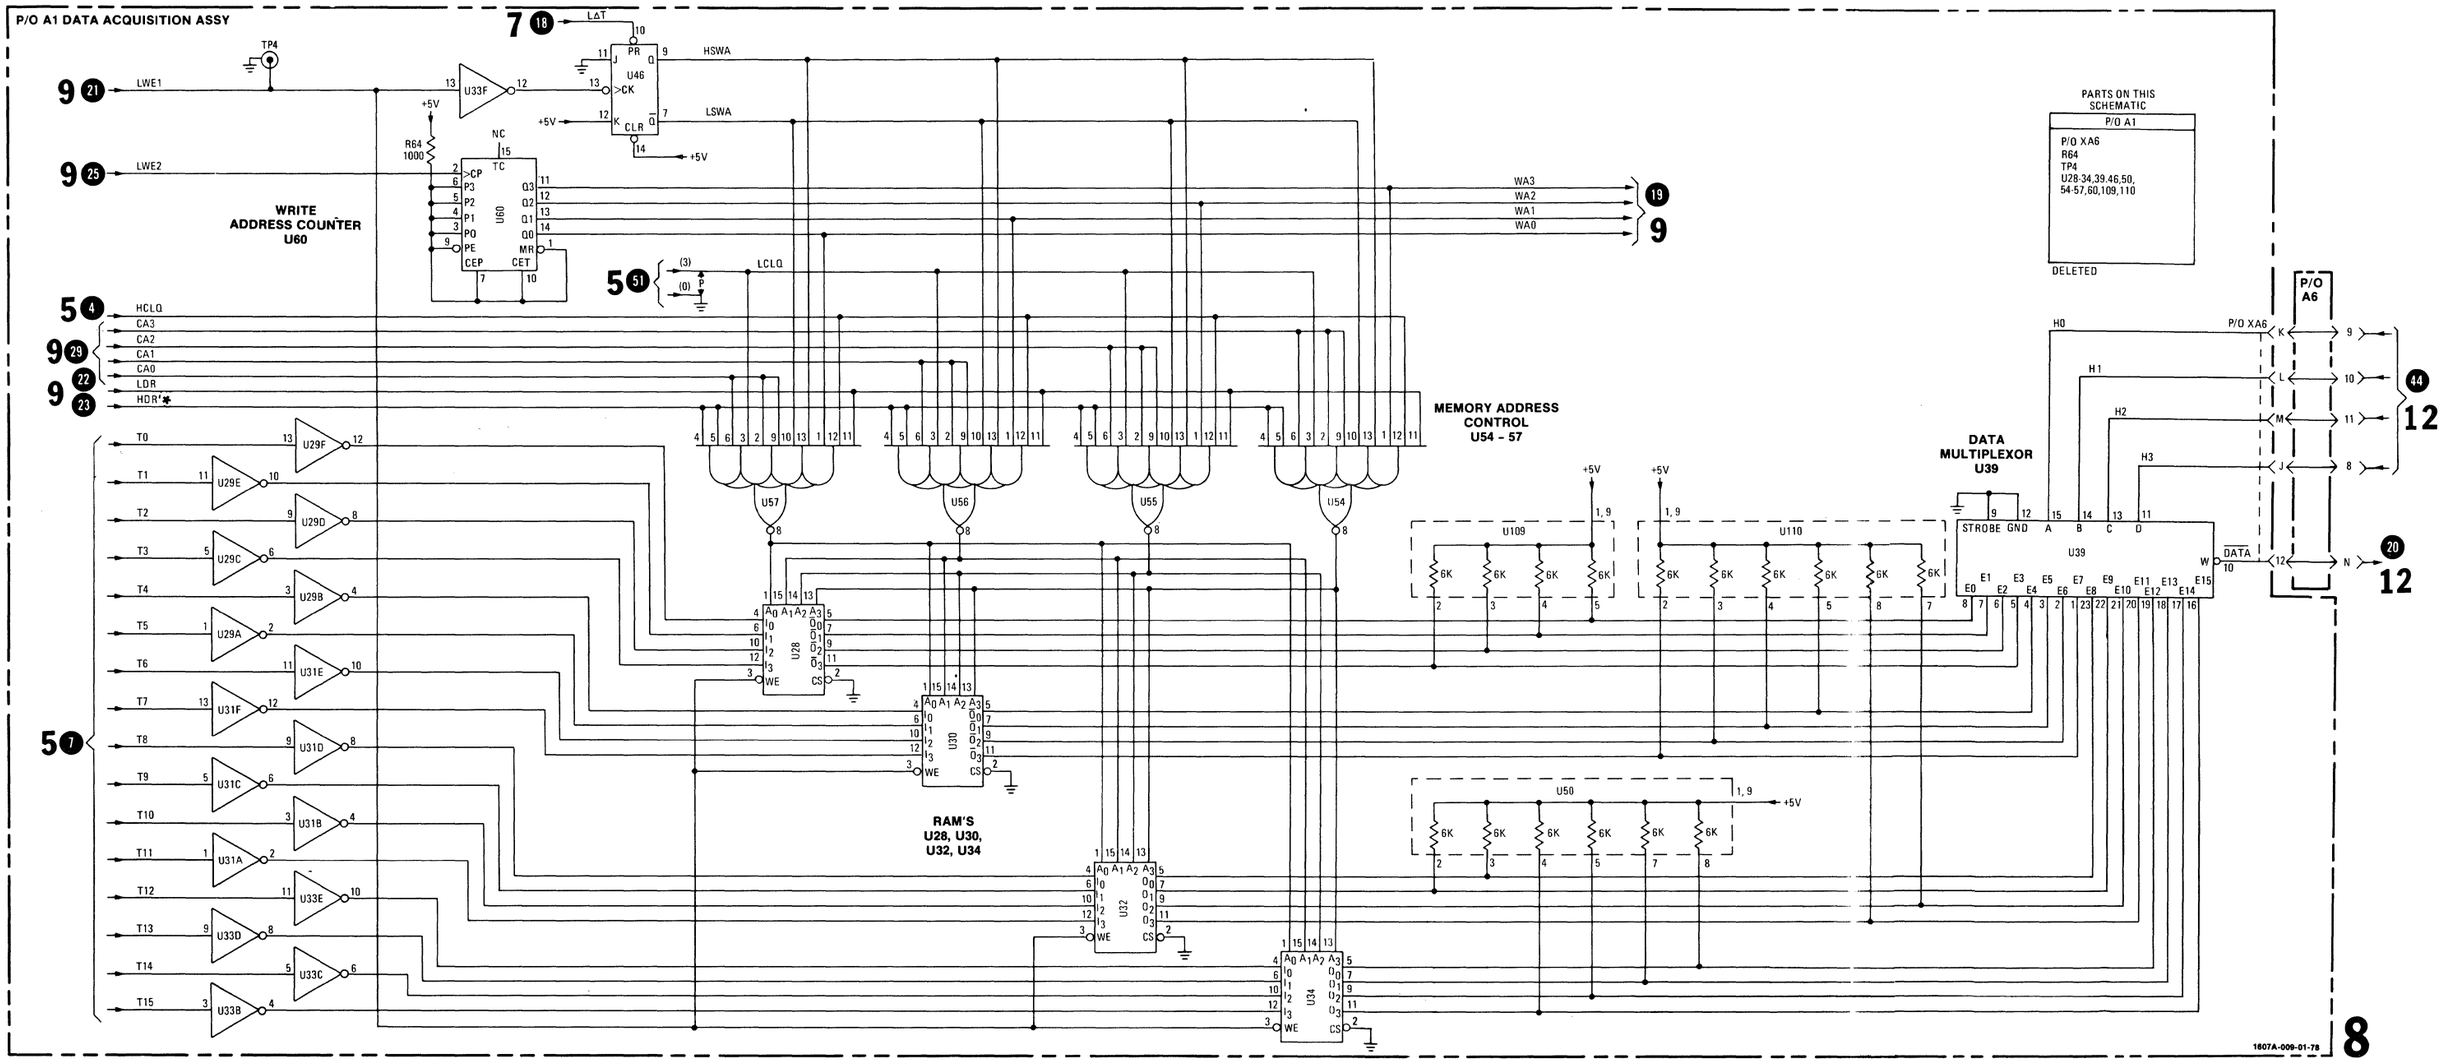

Figure 8-12.
Schematic 8, Memory/Multiplier, P/O Assembly A1 (Sheet 2 of 2)

NOTE

See figure 8-7 (Sheet 1 of 2) for Assembly A1 Component Identification.

Figure 8-13. Schematic 9, Memory Index and Control, P/O Assembly A1 (Sheet 1 of 2)

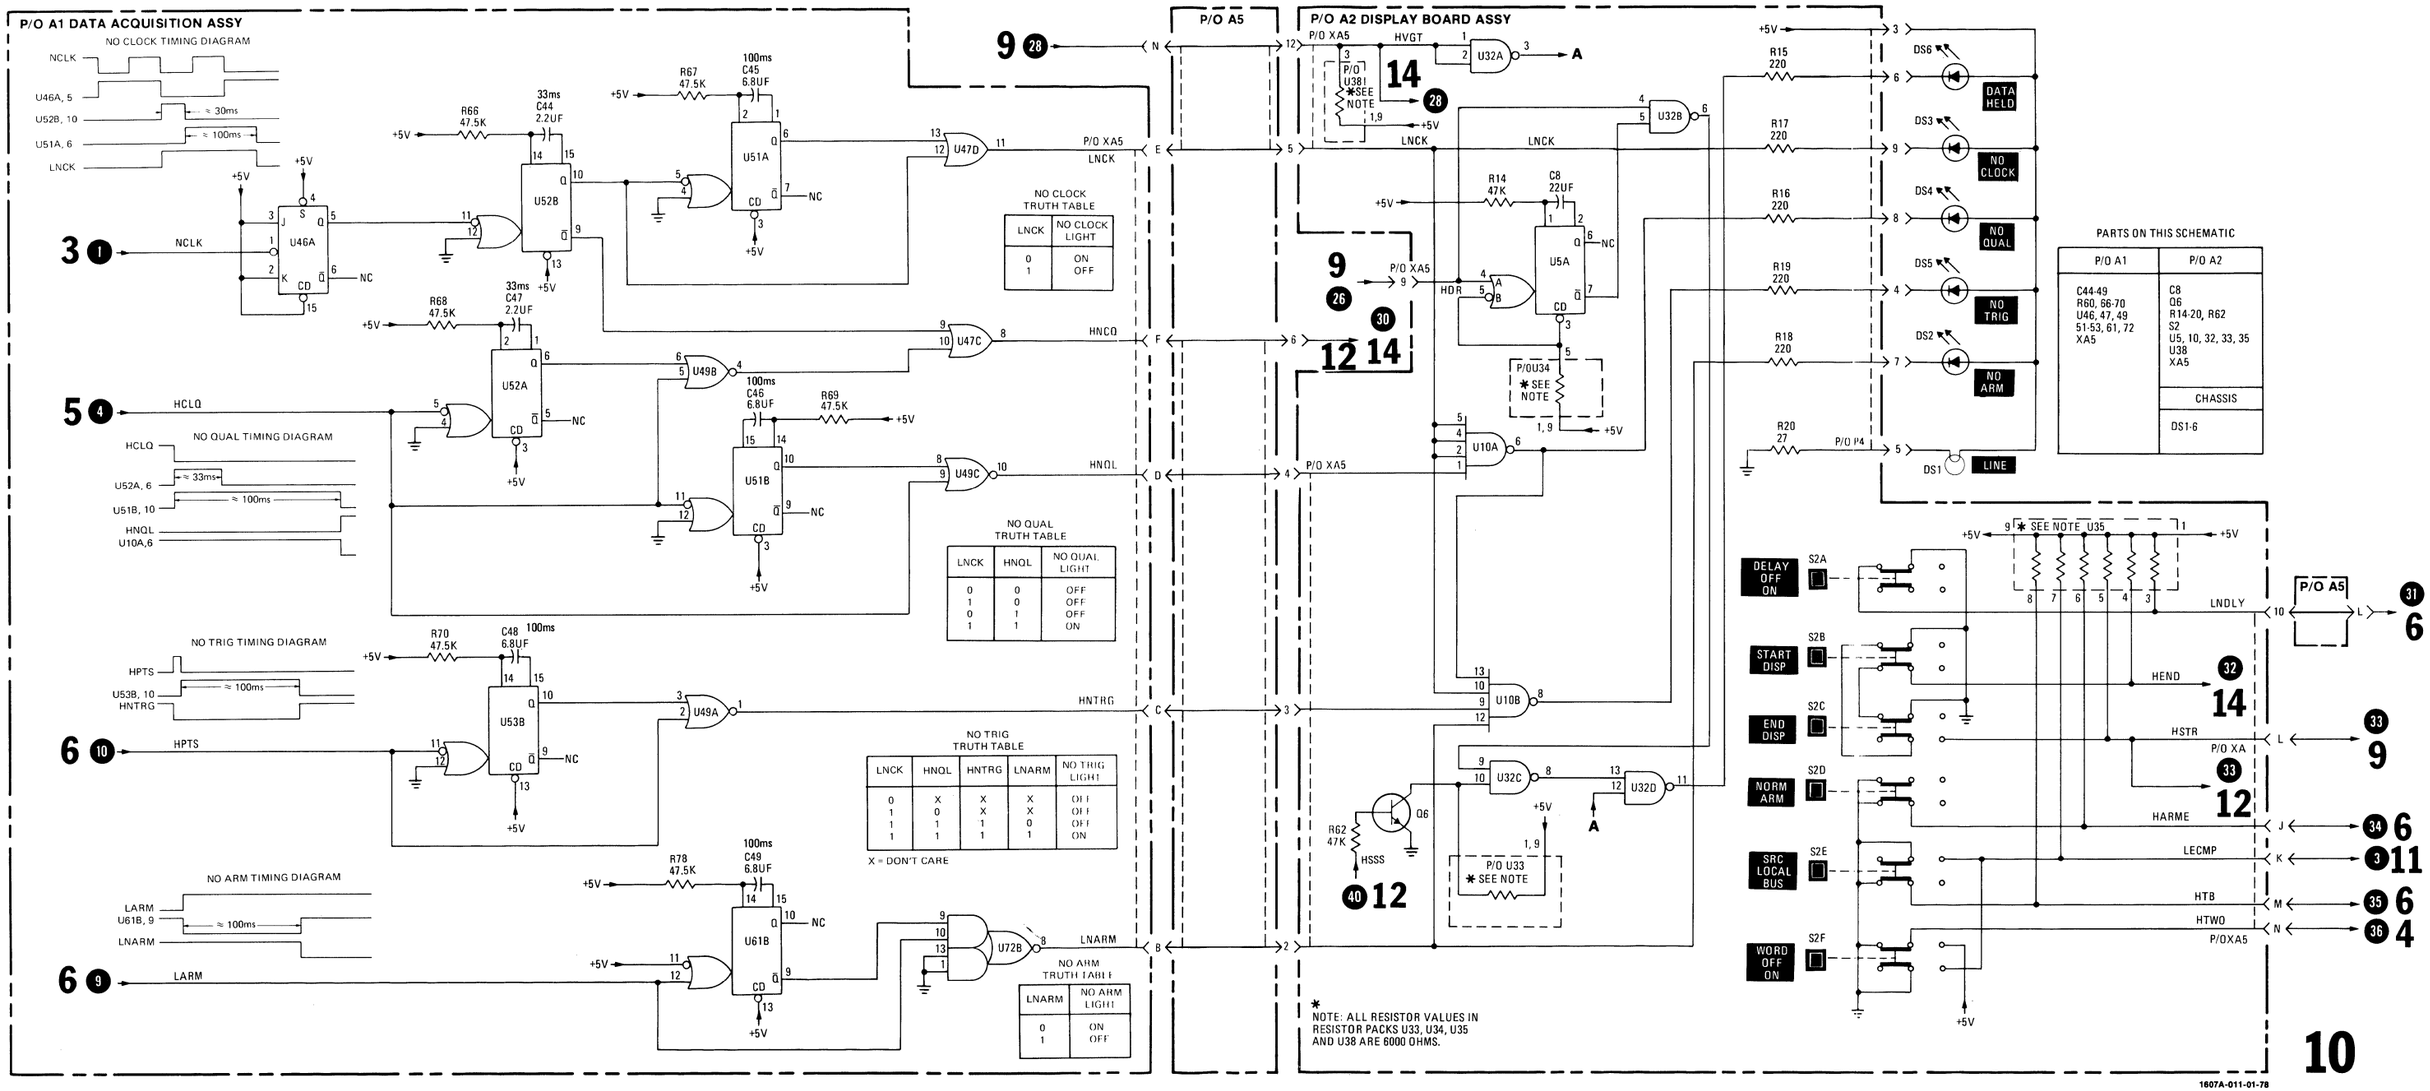

Figure 8-14.
Schematic 10, Indicator Light Control and Trigger Mode Switches, P/O Assemblies A1 and A2 (Sheet 2 of 2)

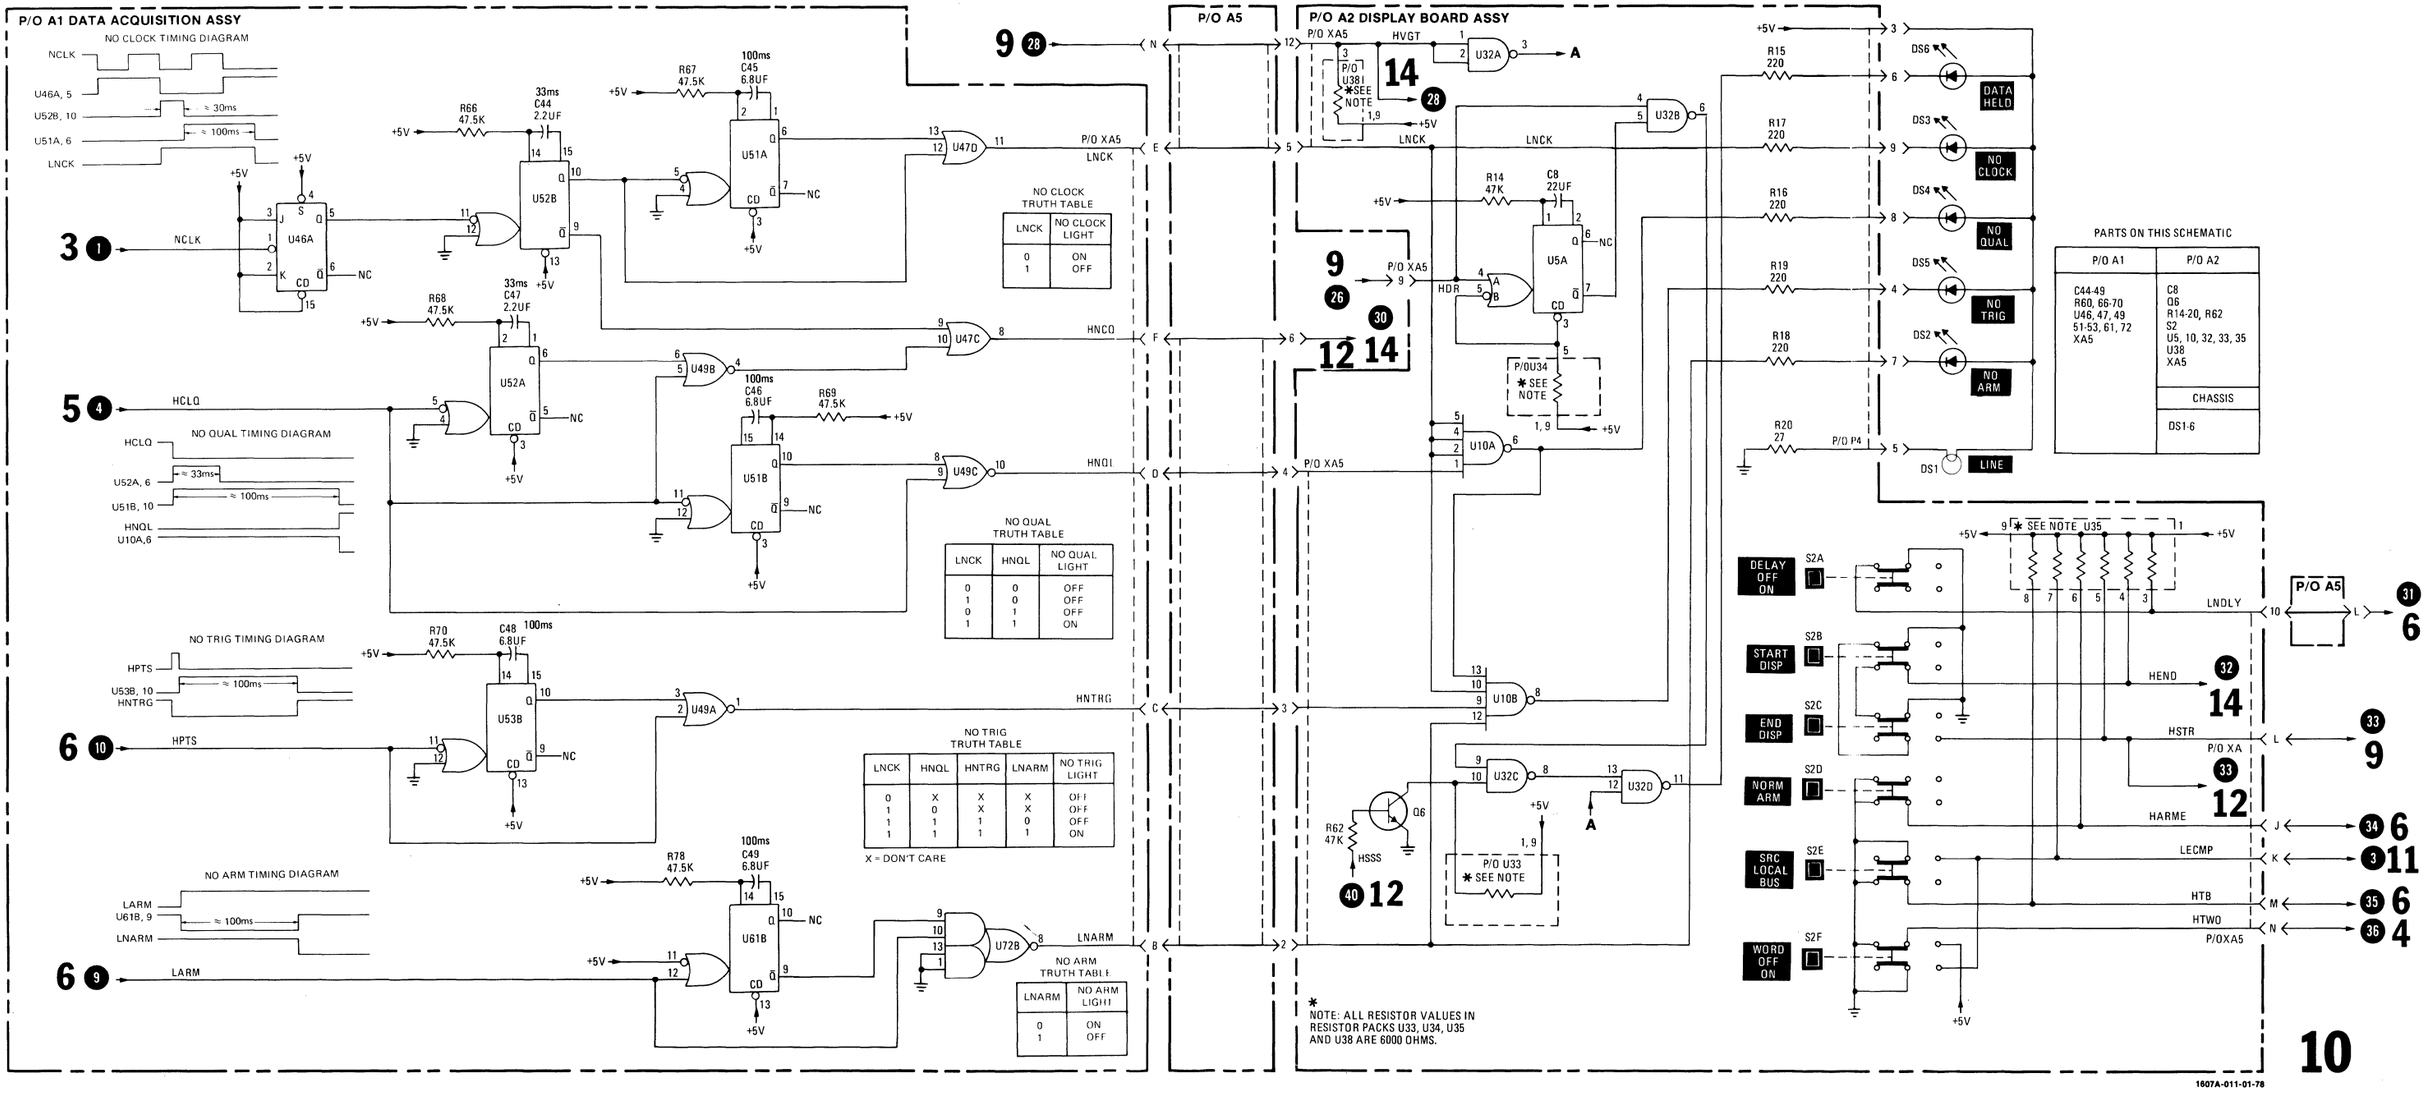

Figure 8-14.
Schematic 10, Indicator Light Control and Trigger Mode Switches, P/O Assemblies A1 and A2 (Sheet 2 of 2)

TRIGGER WORD INTENSIFY DECODING

DELAY SETTINGS	TEN'S DECADE 2D3	2D2	2D1	2D0	UNIT'S DECADE 1D3	1D2	1D1	1D0	CARRY (A1U79, PIN 14)	MULTIPLEXER U83 OUTPUT CODE Za	Zc	Zd	Zb
0	1	0	0	1	1	0	0	1	1	1	1	1	1
1	1	0	0	1	1	0	0	0	1	1	1	1	0
2	1	0	0	1	0	1	1	1	1	1	1	0	1
3	1	0	0	1	0	1	1	0	1	1	1	0	0
4	1	0	0	1	0	1	0	1	1	1	0	1	1
5	1	0	0	1	0	1	0	0	1	1	0	1	0
6	1	0	0	1	0	0	1	1	1	1	0	0	1
7	1	0	0	1	0	0	1	0	1	1	0	0	0
8	1	0	0	1	0	0	0	1	1	0	1	1	1
9	1	0	0	1	0	0	0	0	1	0	1	1	0
10	1	0	0	0	1	0	0	1	1	0	1	0	1
11	1	0	0	0	1	0	0	0	1	0	1	0	0
12	1	0	0	0	0	1	1	1	1	0	0	1	1
13	1	0	0	0	0	1	1	0	1	0	0	1	0
14	1	0	0	0	0	1	0	1	1	0	0	0	1
15	1	0	0	0	0	1	0	0	1	0	0	0	0
16	1	0	0	0	0	0	1	1	0	X	X	X	X
17	1	0	0	0	0	0	1	0	0				
	1	0	0	0	0	0	0	1	0				
	1	0	0	0	0	0	0	0	0				
	0	X	X	X									
X	X	X	X	X	X	X	X	X	0	X	X	X	X

X = DON'T CARE

SCHEMATIC 11 TROUBLESHOOTING

1. Set Model 1607A controls as follows:

SAMPLE MODE	SINGLE
DISPLAY MODE	START DSPL
WORD	ON
DELAY	OFF
COLUMN BLANKING	FULL CCW
LOGIC	POS
BYTE	4 BIT

2. Monitor A1U79, A1U83 and A1U86, using Model 10528A Logic Clip. The following indications will be observed when the circuit is functioning properly.

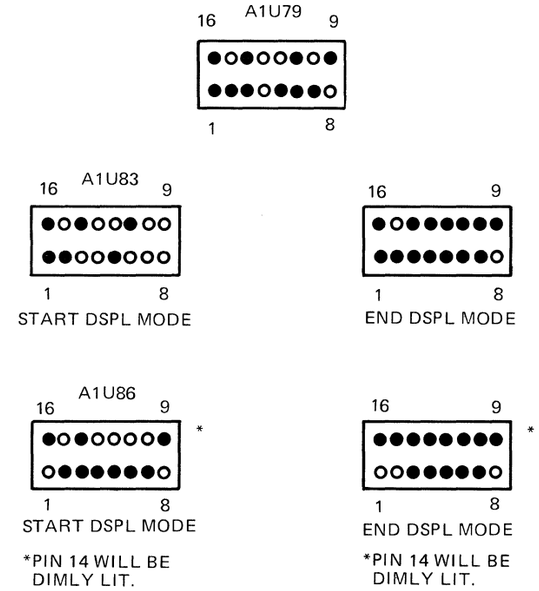

LOGIC CLIP INDICATIONS

NOTE

See figure 8-7 (Sheet 1 of 2) for Assembly A1 Component Identification.

Figure 8-15. Schematic 11, Word Intensity, P/O Assembly A1 (Sheet 1 of 2)

TRIGGER WORD INTENSIFY DECODING

DELAY SETTINGS	TEN'S DECADE 2D3	2D2	2D1	2D0	UNIT'S DECADE 1D3	1D2	1D1	1D0	CARRY (A1U79, PIN 14)	MULTIPLEXER U83 OUTPUT CODE Za	Zc	Zd	Zb
0	1	0	0	1	1	0	0	1	1	1	1	1	1
1	1	0	0	1	1	0	0	0	1	1	1	1	0
2	1	0	0	1	0	1	1	1	1	1	1	0	1
3	1	0	0	1	0	1	1	0	1	1	1	0	0
4	1	0	0	1	0	1	0	1	1	1	0	1	1
5	1	0	0	1	0	1	0	0	1	1	0	1	0
6	1	0	0	1	0	0	1	1	1	1	0	0	1
7	1	0	0	1	0	0	1	0	1	1	0	0	0
8	1	0	0	1	0	0	0	1	1	0	1	1	1
9	1	0	0	1	0	0	0	0	1	0	1	1	0
10	1	0	0	0	1	0	0	1	1	0	1	0	1
11	1	0	0	0	1	0	0	0	1	0	1	0	0
12	1	0	0	0	0	1	1	1	1	0	0	1	1
13	1	0	0	0	0	1	1	0	1	0	0	1	0
14	1	0	0	0	0	1	0	1	1	0	0	0	1
15	1	0	0	0	0	1	0	0	1	0	0	0	0
16	1	0	0	0	0	0	1	1	0	X	X	X	X
17	1	0	0	0	0	0	1	0	0				
	1	0	0	0	0	0	0	1	0				
	1	0	0	0	0	0	0	0	0				
	0	X	X	X									
X	X	X	X	X	X	X	X	X	0	X	X	X	X

X = DON'T CARE

SCHEMATIC 11 TROUBLESHOOTING

1. Set Model 1607A controls as follows:

SAMPLE MODE	SINGLE
DISPLAY MODE	START DSPL
WORD	ON
DELAY	OFF
COLUMN BLANKING	FULL CCW
LOGIC	POS
BYTE	4 BIT

2. Monitor A1U79, A1U83 and A1U86, using Model 10528A Logic Clip. The following indications will be observed when the circuit is functioning properly.

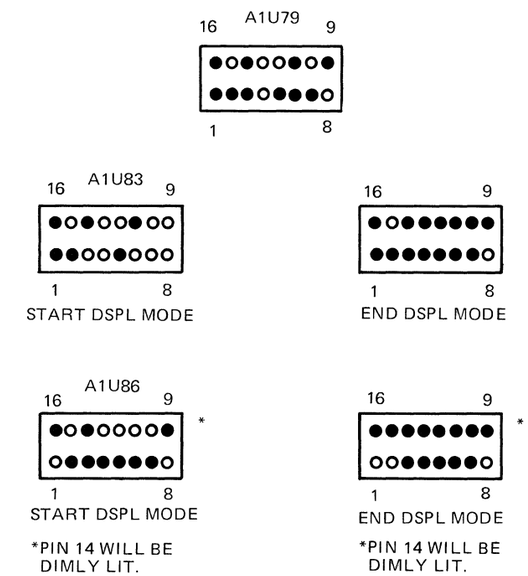

NOTE

See figure 8-7 (Sheet 1 of 2) for Assembly A1 Component Identification.

Figure 8-15. Schematic 11, Word Intensity, P/O Assembly A1 (Sheet 1 of 2)

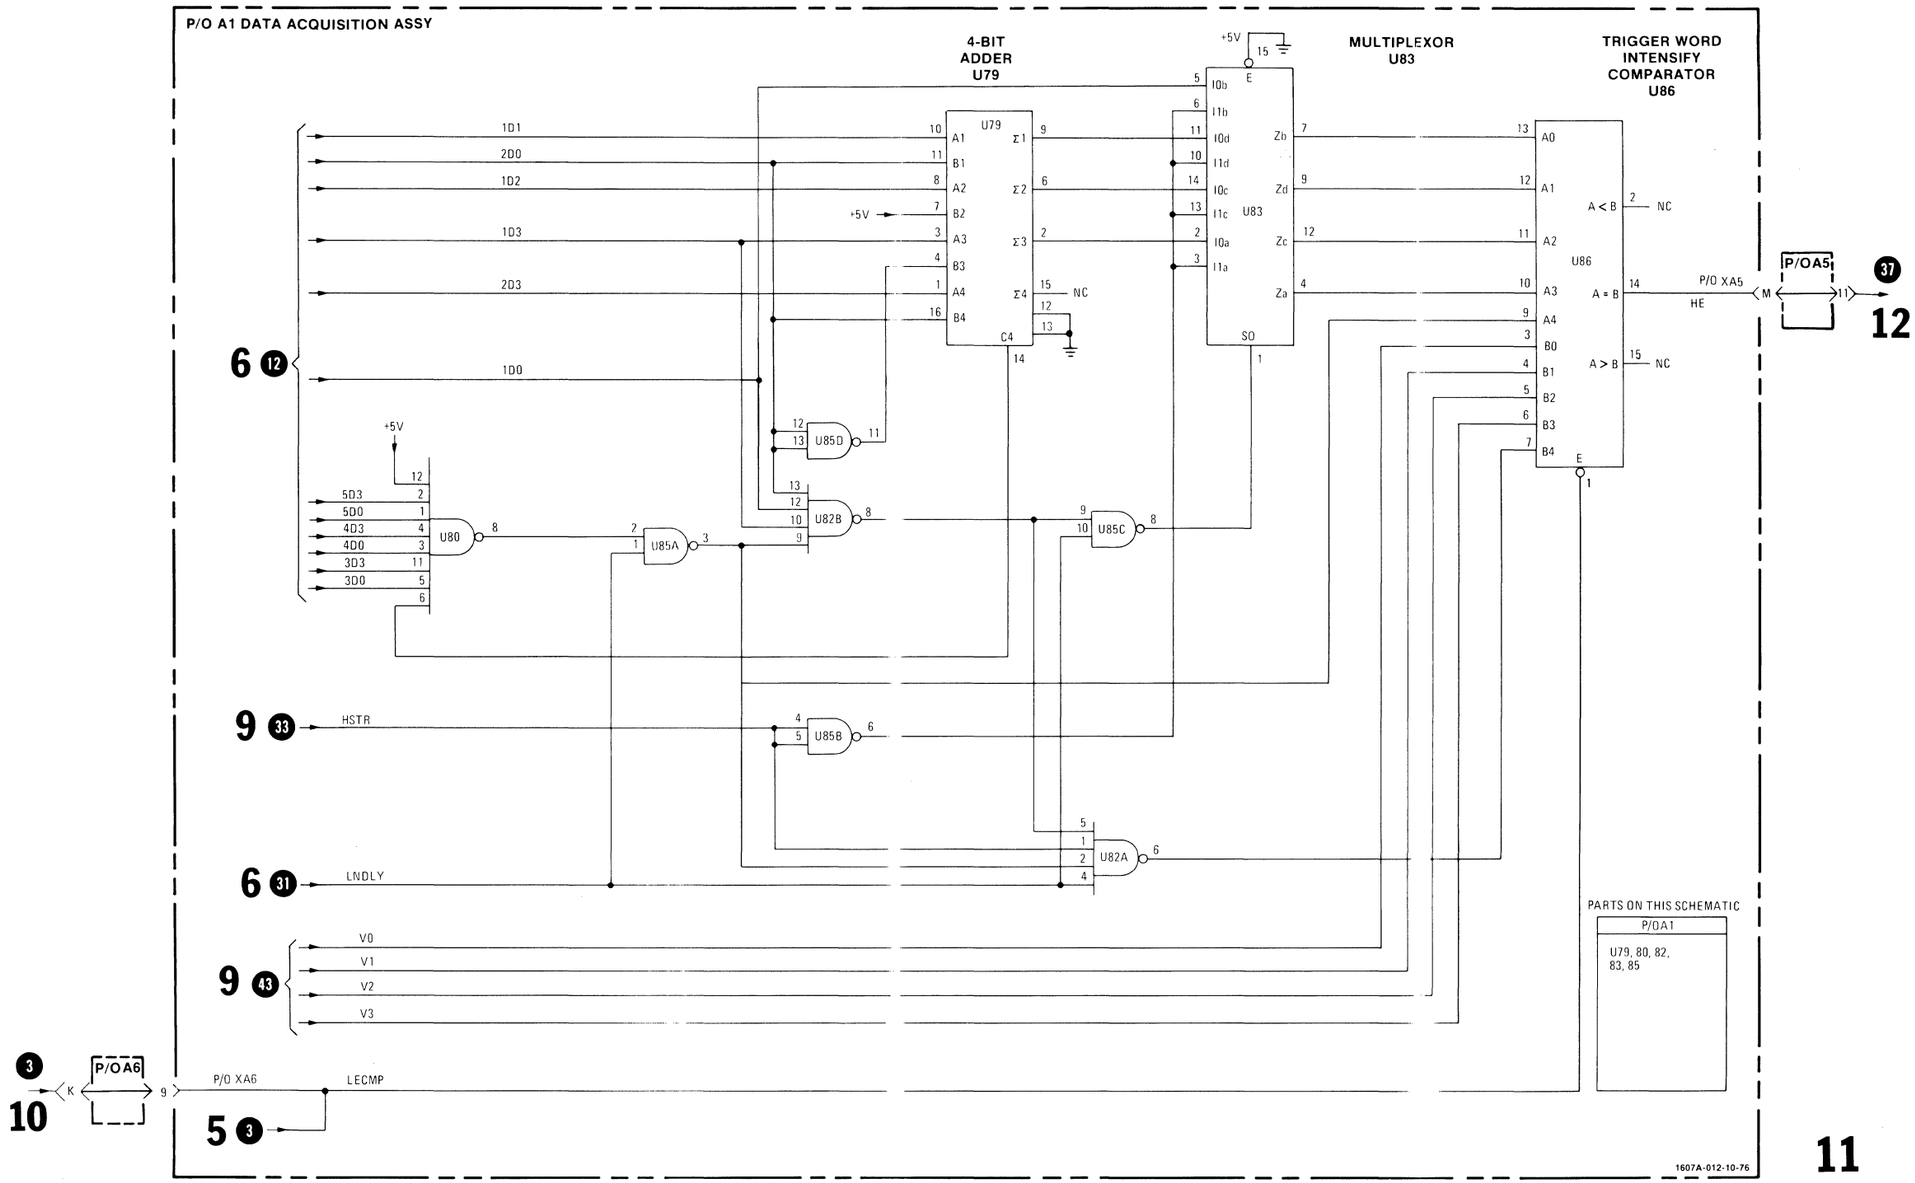

Figure 8-15.
Schematic 11, Word Intensity, P/O Assembly A1 (Sheet 2 of 2)

LRST LOGIC EQUATIONS

LOCAL MODE

$$LRST = \overline{(HRPR \bullet HRPRB) + HMR}$$

I/O BUS MODE

$$LRST = \overline{(HRPRB \bullet HXRPR \bullet H1600) + (H1600 \bullet HMRXT)^{*} + HMR}$$

*(H1600•HMRXT) is a valid term only in instruments which have modified to accept manual resets from a Model 1600A.

NOTE

See figure 8-14 (Sheet 1 of 2) for Assembly A2 Component Identification.

Figure 8-16. Schematic 12, Display Control and Reset, P/O Assembly A2 (Sheet 1 of 2)

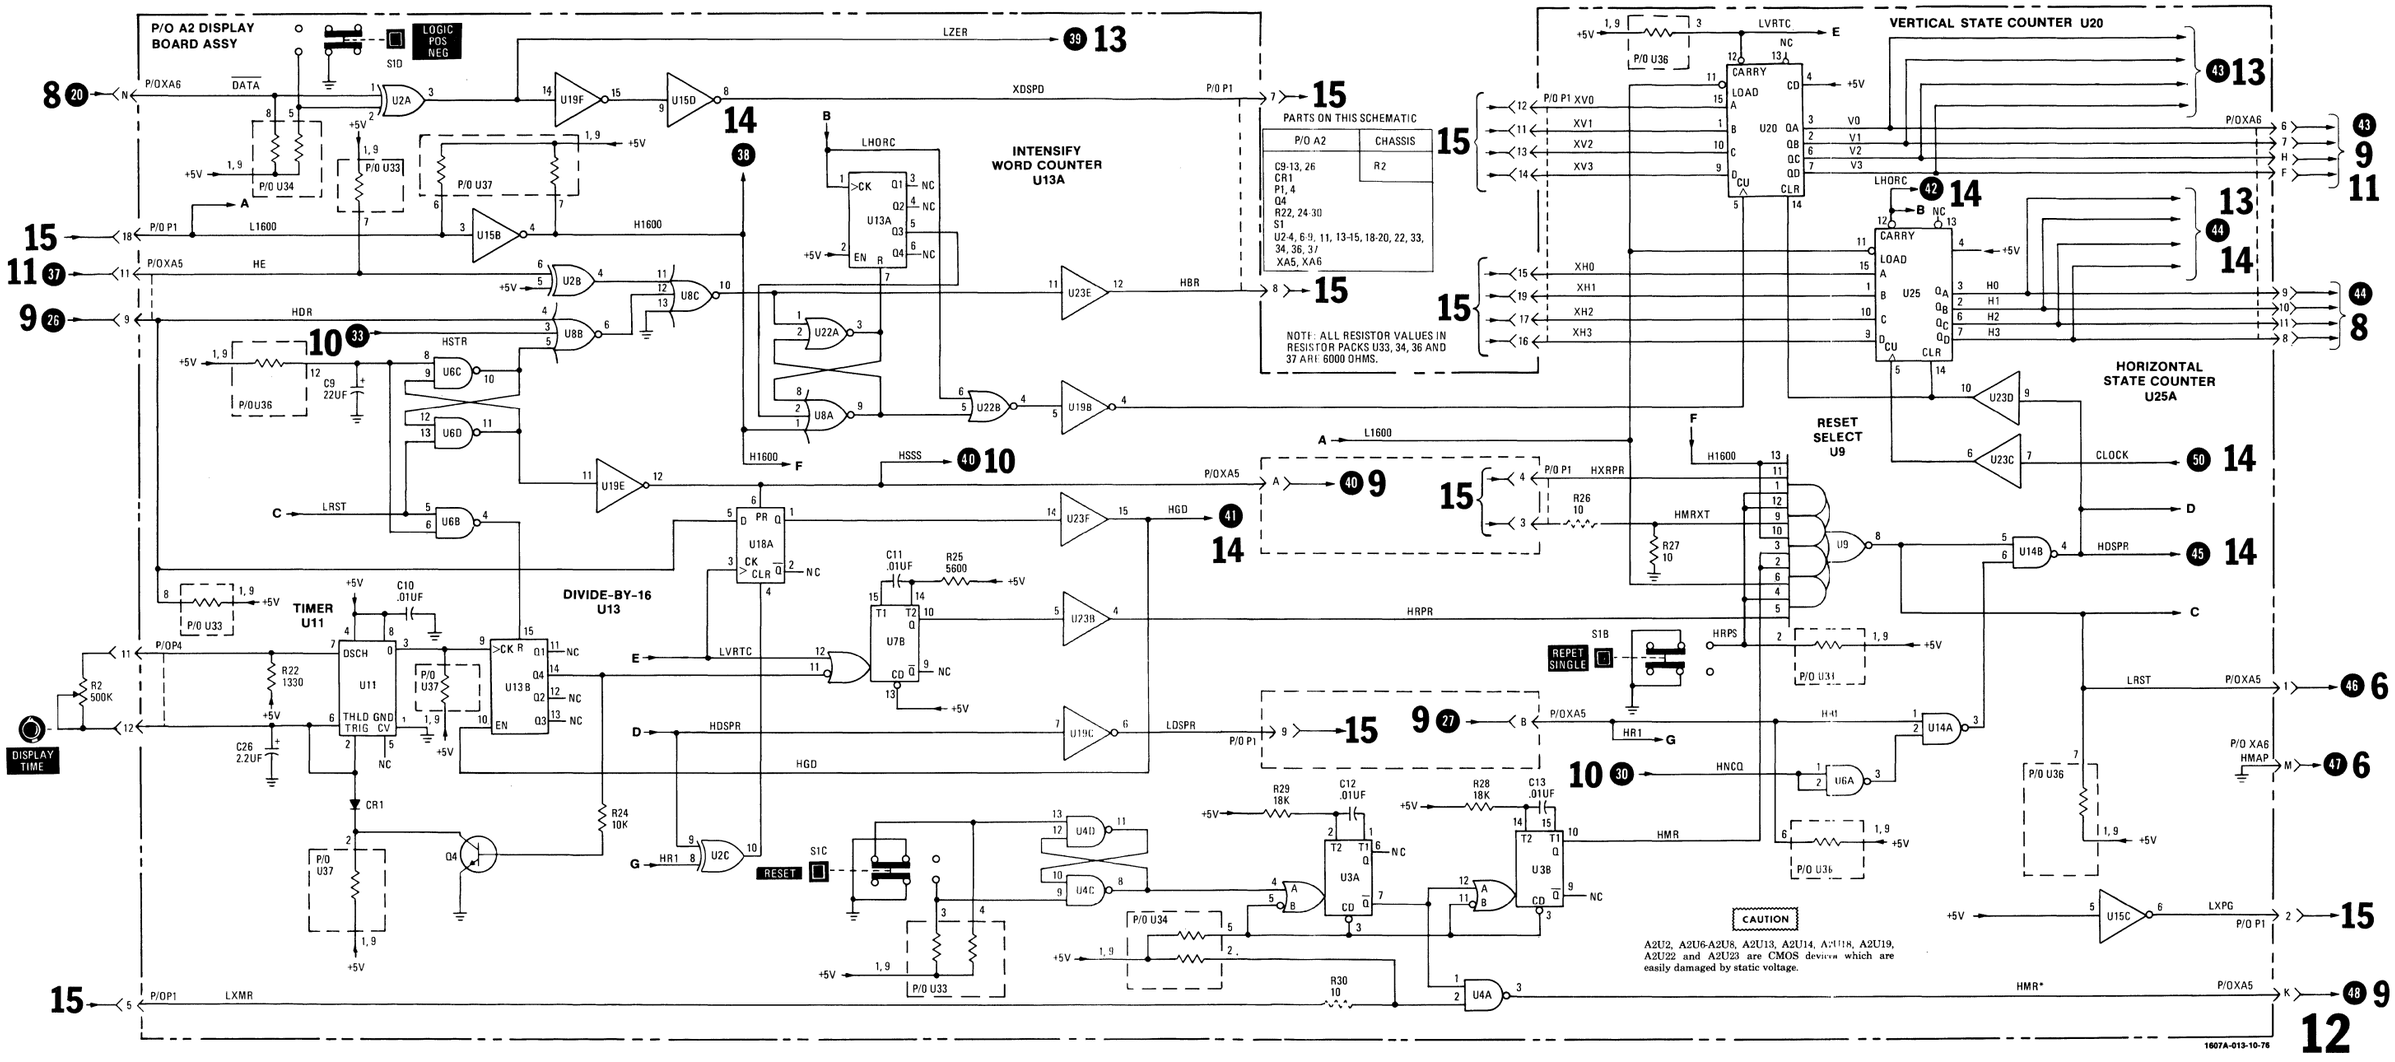

Figure 8-16.
Schematic 12, Display Control and Reset, P/O Assembly A2 (Sheet 2 of 2)

HORIZONTAL AND VERTICAL CODE CONVERTER TRUTH TABLES SCHEMATIC 13

VERTICAL CODE CONVERTER A2U21 TRUTH TABLE

INPUT		OUTPUT			
V1	V0	ZD	ZC	ZB	ZA
0	0	0	0	0	0
0	1	1	1	0	0
1	0	1	1	1	0
1	1	1	0	1	0

HORIZONTAL CODE CONVERTER A2U26 TRUTH TABLE

INPUTS				OUTPUTS (4-BIT BYTES)				OUTPUTS (3-BIT BYTES)			
A	B	C	D	Y4	Y3	Y2	Y1	Y4	Y3	Y2	Y1
0	0	0	0	0	1	1	1	0	1	1	0
0	0	0	1	1	0	0	0	0	1	1	1
0	0	1	0	1	0	0	1	1	0	0	0
0	0	1	1	1	0	1	0	1	0	1	0
0	1	0	0	1	1	0	0	1	0	1	1
0	1	0	1	1	1	0	1	1	1	0	0
0	1	1	0	1	1	1	0	1	1	1	0
0	1	1	1	1	1	1	1	1	1	1	1
1	0	0	0	0	0	0	1	0	0	0	0
1	0	0	1	0	0	1	0	0	0	1	0
1	0	1	0	0	0	1	1	0	0	1	1
1	0	1	1	0	1	0	0	0	1	0	0
1	1	0	0	0	1	1	0	0	1	1	0
1	1	0	1	0	1	1	1	0	1	1	1
1	1	1	0	1	0	0	0	1	0	0	0
1	1	1	1	1	0	0	1	1	0	1	0

WAVEFORM MEASUREMENT CONDITIONS SCHEMATIC 13

1. Set Model 1607A controls as follows:

SAMPLE MODE	SINGLE
DISPLAY MODE	START DSPL
WORD	ON
DELAY	OFF
COLUMN BLANKING	FULL CCW
LOGIC	POS
BYTE	4 BIT

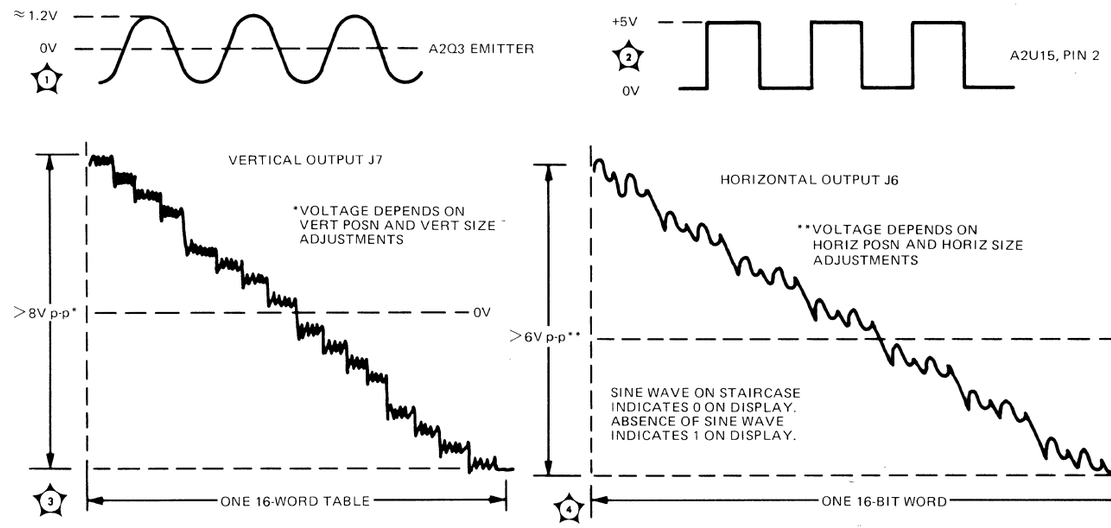

NOTE

See figure 8-14 (Sheet 1 of 2) for Assembly A2 Component Identification.

Figure 8-17. Schematic 13, Clock Generator and Analog Output, P/O Assembly A2 (Sheet 1 of 2)

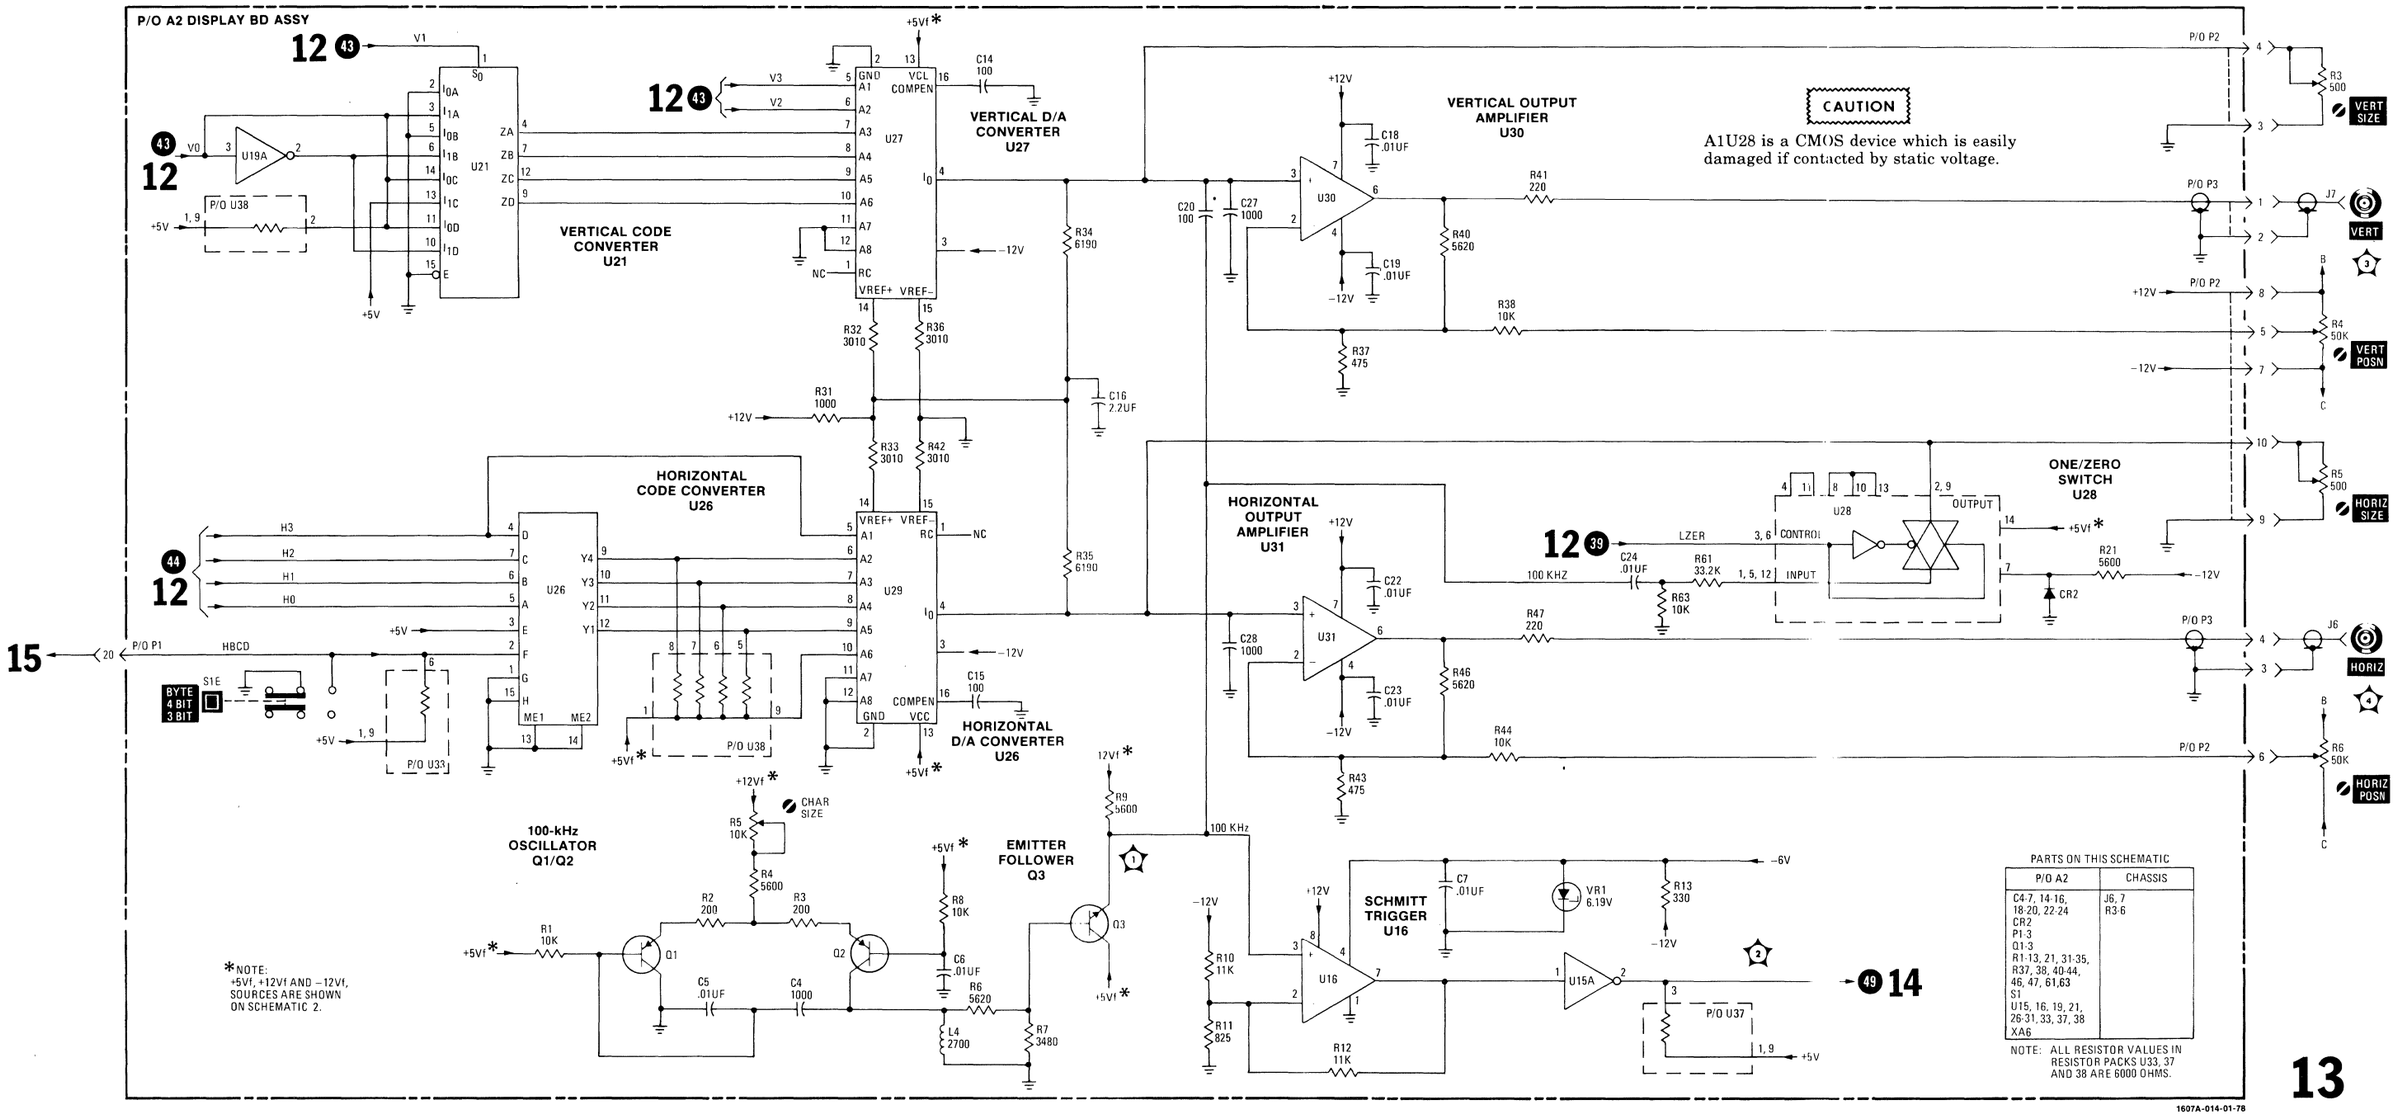
P/O A2 DISPLAY BD ASSY
VERTICAL CODE CONVERTER U21
VERTICAL D/A CONVERTER U27
VERTICAL OUTPUT AMPLIFIER U30
CAUTION
A1U28 is a CMOS device which is easily damaged if contacted by static voltage.
HORIZONTAL CODE CONVERTER U26
HORIZONTAL OUTPUT AMPLIFIER U31
ONE/ZERO SWITCH U28
HORIZONTAL D/A CONVERTER U26
100-kHz OSCILLATOR Q1/Q2
EMITTER FOLLOWER Q3
SCHMITT TRIGGER U16
CHAR SIZE
VERT SIZE
VERT
VERT POSN
HORIZ SIZE
HORIZ
HORIZ POSN
*NOTE: +5Vf, +12Vf AND −12Vf, SOURCES ARE SHOWN ON SCHEMATIC 2.
PARTS ON THIS SCHEMATIC
P/O A2: C4-7, 14-16, 18-20, 22-24, CR2, P1-3, Q1-3, R1-13, 21, 31-35, R37, 38, 40-44, 46, 47, 61,63, S1, U15, 16, 19, 21, 26-31, 33, 37, 38, XA6
CHASSIS: J6, 7, R3-6
NOTE: ALL RESISTOR VALUES IN RESISTOR PACKS U33, 37 AND 38 ARE 6000 OHMS.
1607A-014-01-78

Figure 8-17.
Schematic 13, Clock Generator and Analog Output, P/O Assembly A2 (Sheet 2 of 2)

NOTE

See figure 8-14 (Sheet 1 of 2) for Assembly A2 Component Identification.

Figure 8-18. Schematic 14, Blanking, P/O Assembly A2 (Sheet 1 of 2)

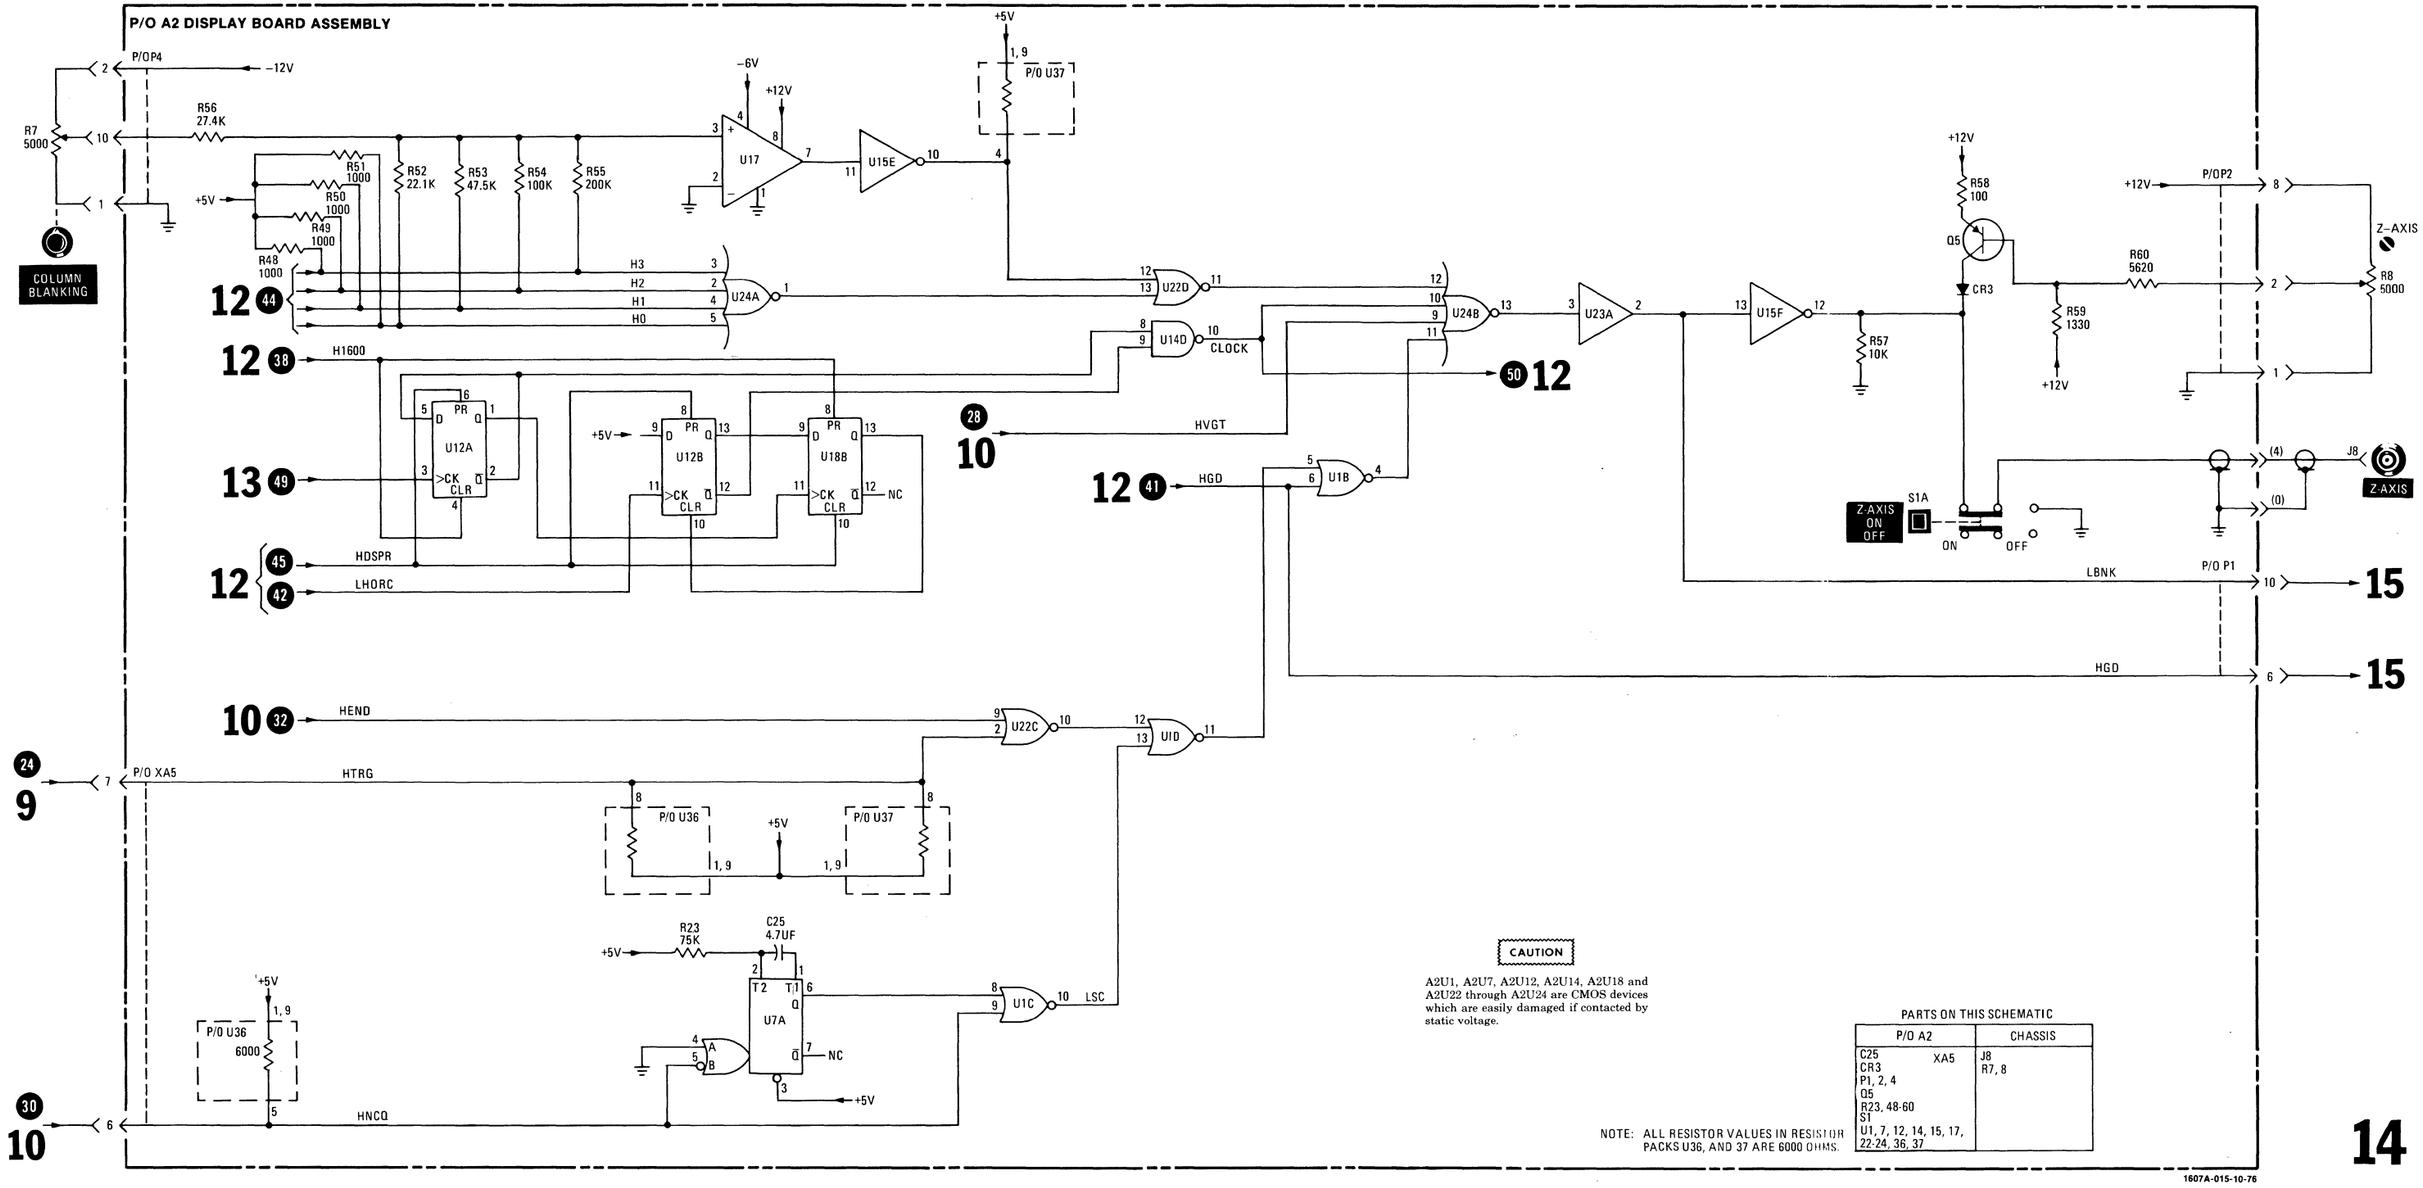

Figure 8-18.
Schematic 14, Blanking, P/O Assembly A2 (Sheet 2 of 2)
8-41

J5 INTERCONNECTION TABLE

J5 PIN NO.	A2 P1 PIN NO.	SIGNAL
6	15	XH0
7	19	XH1
8	17	XH2
9	16	XH3
10	12	XV0
11	11	XV1
12	13	XV2
13	14	XV3
14	7	XDSPD
15	6	HGD
16	5	LXMR
17	4	HXRPR
18	3	HMRXT
19	8	HBR
20	9	LDSPR
21	10	LBNK
22	20	HBCD
24	2	LXPG1
25	2	LXPG2
35	18	L1600
36	1	GND

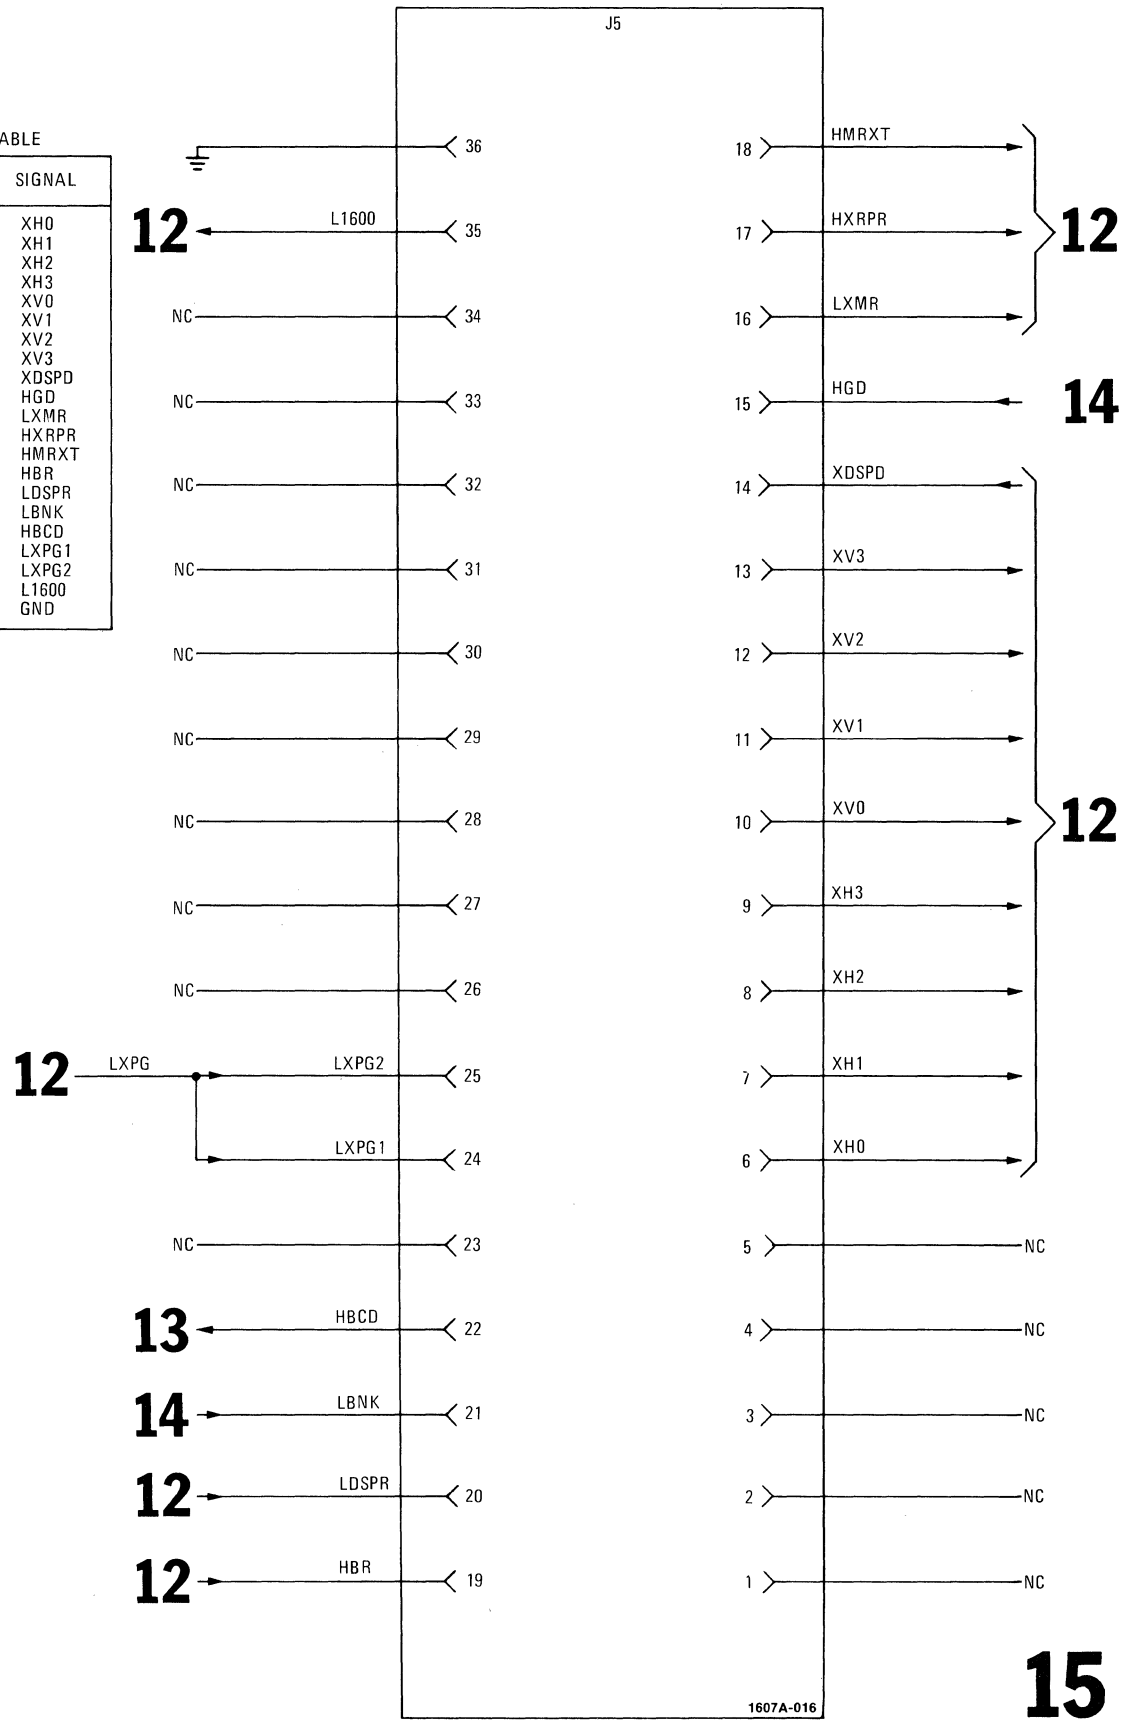

Figure 8-19. Schematic 15, I/O Port J5

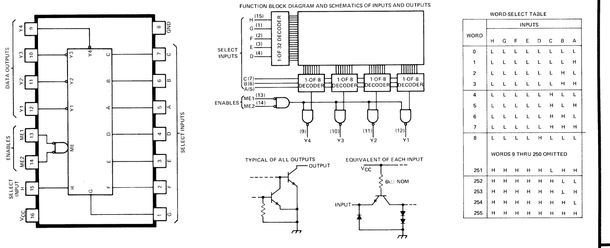

1816-0352

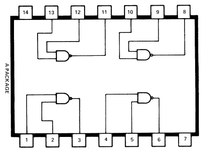

1820-0054
1820-0583
1820-0681

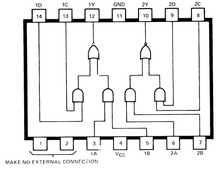

1820-0063

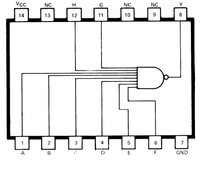

1820-0070
1820-0589

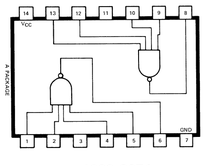

1820-0071
1820-0588
1820-0697

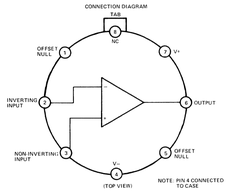

1820-0203

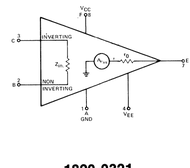

1820-0321

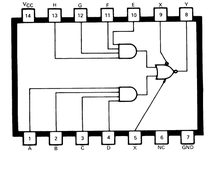

1820-0382

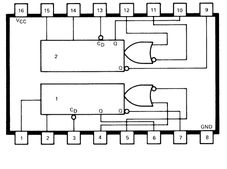

1820-0515
1820-0730

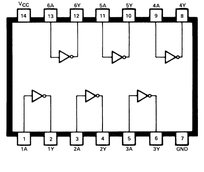

1820-0577

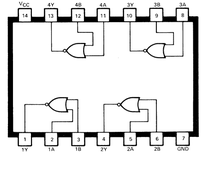

1820-0584

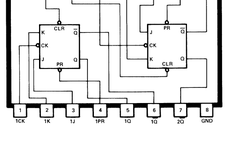

1820-0629

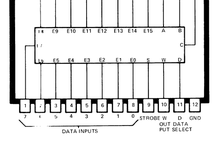

1820-0640



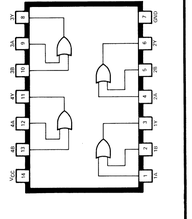

1820-0661

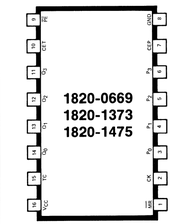

1820-0669
1820-1373
1820-1475

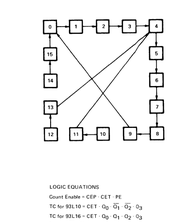
LOGIC EQUATIONS
Count Enable = CEP · CET · PE
TC for 9DL10 = CET · Q0 · Q1 · Q2 · Q3
TC for 9DL16 = CET · Q0 · Q1 · Q2 · Q3
Preset = PE · CP↑ (rising clock edge)
Reset = MR

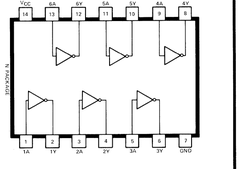

1820-0683

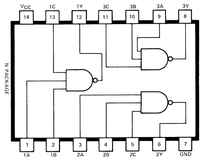

1820-0685
1820-0686

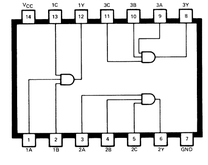

1820-0687

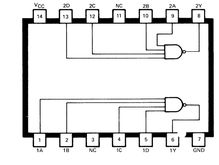

1820-0688

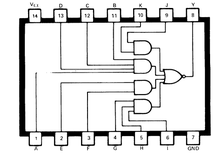

1820-0691
1820-0692

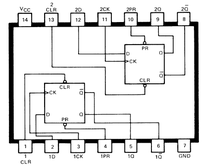

1820-0693

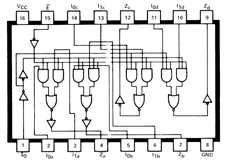

1820-0710

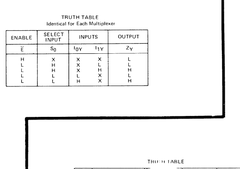

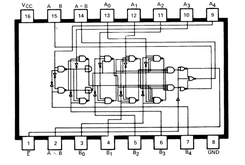

1820-0904

1607A-028

Figure 8-20.
Integrated Circuit (IC) Identification (Sheet 1 of 2)

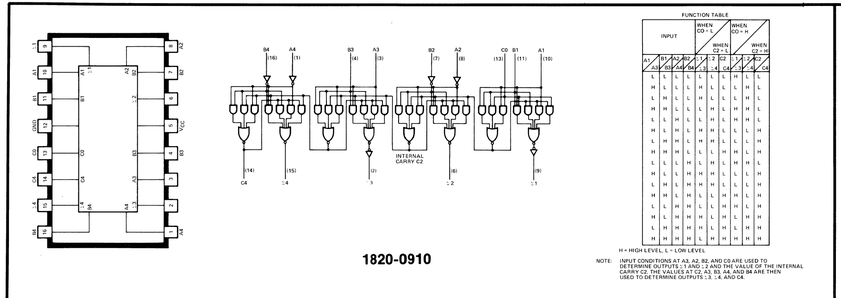
1820-0910
FUNCTION TABLE
H = HIGH LEVEL, L = LOW LEVEL
NOTE: INPUT CONDITIONS AT A1, A2, B2 AND C0 ARE USED TO DETERMINE OUTPUTS C2 AND C4. THE VALUE OF THE INTERNAL CARRY C2 THE VALUES AT C2, A3, B3, A4, AND B4 ARE THEN USED TO DETERMINE OUTPUTS Σ 3, Σ 4, AND C4.

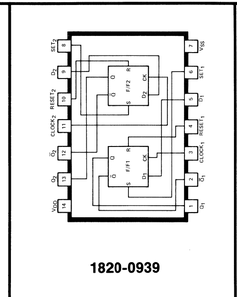

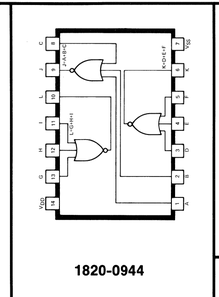

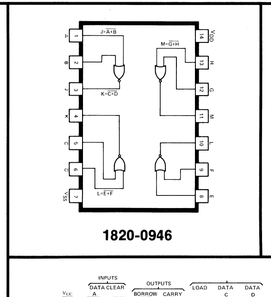

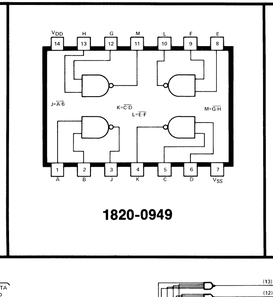

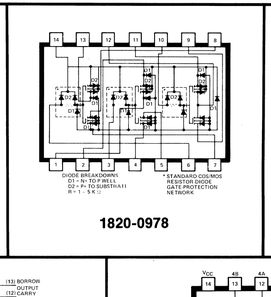

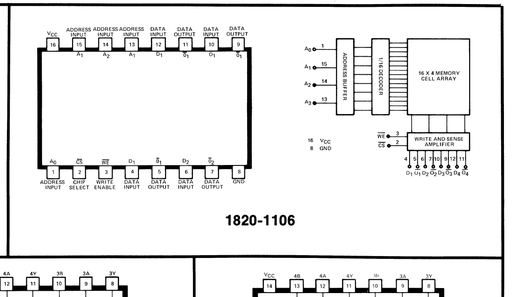

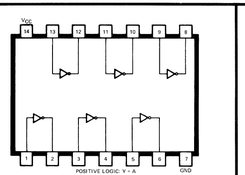

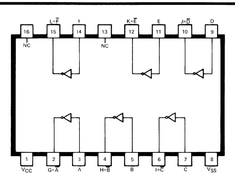

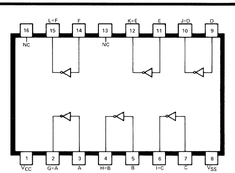

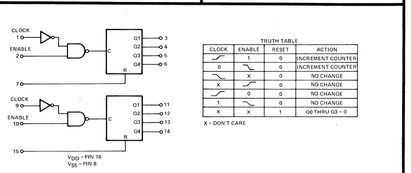

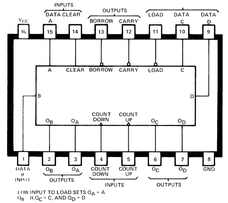

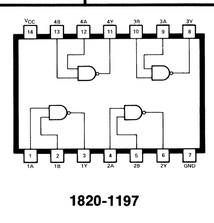

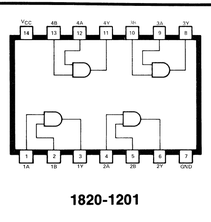

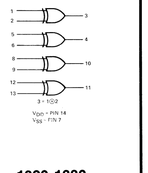

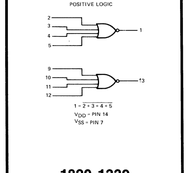

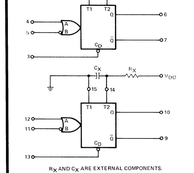

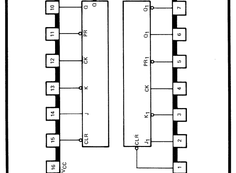

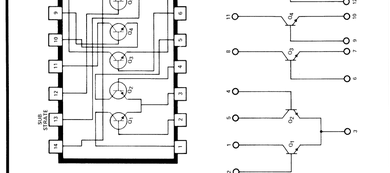

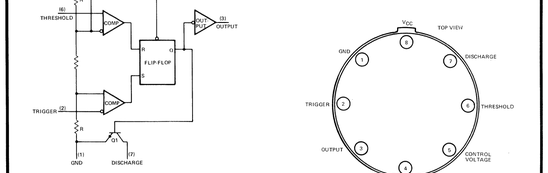

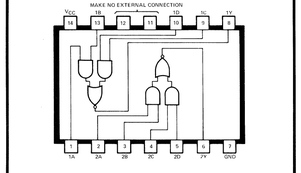

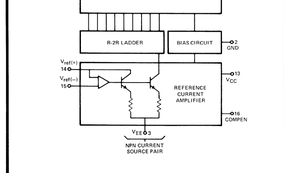

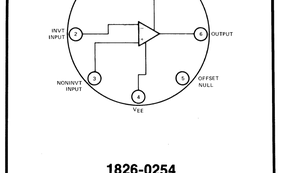

Figure 8-20. Integrated Circuit (IC) Identification (Sheet 2 of 2)

HEWLETT hp PACKARD

SALES & SERVICE OFFICES

AFRICA, ASIA, AUSTRALIA

ANGOLA
Telectra
Empresa Técnica de Equipamentos Eléctricos, S.A.R.L.
R. Barbosa Rodrigues, 42-1°DT.°
Caixa Postal, 6487
Luanda
Tel: 35515/6
Cable: TELECTRA Luanda

AUSTRALIA
Hewlett-Packard Australia Pty. Ltd.
31-41 Joseph Street
Blackburn, Victoria 3130
P.O. Box 36
Doncaster East, Victoria 3109
Tel: 89-6351
Telex: 31-024
Cable: HEWPARD Melbourne

Hewlett-Packard Australia Pty. Ltd.
31 Bridge Street
Pymble
New South Wales, 2073
Tel: 449-6566
Telex: 21561
Cable: HEWPARD Sydney

Hewlett-Packard Australia Pty. Ltd.
153 Greenhill Road
Parkside, S.A., 5063
Tel: 272-5911
Telex: 82536 ADEL
Cable: HEWPARD ADELAID

Hewlett-Packard Australia Pty.Ltd.
141 Stirling Highway
Nedlands, W.A. 6009
Tel: 86-5455
Telex: 93859 PERTH
Cable: HEWPARD PERTH

Hewlett-Packard Australia Pty. Ltd
121 Wollongong Street
Fyshwick, A.C.T. 2609
Tel: 95-2733
Telex: 62650 Canberra
Cable: HEWPARD CANBERRA

Hewlett Packard Australia Pty. Ltd.
5th Floor
Teachers Union Building
495-499 Boundary Street
Spring Hill, 4000 Queensland
Tel: 229-1544
Cable: HEWPARD Brisbane

GUAM
Medical/Pocket Calculators Only
Guam Medical Supply, Inc.
Jay East Building, Room 210
P.O. Box 8947
Tamuning 96911
Tel: 646-4513
Cable: EARMED Guam

HONG KONG
Schmidt & Co.(Hong Kong) Ltd.
P.O. Box 297
Connaught Centre
39th Floor
Connaught Road, Central
Hong Kong
Tel: H-255291-5
Telex: 74766 SCHMC HX
Cable: SCHMIDTCO Hong Kong

INDIA
Blue Star Ltd.
Kasturi Buildings
Jamshedji Tata Rd
Bombay 400 020
Tel: 29 50 21
Telex: 001-2156
Cable BLUEFROST

Blue Star Ltd.
Sahas
414/2 Vir Savarkar Marg
Prabhadevi
Bombay 400 025
Tel: 45 78 87
Telex: 011-4093
Cable: FROSTBLUE

Blue Star Ltd.
Band Box House
Prabhadevi
Bombay 400 025
Tel: 45 73 01
Telex: 011-3751
Cable: BLUESTAR

Blue Star Ltd.
7 Hare Street
P.O. Box 506
Calcutta 700 001
Tel: 23-0131
Telex: 021-7655
Cable: BLUESTAR

Blue Star Ltd.
7th & 8th Floor
Bhandari House
91 Nehru Place
New Delhi 110024
Tel: 634770 & 635166
Telex: 031-2463
Cable: BLUESTAR

Blue Star Ltd.
Blue Star House
11/11A Magarath Road
Bangalore 560 025
Tel: 55668
Telex: 043-430
Cable: BLUESTAR

Blue Star Ltd.
Meeakshi Mandiran
xxx/1678 Mahatma Gandhi Rd.
Cochin 682 016
Tel: 32069,32161,32282
Telex: 0885-514
Cable: BLUESTAR

Blue Star Ltd.
1-1-117/1
Sarojini Devi Road
Secunderabad 500 003
Tel: 70126, 70127
Cable: BLUEFROST
Telex: 015-459

Blue Star Ltd.
2/34 Kodambakkam High Road
Madras 600034
Tel: 82056
Telex: 041-379
Cable: BLUESTAR

INDONESIA
BERCA Indonesia P.T.
P.O. Box 496/Jkt.
JL.Abdul Muis 62
Jakarta
Tel: 40369, 49886,49255,356038
JKT.42895
Cable: BERCACON

BERCA Indonesia P.T.
63 JL. Raya Gubeng
Surabaya
Tel: 44309

ISRAEL
Electronics & Engineering Div. of Motorola Israel Ltd.
17, Kremenetski Street
P.O. Box 25016
Tel-Aviv
Tel: 38973
Telex: 33569
Cable: BASTEL Tel-Aviv

JAPAN
Yokogawa-Hewlett-Packard Ltd.
Ohashi Building
59-1 **Yoyogi** 1-Chome
Shibuya-ku, Tokyo 151
Tel: 03-370-2281/92
Telex: 232-2024YHP MARKET
TOK 23-724
Cable: YHPMARKET

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg., 4th Floor
4-20, Nishinakajima 5-chome
Yodogawa-ku, Osaka-shi
Osaka,532
Tel: 06-304-6021

Yokogawa-Hewlett-Packard Ltd.
Nakamo Building
24 Kami Sasajima-cho
Nakamura-ku, **Nagoya** , 450
Tel: (052) 571-5171

Yokogawa-Hewlett-Packard Ltd.
Tanigawa Building
2-24-1 Tsuruya-cho
Kanagawa-ku
Yokohama, 221
Tel: 045-312-1252
Telex: 382-3204 YHP YOK

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsu Building
105, Chome-1,San-no-maru
Mito, Ibaragi 310
Tel:: 0292-25-7470

Yokogawa-Hewlett-Packard Ltd.
Inoue Building
1348-3, Asahi-cho, 1-chome
Atsugi, Kanagawa 243
Tel: 0462-24-0452

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi
Hackijuni Building
4th Floor
3-4, Tsukuba
Kumagaya, Saitama 360
Tel: 0485-24-6563

KENYA
Technical Engineering Services(E.A.)Ltd.,
P.O. Box 18311
Nairobi
Tel: 557726/556762
Cable: PROTON

Medical Only
International Aeradio(E.A.)Ltd.,
P.O. Box 19012
Nairobi Airport
Nairobi
Tel: 336055/56
Telex: 22201/22301
Cable: INTAERIO Nairobi

KOREA
Samsung Electronics Co., Ltd.
20th Fl. Dongbang Bldg. 250, 2-KA
C.P.O. Box 2775
Taepyung-Ro, Chung-Ku
Seoul
Tel: (23) 6811
Telex: 22575
Cable: ELEKSTAR Seoul

MALAYSIA
Teknik Mutu Sdn. Bhd.
2 Lorong 13/6A
Section 13
Petaling Jaya,**Selangor**
Tel: 54994/54916
Telex: MA 37605

Protel Engineering
P.O. Box 1917
Lot 259, Satok Road
Kuching, **Sarawak**
Tel: 2400
Cable: PROTEL ENG

MOZAMBIQUE
A.N. Goncalves, Lta.
162, 1° Apt. 14 Av. D. Luis
Caixa Postal 107
Lourenco Marques
Tel: 27091, 27114
Telex: 6-203 NEGON Mo
Cable: NEGON

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPACK Wellington

Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
Box 51092
Pakuranga
Tel: 569-651
Cable: HEWPACK,Auckland

Analytical/Medical Only
Medical Supplies N.Z. Ltd.
Scientific Division
79 Carlton Gore Rd., Newmarket
P.O. Box 1234
Auckland
Tel: 75-289
Cable:DENTAL Auckland

Analytical/Medical Only
Medical Supplies N.Z. Ltd.
P.O. Box 1994
147-161 Tory St.
Wellington
Tel: 850-799
Telex: 3858
Cable: DENTAL, Wellington

Analytical/Medical Only
Medical Supplies N.Z. Ltd.
P.O. Box 309
239 Stanmore Road
Christchurch
Tel: 892-019
Cable: DENTAL, Christchurch

Analytical/Medical Only
Medical Supplies N.Z. Ltd.
303 Great King Street
P.O. Box 233
Dunedin
Tel: 88-817
Cable: DENTAL, Dunedin

NIGERIA
The Electronics Instrumentations Ltd.
N6B/770 Oyo Road
Oluseun House
P.M.B. 5402
Ibadan
Tel: 61577
Telex: 31231 TEIL Nigeria
Cable: THETEIL Ibadan

The Electronics Instrumentations Ltd.
144 Agege Motor Road, Mushin
P.O. Box 6645
Lagos
Cable: THETEIL Lagos

PAKISTAN
Mushko & Company, Ltd.
Oosman Chambers
Abdullah Haroon Road
Karachi-3
Tel: 511027, 512927
Telex: 2894
Cable: COOPERATOR Karachi

Mushko & Company, Ltd.
38B, Satellite Town
Rawalpindi
Tel: 41924
Cable: FEMUS Rawalpindi

PHILIPPINES
The Online Advanced Systems Corporation
Rico House
Amorsolo cor. Herrera Str.
Legaspi Village, Makati
Metro **Manila**
Tel: 85-35-81, 85-34-91
Telex: 3274 ONLINE

RHODESIA
Field Technical Sales
45 Kelvin Road North
P.O. Box 3458
Salisbury
Tel: 705231 (5 lines)
Telex: RH 4122

SINGAPORE
Hewlett-Packard Singapore (Pte.) Ltd.
1150 Depot Road
Alexandra P.O. Box 58
Singapore 4
Tel: 270-2355
Telex: HPSG RS 21486
Cable: HEWPACK, Singapore

SOUTH AFRICA
Hewlett-Packard South Africa (Pty.), Ltd.
Private Bag Wendywood
Sandton, Transvaal 2144
Hewlett-Packard Centre
Daphne Street, Wendywood,
Sandton, Transvaal 2144
Tel: 802-10408
Telex: 8-4782
Cable: HEWPACK JOHANNESBURG

Service Department
Hewlett-Packard South Africa (Pty.), Ltd.
P.O. Box 39325
Gramley, Sandton, 2018
451 Wynberg Extension 3,
Sandton, 2001
Tel: 636-8188/9
Telex: 8-2391

Hewlett-Packard South Africa (Pty.), Ltd.
P.O. Box 120
Howard Place, Cape Province, 7450
Pine Park Centre, Forest Drive,
Pinelands, Cape Province, 7405
Tel: 53-7955 thu 9
Telex: 57-0006

Service Department
Hewlett-Packard South Africa (Pty.), Ltd.
P.O. Box 37099
Overport, Durban 4067
Braby House
641 Ridge Road
Durban, 4001
Tel: 88-7478
Telex: 6-7954

TAIWAN
Hewlett-Packard Far East Ltd.,
Taiwan Branch
39 Chung Hsiao West Road
Sec. 1, 7th Floor
Taipei
Tel: 3819160-4
Cable: HEWPACK TAIPEI

Hewlett-Packard Far East Ltd.
Taiwan Branch
68-2, Chung Cheng 3rd. Road
Kaohsiung
Tel: (07) 242318-Kaohsiung

Analytical Only
San Kwang Instruments Co., Ltd.,
No. 20, Yung Sui Road
Taipei
Tel: 3715171-4 (5 lines)
Telex: 22894 SANKWANG
Cable: SANKWANG TAIPEI

TANZANIA
Medical Only
International Aeradio (E.A.), Ltd.
P.O. Box 861
Dar es Salaam
Tel: 21251 Ext. 265
Telex: 41030

THAILAND
UNIMESA Co., Ltd.
Elcom Research Building
2538 Sukumvit Ave.
Bangkok
Tel: 3932387, 3930338
Cable: UNIMESA Bangkok

UGANDA
Medical Only
International Aeradio(E.A.), Ltd.,
P.O. Box 2577
Kampala
Tel: 54388
Cable: INTAERIO Kampala

ZAMBIA
R.J. Tilbury (Zambia) Ltd.
P.O. Box 2792
Lusaka
Tel: 73793
Cable: ARJAYTEE, Lusaka

OTHER AREAS NOT LISTED, CONTACT:
Hewlett-Packard Intercontinental
3200 Hillview Ave.
Palo Alto, California 94304
Tel. (415) 493-1501
TWX: 910-373-1267
Cable: HEWPACK Palo Alto

CANADA

ALBERTA
Hewlett-Packard (Canada) Ltd.
11620A 168th Street
EdmontonT5M 3T9
Tel: (403) 452-3670
TWX: 610-831-2431

Hewlett-Packard (Canada) Ltd.
210,7220 Fisher St. S.E.
Calgary T2H 2H8
Tel: (403) 253-2713
Twx: 610-821-6141

BRITISH COLUMBIA
Hewlett-Packard (Canada) Ltd.
837 E. Cordova Street
Vancouver V6A 3R2
Tel: (604) 254-0531
TWX: 610-922-5059

MANITOBA
Hewlett-Packard (Canada) Ltd.
513 Century St.
St. James
Winnipeg R3H 0L8
Tel: (204) 786-7581
TWX: 610-671-3531

NOVA SCOTIA
Hewlett-Packard (Canada) Ltd.
800 Windmill Road
Dartmouth B3B 1L1
Tel: (902) 469-7820
TWX: 610-271-4482 HFX

ONTARIO
Hewlett-Packard (Canada) Ltd.
1020 Morrison Dr.
Ottawa K2H 8K7
Tel: (613) 820-6483
TWX: 610-563-1636

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
Mississauga L4V 1M8
Tel: (416) 678-9430
TWX: 610-492-4246

QUEBEC
Hewlett-Packard (Canada) Ltd.
275 Hymus Blvd.
Pointe Claire H9R 1G7
Tel: (514) 697-4232
TWX: 610-422-3022
TLX: 05-821521 HPCL

FOR CANADIAN AREAS NOT LISTED:
Contact Hewlett-Packard (Canada) Ltd. in Mississauga.

CENTRAL AND SOUTH AMERICA

ARGENTINA
Hewlett-Packard Argentina S.A.
Av. Leandro N. Alem 822 - 12°
1001**Buenos Aires**
Tel: 31-6063,4,5,6 and 7
Telex: 122443 AR CIGY
Cable: HEWPACK ARG

BOLIVIA
Casa Kavlin S.A.
Calle Potosí 1130
P.O. Box 500
La Paz
Tel: 41530,53221
Telex: CWC BX 5298,ITT 3560082
Cable: KAVLIN

BRAZIL
Hewlett-Packard do Brasil I.e.C. Ltda.
Avenida Rio Negro, 980
Alphaville
06400**Barueri** SP
Tel: 429-3222

Hewlett-Packard do Brasil I.e.C. Ltda.
Rua Padre Chagas, 32
90000-**Pôrto Alegre**-RS
Tel: (0512) 22-2998, 22-5621
Cable: HEWPACK Pôrto Alegre

Hewlett-Packard do Brasil I.E.C. Ltda.
Rua Siqueira Campos, 53
Copacabana
20000-**Rio de Janeiro**
Tel: 257-80-94-DDD (021)
Telex: 391-212-I905 HEWP-BR
Cable: HEWPACK
Rio de Janeiro

CHILE
Calcagni y Metcalfe Ltda.
Alameda 580-Of. 807
Casilla 2118
Santiago, 1
Tel: 398613
Telex: 3520001 CALMET
Cable: CALMET Santiago

COLOMBIA
Instrumentación
Henrik A. Langebaek & Kier S.A.
Carrera 7 No. 48-75
Apartado Aéreo 6287
Bogotá, D.E.
Tel: 69-88-77
Cable: AARIS Bogotá
Telex: 044-400

COSTA RICA
Cientifica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159
San Jose
Tel: 24-36-20, 24-08-19
Telex: 2367 GALGUR CR
Cable: GALGUR

ECUADOR
Calculators Only
Computadoras y Equipos Electrónicos
P.O. Box 6423 CCI
Eloy Alfaro #1824,3°Piso
Quito
Tel: 453482
Telex: 02-2113 Sagita Ed
Cable: Sagita-Quito

EL SALVADOR
Instrumentacion y Procesamiento Electronico de el Salvador
Bulevar de los Heroes 11-48
San Salvador
Tel: 252787

GUATEMALA
IPESA
Avenida La Reforma 3-48,
Zona 9
Guatemala City
Tel: 63627, 64786
Telex: 4192 Teletro Gu

MEXICO
Hewlett-Packard Mexicana, S.A. de C.V.
Av. Periférico Sur No. 6501
Tepepan, Xochimilco
Mexico 23, D.F.
Tel: 905-676-4600

Hewlett-Packard Mexicana, S.A. de C.V.
Ave. Constitución No. 2184
Monterrey, N.L.
Tel: 48-71-32, 48-71-84
Telex: 038-410

NICARAGUA
Roberto Terán G.
Apartado Postal 689
Edificio Terán
Managua
Tel: 25114, 23412,23454
Cable: ROTERAN Managua

PANAMA
Electrónico Balboa, S.A.
P.O. Box 4929
Calle Samuel Lewis
Cuidad de Panama
Tel: 64-2700
Telex: 3483103 Curunda, Canal Zone
Cable: ELECTRON Panama

PERU
Compañía Electro Médica S.A.
Los Flamencos 145
San Isidro Casilla 1030
Lima 1
Tel: 41-4325
Cable: ELMED Lima

PUERTO RICO
Hewlett-Packard Inter-Americas
Puerto Rico Branch Office
Calle 272,
No. 203 Urb. Country Club
Carolina 00924
Tel: (809) 762-7255
Telex: 345 0514

URUGUAY
Pablo Ferrando S.A.
Comercial e Industrial
Avenida Italia 2877
Casilla de Correo 370
Montevideo
Tel: 40-3102
Cable: RADIUM Montevideo

VENEZUELA
Hewlett-Packard de Venezuela C.A.
P.O. Box 50933
Caracas 105
Los Ruices Norte
3a Transversal
Edificio Segre
Caracas 107
Tel: 35-00-11 (20 lines)
Telex: 25146 HEWPACK
Cable: HEWPACK Caracas

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard
Inter-Americas
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 493-1501
TWX: 910-373-1260
Cable: HEWPACK Palo Alto
Telex: 034-8300, 034-8493

EUROPE, NORTH AFRICA AND MIDDLE EAST

AUSTRIA
Hewlett-Packard Ges.m.b.H.
Handelskai 52
P.O. box 7
A-1205 **Vienna**
Tel: (0222) 351621 to 27
cable: HEWPAK Vienna
Telex: 75923 hewpak a

BELGIUM
Hewlett-Packard Benelux
S.A./N.V.
Avenue de Col-Vert, 1,
(Groenkraaglaan)
B-1170 **Brussels**
Tel: (02) 672 22 40
Cable: PALOBEN Brussels
Telex: 23 494 paloben bru

CYPRUS
Kypronics
19, Gregorios & Xenopoulos Rd.
P.O. Box 1152
CY-**Nicosia**
Tel: 45628/29
Cable: KYPRONICS PANDEHIS
Telex: 3018

CZECHOSLOVAKIA
Vyvojova a Provozni Zakladna
Vyzkumnych Ustavu v Bechovicich
CSSR-25097 **Bechovice u Prahy**
Tel: 89 93 41
Telex: 121333

Institute of Medical Bionics
Vyskumny Ustav Lekarskej Bioniky
Jedlova 6
CS-88346 **Bratislava-Kramare**
Tel: 44-551/45-541

DDR
Entwicklungslabor der TU Dresden
Forschungsinstitut Meinsberg
DDR-7305
Waldheim/Meinsberg
Tel: 37 667
Telex: 112145

Export Contact AG Zuerich
Guenther Forgber
Schlegelstrasse 15
1040 **Berlin**
Tel: 42-74-12
Telex: 111889

DENMARK
Hewlett-packard A/S
Datavej 52
DK-3460 **Birkerod**
Tel: (02) 81 66 40
Cable: HEWPACK AS
Telex: 37409 hpas dk

Hewlett-Packard A/S
Navervej 1
DK-8600 **Silkeborg**
Tel: (06) 82 71 66
Telex: 37409 hpas dk
Cable: HEWPACK AS

FINLAND
Hewlett-Packard OY
Nahkahousuntie 5
P.O. Box 6
SF-00211 **Helsinki** 21
Tel: (90) 6923031
Cable: HEWPACKOY Helsinki
Telex: 12-1563 HEWPA SF

FRANCE
Hewlett-Packard France
Quartier de Courtaboeuf
Boite Postale No. 6
F-91401 **Orsay** Cédex
Tel: (1) 907 78 25
Cable: HEWPACK Orsay
Telex: 600048

Hewlett-Packard France
Agency Régionale
"Le Saquin"
Chemin des Mouilles
B.P. 162
F-69130 **Ecully**
Tel: (78) 33 81 25.
Cable: HEWPACK Eculy
Telex: 31 06 17

Hewlett-Packard France
Agence Régionale
Péricentre de la Cépière
Chemin de la Cépière, 20
F-31300 **Toulouse-Le Mirail**
Tel:(61) 40 11 12
Cable: HEWPACK 51957
Telex: 510957

Hewlett-Packard France
Agence Régionale
Aéroport principal de
Marseille-Marignane
F-13721 **Marignane**
Tel: (91) 89 12 36
Cable: HEWPACK MARGN
Telex: 410770

Hewlett-Packard France
Agence Régionale
63, Avenue de Rochester
B.P. 1124
F-35014 **Rennes** Cédex
Tel: (99) 36 33 21
Cable: HEWPACK 74912
Telex: 740912

Hewlett-Packard France
Agence Régionale
74, Allée de la Robertsau
F-67000 **Strasbourg**
Tel: (88) 35 23 20/21
Telex: 890141
Cable: HEWPACK STRBG

Hewlett-Packard France
Agence Régionale
Centre Vauban
201, rue Colbert
Entrée A2
F-59000 **Lille**
Tel: (20) 51 44 14
Telex: 820744

Hewlett-Packard France
Centre d' Affaires Paris-Nord
Bâtiment Ampére
Rue de La Commune de Paris
B.P. 300
F-93153 **Le Blanc Mesnil Cédex**
Tel: (01) 931 88 50

GERMAN FEDERAL REPUBLIC
Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Bernerstrasse 117
Postfach 560 140
D-6000 **Frankfurt** 56
Tel: (0611) 50 04-1
Cable: HEWPACKSA Frankfurt
Tel: (0611) 50 04-1
Cable: HEWPACKSA Frankfurt
Telex: 04 13249 hpftmd

Hewlett-Packard GmbH
Technisches Buero Böblingen
Herrenbergerstrasse 110
D-7030 **Böblingen**, Württemberg
Tel: (07031) 667-1
Cable: HEPAK Böblingen
Telex: 07265739 bbn

Hewlett-Packard GmbH
Technisches Buero Düsseldorf
Emanuel-Leutze-Str.1 (Seestern)
D-4000 **Düsseldorf** 11
Tel: (0211) 59711
Telex: 085/86 533 hpdd d

Hewlett-Packard GmbH
Technisches Buero Hamburg
Wendenstrasse 23
D-2000 **Hamburg** 1
Tel: (040) 24 13 93
Cable: HEWPACKSA Hamburg
Telex: 21 63 032 hphh d

Hewlett-Packard GmbH
Technisches Buero Hannover
Am Grossmarkt 6
D-3000 **Hannover 91**
Tel: (0511) 46 60 01
Telex: 092 3259

Hewlett-Packard GmbH
Werk Groetzingen
Ohnstrasse 6
D-7500 **Karlsruke 41**
Tel: (0721) 69 40 06
Telex: 07-825707

Hewlett-Packard GmbH
Technisches Buero Nuremberg
Neumeyer Str. 90
D-8500 **Nuremberg**
Tel: (0911) 56 30 83/85
Telex: 0623 860

Hewlett-Packard GmbH
Technisches Buero München
Unterhachinger Strasse 28
ISAR Center
D-8012 **Ottobrunn**
Tel: (089) 601 30 61/7
Cable: HEWPACKSA München
Telex: 0524985

Hewlett-Packard GmbH
Technisches Buero Berlin
Keith Strasse 2-4
D-1000 **Berlin** 30
Tel: (030) 24 90 86
Telex: 18 3405 hpbln d

GREECE
Kostas Karayannis
68, Omirou Street
GR-**Athens** 133
Tel: 3237731
Cable: RAKAR Athens
Telex: 21 59 62 rkar gr

Analytical Only
"INTECO" G. Papathanassiou & Co.
Marni 17
GR - **Athens** 103
Tel: 522 1915
Cable: INTEKNIKA Athens
Telex: 21 5329 INTE GR

Medical Only
Technomed Hellas Ltd.
52,Skoouta Street
GR - **Athens** 135
Tel: 362 6972, 363 3830
Cable:ETALAK athens
Telex: 21-4693 ETAL GR

HUNGARY
MTA
Müszerügyi és Méréstechnikai
Szolgalata
Lenin Krt. 67
1391 Budapest Vi
Tel: 42 03 38
Telex: 22 51 14

ICELAND
Medical Only
Elding Trading Company Inc.
Hafnarhvoli - Tryggvatotu
IS-**Reykjavik**
Tel: 1 58 20
Cable: ELDING Reykjavik

IRAN
Hewlett-Packard Iran Ltd.
No. 13, Fourteenth St.
Miremad Avenue
P.O. Box 41/2419
IR-**Tehran**
Tel: 851082-7
Telex: 21 25 74 khrm ir

IRAQ
Hewlett-Packard Trading Co.
4/1/8 Mansoor City
Baghdad
Tel: 5517827
Telex: 2455 hepairaq ik
Cable: HEWPACDAD,
Baghdad Iraq

IRELAND
Hewlett-Packard Ltd.
King Street Lane
GB-**Winnersh**,Wokingham
Berks, RG11 5AR
Tel: (0734) 78 47 74
Telex: 847178/848179

ITALY
Hewlett-Packard Italiana S.p.A.
Via Amerigo Vespucci 2
Casella postale 3645
I-20100 **Milano**
Tel. (2) 6251 (10 lines)
Cable: HEWPACKIT Milano
Telex: 32046

Hewlett-Packard Italiana S.p.A.
Via Pietro Maroncelli 40
(ang. Via Visentin)
I-35100 **Padova**
Tel: (49) 66 48 88
Telex: 41612 Hewpacki

Medical only
Hewlett-Packard Italiana S.p.A.
Via d'Aghiardi, 7
I-56100 **Pisa**
Tel: (050) 2 32 04
Telex: 32046 via Milano

Hewlett-Packard Italiana S.p.A.
Via G. Armellini 10
I-00143 **Roma**
Tel. (06) 54 69 61
Telex: 61514
Cable: HEWPACKIT Roma

Hewlett-Packard Italiana S.p.A.
Corso Giovanni Lanza
I-1031 **Torino**
Tel: (011) 682245/659308

Medical/Calculators Only
Hewlett-Packard Italiana S.p.A.
Via Principe Nicola 43 G/C
I-95126 **Catania**
Tel:(095) 37 05 04

Hewlett-Packard Italiana S.p.A.
Via Amerigo Vespucci, 9
I-80142 **Napoli**
Tel: (081) 33 77 11

Hewlett-Packard Italiana S.p.A.
Via E. Masi, 9/B
I-40137 **Bologna**
Tel: (051) 30 78 87

KUWAIT
Al-Khaldiya Trading &
Contracting Co.
P.O. Box 830-Safat
Kuwait
Tel: 424910-411726
Telex: 2481 areeg kt
Cable: VISCOUNT

LUXEMBURG
Hewlett-Packard Benelux
S.A./N.V.
Avenue du Col-Vert, 1,
(Groenkraaglaan)
B-1170 **Brussels**
Tel: (02) 672 22 40
Cable: PALOBEN Brussels
Telex: 23 494

MOROCCO
Gerep
190, Blvd. Brahim Roudani
Casablanca
Tel: 25-16-76/25-90-99
Cable: Gerep-Casa
Telex: 23739

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartlaan 121
P.O. Box 667
NL-1134 **Amstelveen**
Tel: (020) 47 20 21
Cable: PALOBEN Amsterdam
Telex: 13 216 hepa nl

NORWAY
Hewlett-Packard Norge A/S
Nesveien 13
Box 149
N-1344 **Hasium**
Tel: (02) 53 83 60
Telex: 16621 hpnas n

POLAND
Biuro Informacji Technicznej
Hewlett-Packard
U1 Stawki 2, 6P
00-950 **Warszawa**
Tel: 395962/395187
Telex: 81 24 53 hepa pl

UNIPAN
Zakiad Doswiadczalny
Budowy Aparatury Naukowej
U1. Krajowej Rady Narodowej 51/55
00-800 **Warszawa**
Tel: 36190
Telex: 81 46 48

Zaklady Naprawcze Sprzetu
Medycznego
Plac Komuny Paryskiej 6
90-007 **Lódz**
Tel: 334-41, 337-83

PORTUGAL
Telectra-Empresa Técnica de
Equipamentos Eléctricos S.a.r.l.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
P-**Lisbon** 1
Tel: (19) 68 60 72
Cable: TELECTRA Lisbon
Telex: 12598

Medical only
Mundinter
Intercambio Mundial de Comércio
S.a.r.l.
Av.A.A.de Aguiar 138
P.O. Box 2761
P - **Lisbon**
Tel:-(19) 53 21 31/7
Cable: INTERCAMBIO Lisbon

RUMANIA
Hewlett-Packard Reprezentanta
Bd.N. Balcescu 16
Bucharest
Tel: I58023/138885
Telex: 10440

I.I.R.U.C.
Intreprinderea Pentru
Intretinerea
Si Repararea Utilajelor de Calcul
B-dul prof. Dimitrie Pompei 6
Bucharest-Sectorul 2
Tel: 12 64 30
Telex: 11716

SAUDI ARABIA
Modern Electronic Establishment
King Abdul Aziz str.(Head office)
P.O. Box 1228
Jeddah
Tel: 31173-332201
Cable: ELECTRA

P.O. Box 2728 (Service center)
Riyadh
Tel: 62596-66232
Cable: RAOUFCO

SPAIN
Hewlett-Packard Española, S.A.
Jerez, Calle 3
E-**Madrid** 16
Tel.(1) 458 26 00 (10 lines)
Telex: 23515 hpe

Hewlett-Packard Española, S.A.
Milanesado 21-23
E-**Barcelona** 17
Tel: (3) 203 6200 (5 lines)
Telex: 52603 hpbe e

Hewlett-Packard Española, S.A.
Av Ramón y Cajal, 1
Edificio Sevilla, planta 9',
E-**Seville** 5
Tel: 64 44 54/58

Hewlett-Packard Española S.A.
Edificio Albia II 7° B
E-**Bilbao**-1
Tel: 23 83 06/23 82 06

Calculators Only
Hewlett-Packard Española S.A.
Gran Via Fernando El Católico, 67
E-**Valencia**-8
Tel: 326 67 28/326 85 55

SWEDEN
Hewlett-Packard Sverige AB
Enighetsvägen 1-3
Fack
S-161 20 **Bromma** 20
Tel: (08) 730 05 50
Cable: MEASUREMENTS
Stockholm
Telex: 10721

Hewlett-Packard Sverige AB
Ostra Vintergatan 22
S-702 40 **Orebro**
Tel: (019) 14 07 20

Hewlett-Packard Sverige AB
Frötallsgatan 30
S-421 32 **Västra Frölunda**
Tel: (031) 49 09 50
Telex: 10721 Via Bromma Office

SWITZERLAND
Hewlett-Packard (Schweiz) AG
Zürcherstrasse 20
P.O. Box 307
CH-8952 **Schlieren-Zurich**
Tel: (01) 730 52 40/730 18 21
Cable: HPAG CH
Telex: 53933 hpag ch

Hewlett-Packard (schweiz) AG
Château Bloc 19
CH-1219 **Le Lignon-Geneva**
Tel: (022) 96 03 22
Cable: HEWPACKAG Geneva
Telex: 27 333 hpag ch

SYRIA
Medical/Calculator only
Sawah & Co
Place Azmé
B.P. 2308
SYR-**Damascus**
Tel: 16367, 19697, 14268
Cable: SAWAH, Damascus

TURKEY
Telekom Engineering Bureau
P.O. Box 437
Beyoglu
TR-**Istanbul**
Tel: 49 40 40
Cable: TELEMATION Istanbul
Telex: 23609

Medical only
E.M.A.
Muhendislik Kollektif Sirketi
Adakale Sokak 41/6
TR-**Ankara**
Tel: 175622

Analytical only
Yilmaz Ozyurek
Milli Mudafaa Cad No. 16/6
Kizilay
TR-**Ankara**
Tel: 25 03 09
Telex: 42576 ozek tr

UNITED KINGDOM
Hewlett-Packard Ltd.
King Street Lane
GB-**Winnersh**, Wokingham
Berks, RG11 5AR
Tel: (0734) 78 47 74
Cable: Hewpie London
Telex:847178/9

Hewlett-Packard Ltd.
Trafalgar House,
Navigation Road
Altrincham
Cheshire WA14 1NU
Tel: (061) 928 6422
Telex: 668068

Hewlett-Packard Ltd.
Lygon Court
Hereward Rise
Dudley Road
Halesowen,
West Midlands B62 8SD
Tel: (021) 550 9911
Telex: 339105

Hewlett-Packard Ltd.
Wedge House
799, London Road
GB-**Thornton Heath**
Surrey CR4 6XL
Tel: (01) 684 0103/8
Telex: 946825

Hewlett-Packard Ltd.
c/o Makro
South Service wholesale Centre
Wear Industrial Estate
Washington
GB-**New Town**, County Durham
Tel: Washington 464001 ext. 57/58

Hewlett-Packard Ltd
10, Wesley St.
GB-**Castleford**
West Yorkshire WF10 1AE
Tel (09775) 50402
Telex: 557355

Hewlett-Packard Ltd
1, Wallace Way
GB-**Hitchin**
Herts
Tel: (0462) 52824/56704
Telex: 825981

Hewlet-Packard Ltd
2C. Avonbeg Industrial Estate
Long Mile Road
Dublin 12
Tel. Dublin 509458
Telex: 30439

USSR
Hewlett-Packard
Representative Office USSR
Pokrovsky Boulevard 4/17-KW 12
Moscow 101000
Tel:294-2024
Telex: 7825 hewpak su

YUGOSLAVIA
Iskra-standard/Hewlett-Packard
Miklosiceva 38/VII
61000 **Ljubljana**
Telb; 31 58 79/32 16 74
Telex: 31583

SOCIALIST COUNTRIES NOT SHOWN PLEASE CONTACT:
Hewlett-Packard Ges.m.b.H
P.O. Box 7
A-1205 **Vienna**, Austria
Tel: (0222) 35 16 21 to 27
Cable: HEWPAK Vienna
Telex: 75923 hewpak a

MEDITERRANEAN AND MIDDLE EAST COUNTRIES NOT SHOWN PLEASE CONTACT:
Hewlett-Packard S.A.
Mediterranean and Middle
East Operations
35, Kolokotroni Street
Platia Kefallariou
GR-Kifissia-**Athens**, Greece
Tel: 8080337/359/429
Telex: 21-6588
Cable: HEWPACKSA Athens

FOR OTHER AREAS NOT LISTED CONTACT
Hewlett-Packard S.A.
7, rue du Bois-du-Lan
P.O. Box
CH-1217 Meyrin 2 - **Geneva**
Switzerland
Tel: (022) 82 70 00
Cable: HEWPACKSA Geneva
Telex: 2 24 86

UNITED STATES

ALABAMA
8290 Whitesburg Dr., S.E.
P.O. Box 4207
Huntsville 35802
Tel: (205) 881-4591

Medical Only
228 W. Valley Ave.,
Room 220
Birmingham 35209
Tel. (205) 942-2081/2

ARIZONA
2336 E. Magnolia St.
Phoenix 85034
Tel: (602) 244-1361

2424 East Aragon Rd.
Tucson 85706
Tel: (602) 294-3148

***ARKANSAS**
Medical Service Only
P.O. Box 5646
Brady Station
Little Rock 72215
Tel. (501) 376-1844

CALIFORNIA
1430 East Orangethorpe Ave.
Fullerton 92631
Tel: (714) 870-1000

3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2671

5400 West Rosecrans Blvd.
P.O. Box 92105
World Way Postal Center
Los Angeles 90009
Tel. (213) 970-7500

***Los Angeles**
Tel: (213) 776-7500

3003 Scott Boulevard
Santa Clara 95050
Tel: (408) 249-7000
TWX 910-338-0518

***Ridgecrest**
Tel: (714) 446-6165

646 W. North Market Blvd
Sacramento 95834
Tel: (916) 929-7222

9606 Aero Drive
P.O. Box 23333
San Diego 92123
Tel. (714) 279-3200

COLORADO
5600 South Ulster Parkway
Englewood 80110
Tel. (303) 771-3455

CONNECTICUT
12 Lunar Drive
New Haven 06525
Tel: (203) 389-6551
TWX: 710-465-2029

FLORIDA
P.O. Box 24210
2806 W. Oakland Park Blvd.
Ft. Lauderdale 33311
Tel: (305) 731-2020

***Jacksonville**
Medical Service only
Tel: (904) 398-0663

P.O. Box 13910
6177 Lake Ellenor Dr.
Orlando 32809
Tel: (305) 859-2900

P.O. Box 12826
Pensacola 32575
Tel: (904) 476-8422

GEORGIA
P.O. Box 105005
Atlanta 30348
Tel: (404) 955-1500
TWX 810-766-4890

Medical Service Only
***Augusta** 30903
Tel: (404) 736-0592

P.O. Box 2103
Warner Robins 31098
Tel: (912) 922-0449

HAWAII
2875 So. King Street
Honolulu 96814
Tel: (808) 955-4455
Telex: 723-705

ILLINOIS
5201 Tollview Dr.
Rolling meadows 60008
Tel: (312) 255-9800
TWX: 910-687-2260

INDIANA
7301 North Shadeland Ave.
Indianapolis46250
Tel: (317)842-1000
TWX: 810-260-1797

IOWA
2415 Heinz Road
Iowa City 52240
Tel: (319) 338-9466

KENTUCKY
Medical Only
Atkinson Square
3901 Atkinson Dr.
Suite 407 Atkinson Square
Louisville 40218
Tel: (502) 456-1573

LOUISIANA
P.O. Box 840
3229-39 Williams Boulevard
Kenner 70063
Tel. (504) 443-6201

MARYLAND
6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
TWX: 710-862-9157

2 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX: 710-828-9684

MASSACHUSETTS
32 Hartwell Ave.
Lexington 02173
Tel: (617) 861-8960
TWX: 710-326-6904

MICHIGAN
23855 Research Drive
Farmington Hills 48024
Tel: (313) 476-6400

724 West Centre Ave.
Kalamazoo 49002
Tel: (606) 323-8362

MINNESOTA
2400 N. Prior Ave.
St. Paul 55113
Tel: (612) 636-0700

MISSISSIPPI
***Jackson**
Medical Service only
Tel: (601) 982-9363

MISSOURI
11131 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087

1024 Executive Parkway
St. Louis 63141
Tel: (314) 878-0200

NEBRASKA
Medical Only
7171 Mercy Road
Suite 110
Omaha 68106
Tel: (402) 392-0948

NEW JERSEY
W. 120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

Crystal Brook Professional
Building
Eatontown 07724
Tel:(201) 542-1384

NEW MEXICO
P.O. Box 11634
Station E
11300 Lomas Blvd., N.E.
Albuquerque 87123
Tel: (505) 292-1330
TWX: 910-989-1185

156 Wyatt Drive
Las Cruces 88001
Tel: (505) 526-2484
TWX: 910-9983-0550

NEW YORK
6 Automation Lane
Computer Park
Albany 12205
Tel: (518) 458-1550

201 South Avenue
Poughkeepsie 12601
Tel: (914) 454-7330
TWX: 510-253-5981

650 Perinton Hill Office Park
Fairport 14450
Tel: (716) 223-9950

5858 East Molloy Road
Syracuse 13211
Tel: (315) 454-2486
TWX: 710-541-0482

1 Crossways Park West
Woodbury 11797
Tel: (516) 921-0300
TWX: 710-990-4951

NORTH CAROLINA
P.O. Box 5188
1923 North Main Street
High Point 27262
Tel: (919) 885-8101

OHIO
16500 Sprague Road
Cleveland 44130
Tel: (216) 243-7300
TWX: 810-423-9430

330 Progress Rd.
Dayton 45449
Tel: (513) 859-8202

1041 Kingsmill Parkway
Columbus 43229
Tel: (614) 436-1041

OKLAHOMA
P.O. Box 32008
Oklahoma City 73132
Tel: (405) 721-0200

OREGON
17890 SW Lower Boones
Ferry Road
Tualatin 97062
Tel: (503) 620-3350

PENNSYLVANIA
111 Zeta Drive
Pittsburgh 15238
Tel: (412) 782-0400

1021 8th Avenue
King of Prussia Industrial Park
King of Prussia 19406
Tel: (215) 265-7000
TWX: 510-660-2670

SOUTH CAROLINA
6941-0 N. Trenholm Road
Columbia 29260
Tel: (803) 782-6493

TENNESSEE
***Knoxville**
Medical Service only
Tel: (615) 523-5022

3027 Vanguard Dr.
Director's Plaza
Memphis 38131
Tel: (901) 346-8370

Nashville
Medical Service only
Tel: (615) 244-5448

TEXAS
P.O. Box 1270
201 E. Arapaho Rd.
Richardson 75080
Tel: (214) 231-6101

10535 Harwin Dr.
Houston 77036
Tel: (713) 776-6400

205 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-8241

UTAH
2160 South 3270 West Street
Salt Lake City 84119
Tel: (801) 972-4711

VIRGINIA
P.O. Box 12778
No. 7 Koger Exec. Center
Suite 212
Norfolk 23502
Tel:(804) 461-4025/6

P.O.Box 9669
2914 Hungary Springs Road
Richmond 23228
Tel: (804) 285-3431

WASHINGTON
Bellefield Office Pk
1203-114th Ave. S.E.
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2446

***WEST VIRGINIA**
Medical/Analytical Only
Charleston
Tel: (304) 345-1640

WISCONSIN
9004 West Lincoln Ave.
West Allis 53227
Tel: (414) 541-0550

FOR U.S. AREAS NOT LISTED:
Contact the regional office
nearest you: Atlanta, Georgia...
North Hollywood, California...
Rockville, Maryland...Rolling Meadows,
Illinois Their complete
addresses are listed above.

***Service Only** 1/78

01607-90905

PRINTED IN U.S.A.